

**MAXIMA**®

ONLY FOR REAL PROFESSIONALS




GENEMAX 7000 IS

User Manual

SERIAL NUMBER M

INVERTER GENERATOR Owner's Manual

GENEMAX 7000 IS

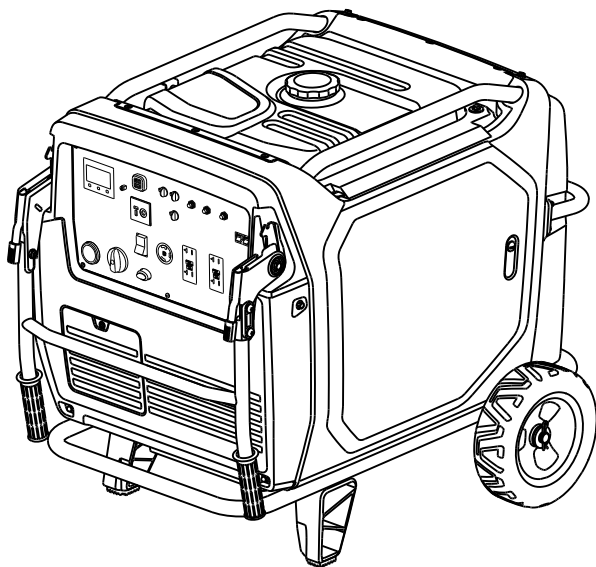

Tips—read this manual carefully before operating this generator.

Save this operating manual properly and carry it with the generator for the convenience of emergency query in the future. This manual constitutes one permanent element of the generator. This manual shall be provided along with the generator set when you lend or resell it.

Relevant information and technical specifications defined in this manual take effect when printing is approved, with the contents based on the equipment in production at time of publication. Manufacturer reserves the rights to modify and improve any parts described in the text without prior notice.

Original instruction

Contents

1	Foreward	07
2	Safety Information	08-13
3	Control Function	14-25
4	Pre-operation	26-27
5	Operation	28-32
6	Application Range	33
7	Maintenance	34-44
8	Accessories Installation	45
9	Transporting	47
10	Storage	48
11	Troubleshooting	49
12	Parameters	50
13	Electrical Schematic Diagram	51-54

1

Foreward

Inverter Generator Owner's Manual

Foreward


Thank you for purchasing a generator. We recommend that the operator read this manual carefully before use this generator, and fully comprehend all requirements and operating procedure concerning the generator. In case of any questions about this manual, contact the recent authorized dealer for startup, operation, maintenance program and so on. The technician will teach you how to use the generator in a correct and safe manner. We also recommend that the operator consult startup and operating procedure of this generator when buying it.

Safety precautions

This generator will work in a safe, effective and reliable way only when it is kept, operated and maintained properly. Before operation or maintenance of the generator, the operator should:

- Know well and strictly observe local laws and regulations.
- Read and observe all safety warnings in this manual and on the device.
- Let your family get familiar with all safety warnings in this manual.

It is impossible for manufacturers to predict all hazardous circumstances that may occur, for this reason, warnings in this manual and caution signs on the generator set may not cover all hazardous circumstances. If we do not give extra cautions for operating procedures, methods or techniques, operate the generator in such ways that helps guarantee personal safety, make sure no damage to generator set arises there from.

To make sure safe operation, Please read carefully three vital safety warnings in this manual and on the generator, preceded by a safety alert symbol  including:

DANGER

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

WARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

CAUTION

You CAN be HURT if you don't follow instructions.

NOTICE


Your generator or other property could be damaged if you don't follow instructions.

2

Safety Information

Inverter Generator Owner's Manual


Safety Information

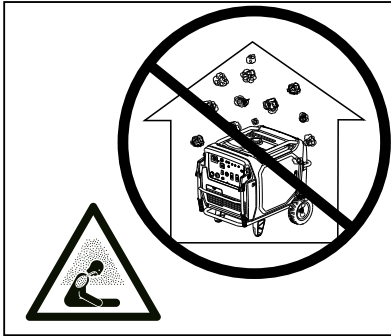**⚠ DANGER**

Do not use it indoors.

**⚠ DANGER**

Keep the machine clean and avoid spilt combustibles including gasoline on it.

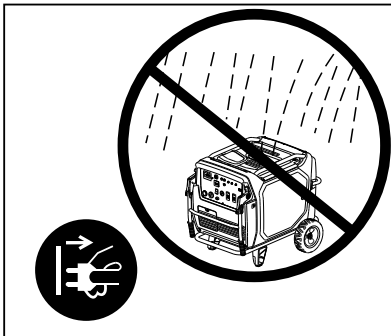**⚠ WARNING**

Do not use it in a wet condition.

2


Safety Information

Inverter Generator Owner's Manual




⚠ WARNING

Turn the generator "OFF" when add fuel.

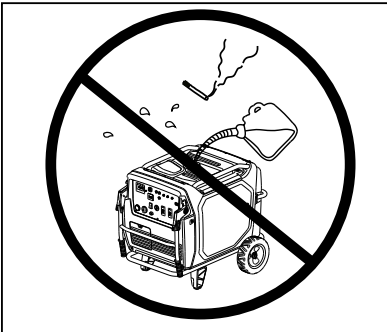

⚠ WARNING

Don't add fuel near the flammable thing or cigarette.

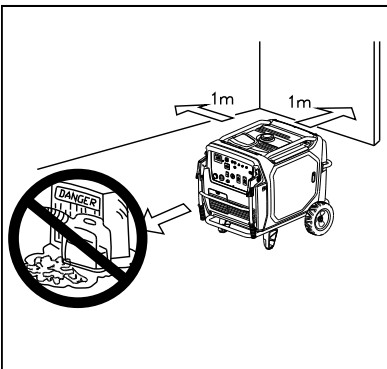


⚠ WARNING

Keep children and pets away from the area of operation.
Do not place flammable objects close to the outlet valve when generator operation.
Keep it at least 1m away from inflammables.

2


Safety Information

Inverter Generator Owner's Manual

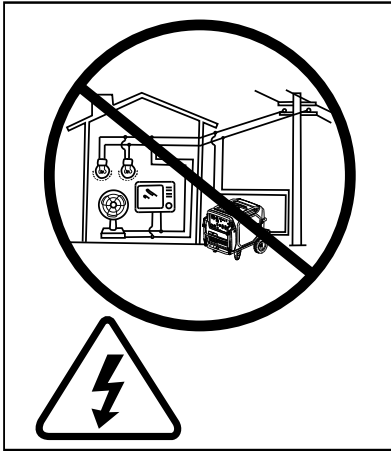

⚠ WARNING

Do not connect to a home power system.

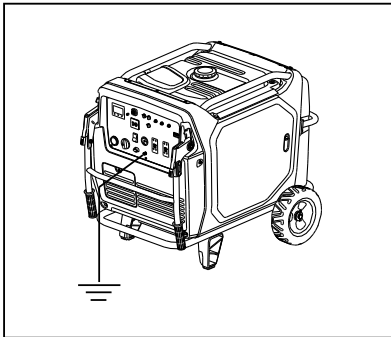


⚠ WARNING

It must realize safe grounding.

NOTICE

Use the ground wire with enough electric flux.

Ground wire diameter : 0.12mm/A
EX:10A-1.2mm

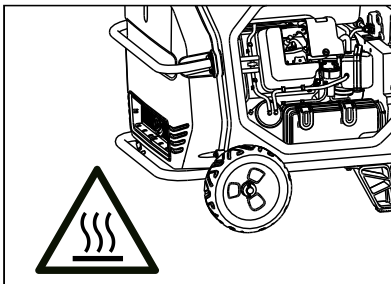

⚠ WARNING

The generator surface has high temperature, avoid scalding.
Pay attention to the warnings on the generating set.

2


Safety Information

Inverter Generator Owner's Manual

Connection to a home power supply

If the generator is to be connected to a home power supply as a standby, connection shall be performed by a professional electrician or by another person with proficient electrical skill.

When the loads are connected to the generator, please carefully check whether electrical connections are safe and reliable. Any improper connection may cause damage to the generator, or cause a fire.

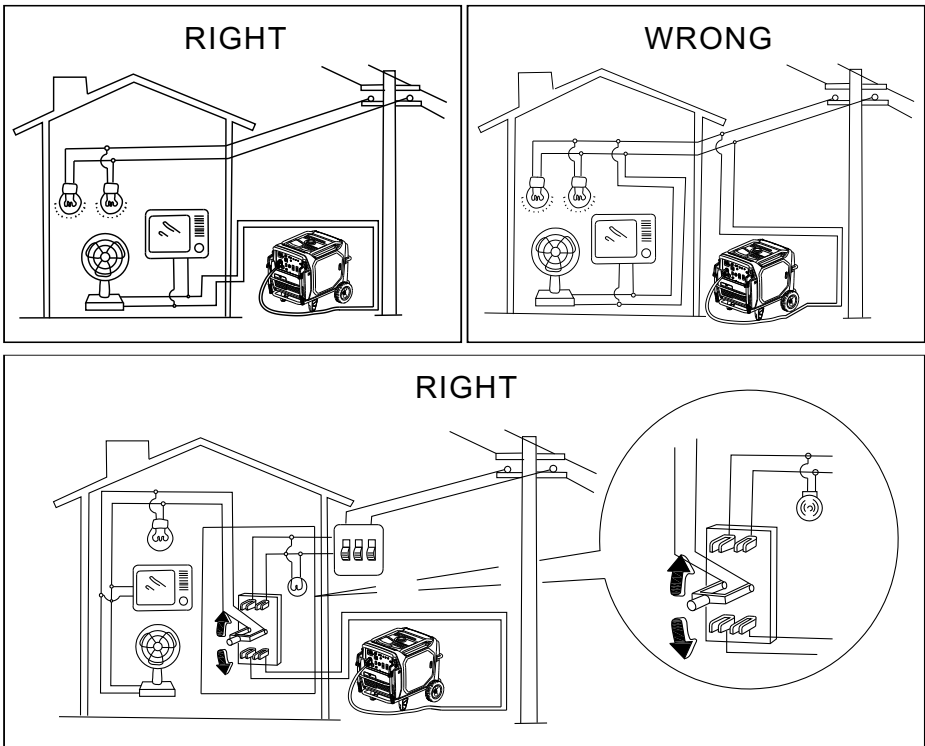

Others



Make sure Inverter ducted fan, muffler louver and the inverter bottom side cooling well and without chips, mud and water come in. it may damage the generator, inverter or alternator if the cooling vent blocked. Do not mix the generator with other stuff if moving, storing or running the unit, It may cause generator damage or bring property safety issue when the inverter in leakage.

2

Safety Information

Inverter Generator Owner's Manual


There is the warning label on the machine to remind you of the safety regulations.

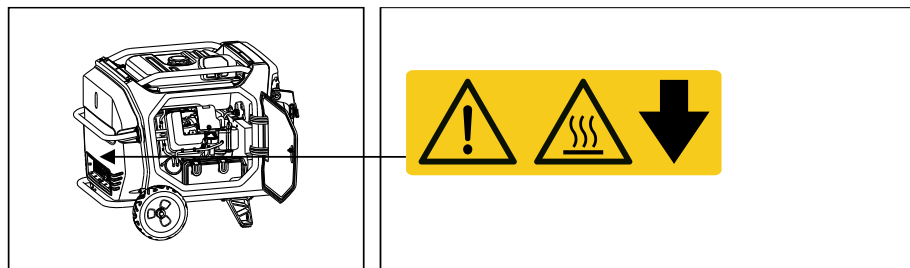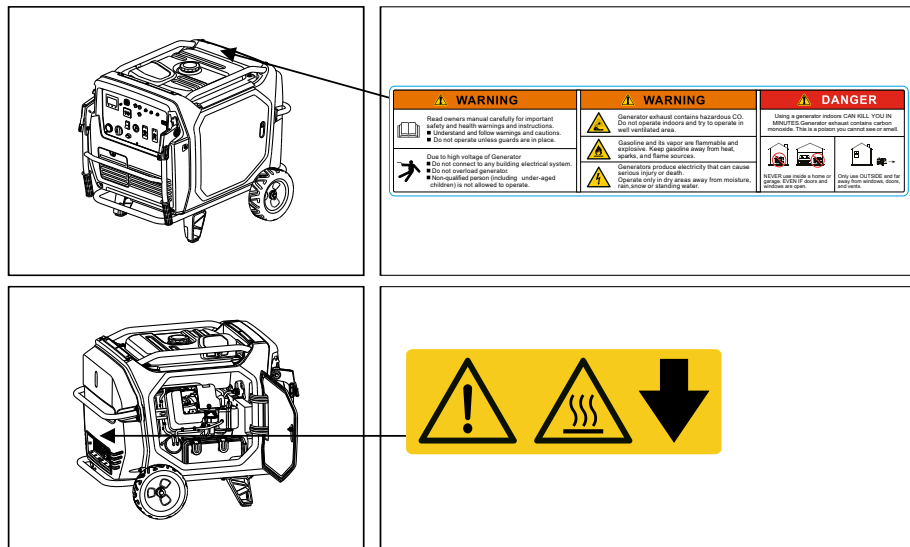

Some parts of equipment will generate high temperature during operation, which will scald skin.



Read the safety instructions before using the generator.

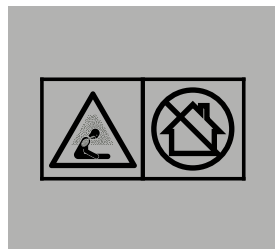

Gases such as carbon monoxide (colourless and odourless gas) are produced during operation which may lead to suffocation. Only use the generator in well-ventilated areas.

2

Safety Information

Inverter Generator Owner's Manual



Only fill the generator in well-ventilated areas and keep it away from open flames, sparks and cigarettes. Spilled fuel should be soaked up immediately.

Switch off the engine and let it cool down before filling the generator. Fuel is easily flammable and may even explode under certain circumstances.



Warning! Dangerous voltages are present when the generator is in operation.

Generator must always be switched off before performing maintenance works.



Wear ear protection when operating the generator.



Disconnect all devices from the connections before performing maintenance works, before leaving the device and after switching it off.

WARNING

- A warning reminding the user that he shall conform to regulations of electrical safety applicable to the place where the generating sets are used.
- A warning on the requirements and the precautions to be respected by the user in the case of re-supply by generating sets of an installation, depending on existing protective measures in this installation and applicable regulations.



3

Control Function

Inverter Generator Owner's Manual

Control Function

DESCRIPTION

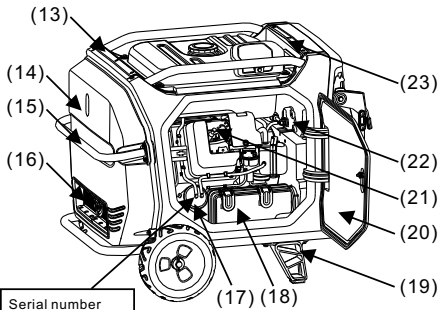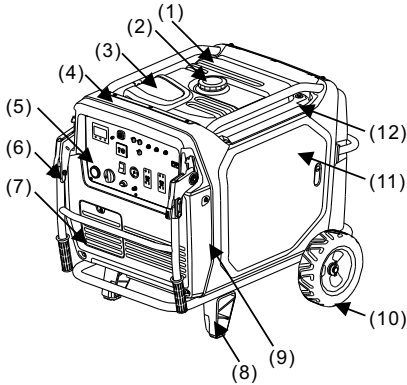

Serial number
T***YYMM*****
The YYMM is year
and month of
manufactured.

- (1) Fuel tank
- (2) Fuel tank cap
- (3) Cover plate of oil level sensor
- (4) Frame components
- (5) Control panel
- (6) Folding handle
- (7) Battery maintenance cover
- (8) Frame shock absorber bracket (right)
- (9) Panel bed
- (10) Support wheel parts
- (11) Right maintenance door
- (12) Seal ring (fuel tank)
- (13) Tank hood (back)
- (14) Frame hood
- (15) Handle
- (16) Silencer spark collector
- (17) Carbon tank
- (18) Air filter
- (19) Frame shock absorber bracket (left)
- (20) Left maintenance door
- (21) Spark plug
- (22) Combination switch
- (23) Tank hood (front)


3

Control Function


Inverter Generator Owner's Manual

CONTROL PANEL

120V/240V

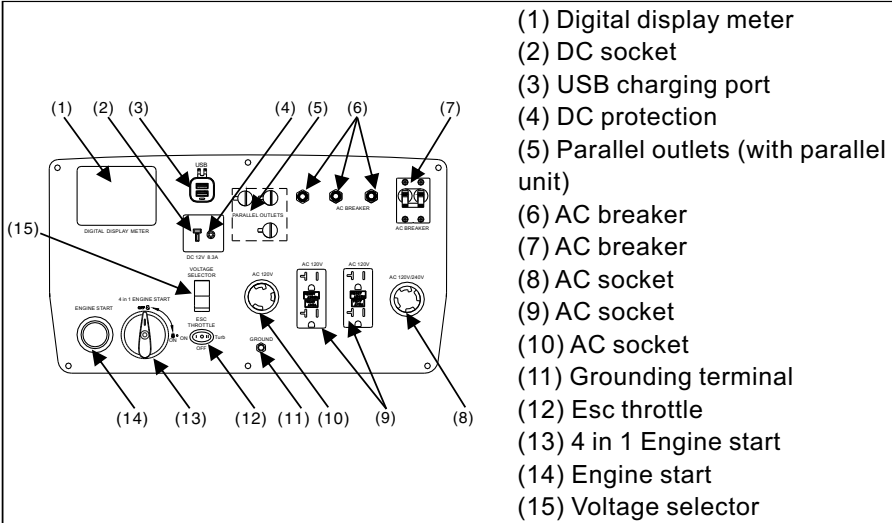

120V/240V(Parallel socket with 50A)

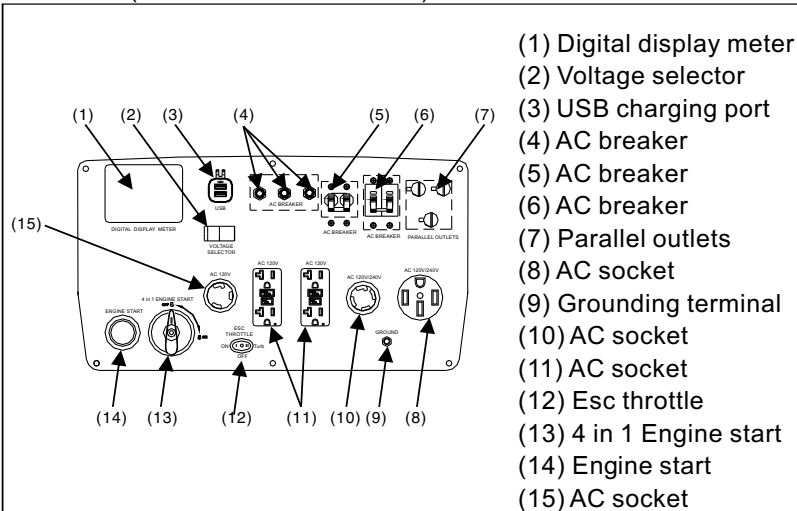


3


Control Function

Inverter Generator Owner's Manual

100V/200V

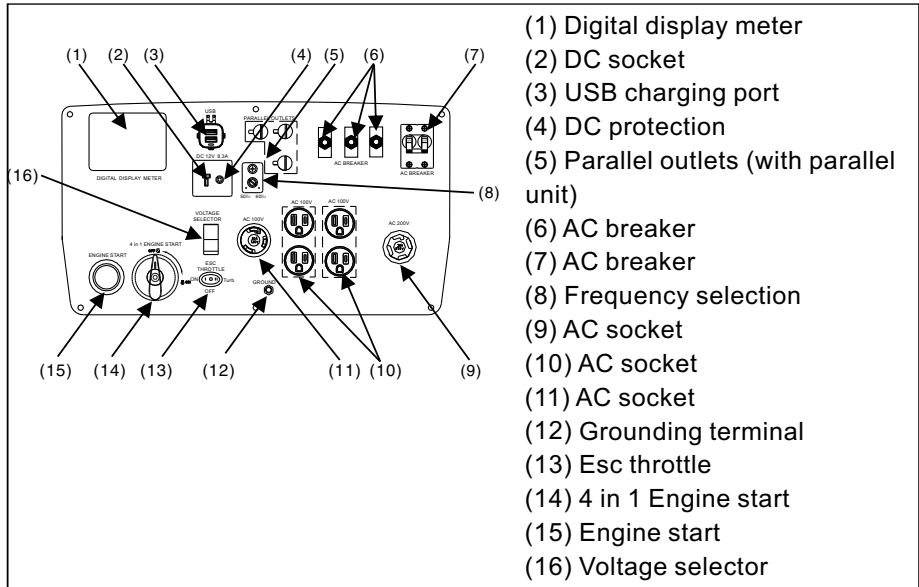

230V

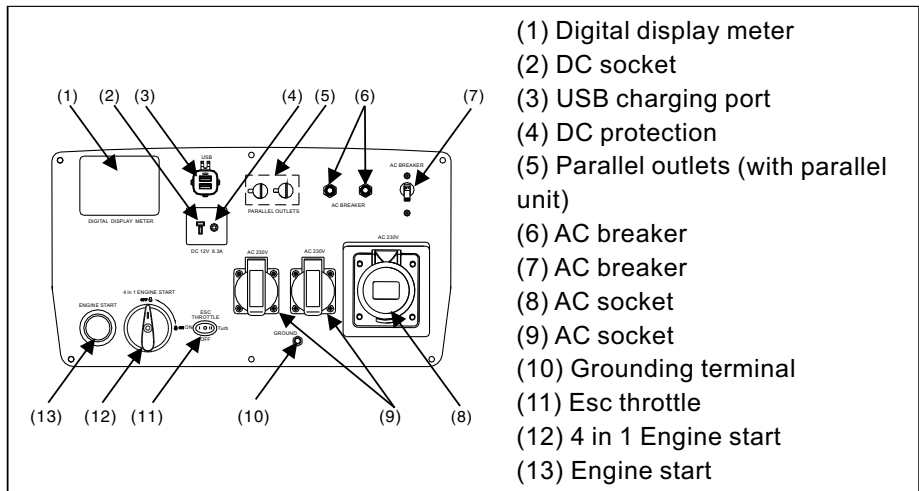


3

Control Function

Inverter Generator Owner's Manual


CONTROL FUNCTION

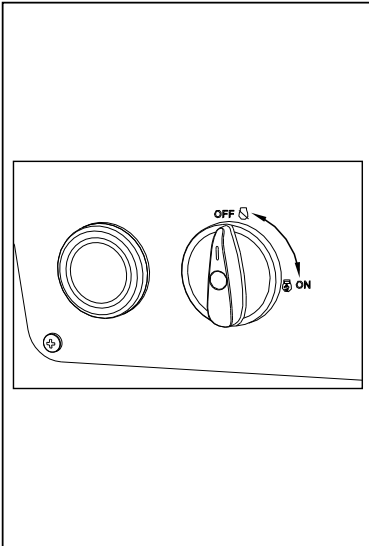

4 in 1 switch knob


This switch controls ignition system, fuel system, power system, and solenoid valve.

- ① Off -- stop the engine: Ignition system is in the closed state, fuel switch is off, solenoid valve switch is off, and power system switch is off; the engine can't be started normally.
- ② On -- start/run the engine: Ignition system is in the working state, fuel switch is on, solenoid valve switch is on, and power system switch is on. The engine can be started with one key by hand, and the Blue tooth APP can be started and run normally.

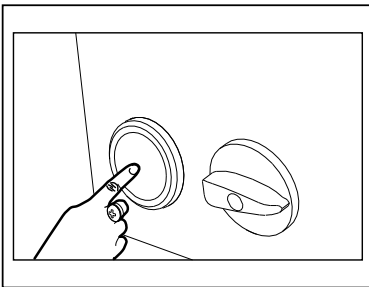

One-key start switch

When the combination switch is placed in the "On" position, operate the start switch button to start the engine.

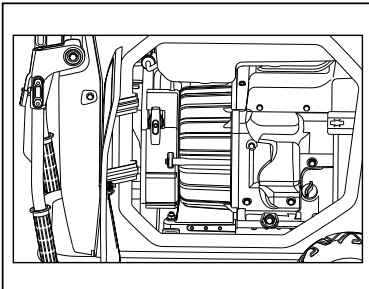

Recoil starter


When the battery voltage is too low or power loss is serious, and the power fails to start normally, pull the recoil starter to start the engine. .

3

Control Function

Inverter Generator Owner's Manual

Esc throttle

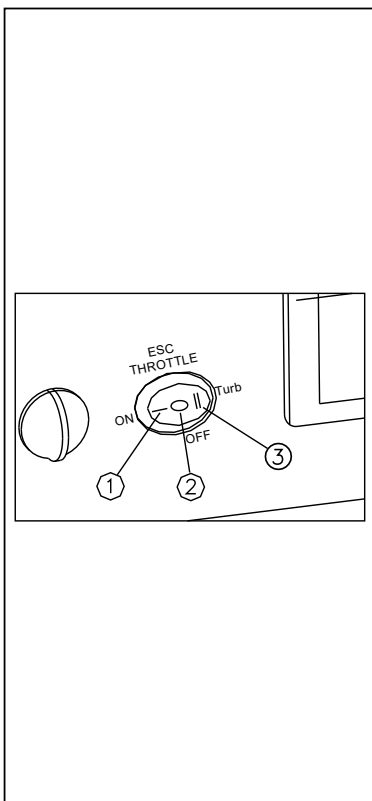

① “ON”

When the ESC switch is turned to “ON”, the economy control unit controls the engine speed according to the connected load. The results are better fuel consumption and less noise.

② “OFF”


When the energy saving switch is placed on the “Off” position, under the condition of load less than 4.5kW, the engine runs at the rated speed (3,100r/min).

③ “TURB”

When the energy saving switch is placed on the position of “TURB”, the engine runs at the rated speed (3,600r/min) regardless of whether the load is connected or not.

Tip: When the following devices are applied, such as air compressor and submersible pump, ESC must be turned off and the energy saving switch must be placed on the position of “TURB”.

Digital display meter

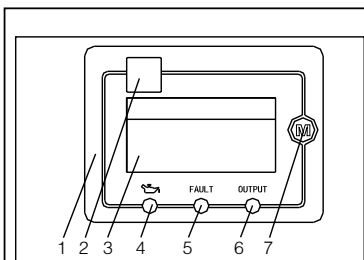

- (1) Multimeter
- (2) QR Code for Bluetooth Connection
- (3) Liquid crystal display
- (4) Oil warning light
- (5) Overload indicator light
- (6) AC pilot light
- (7) Operating key

1. When the combination switch is placed on the “Off” position (when the engine is not started):

Operate key 7, only the content of 19 is displayed on the screen interface (after each operation of key 7, the display will disappear automatically after maintaining 5s.).


2. When the engine is not started, but the combination switch is on the “On” position:

3


Control Function

Inverter Generator Owner's Manual


Digital display meter

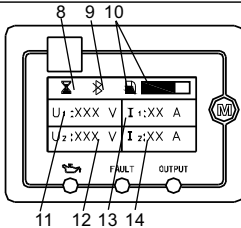


(8) Operation identification (Normal operation)
 (9) Bluetooth logo (10) Fuel quantity
 (11) AC Voltage (12) AC Voltage
 (13) AC Current (14) AC Current

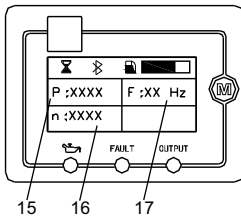

(15) Power (16) Speed (17) Frequency

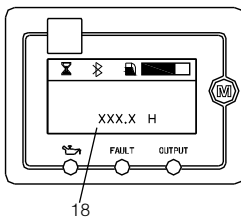

(18) Current run time

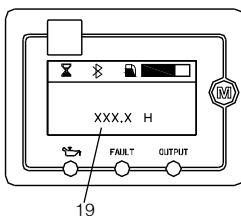

(19) Cumulative running time

a. No content is displayed on the screen interface.

Notes: If the battery has been installed, this interface indicates that the battery voltage is less than 8V (the battery needs to be charged), one-key start and Blue tooth APP start cannot be carried out, but the engine can be started by recoil starter. If there is no display after replacing the battery with new one, please contact the designated dealer.

b. The screen interface displays the contents of 21-22 and 23 (2 display interfaces in total).

Notes: The interface with the display contents of 21-22 indicates that the battery voltage is more than 10V, one-key start and Blue tooth APP start can be carried out.

c. The screen interface displays the contents of 24-26 and 23 (2 display interfaces in total).

Notes: The interface with the display content of 24-26 indicates that the battery voltage is more than 8V but less than 10V, one-key start and Blue tooth APP start cannot be carried out, but the engine can be started by recoil starter.

Prompt: The interface with the display content of 23 can be used for connecting the Mac address of Blue tooth device.


The display interface can be switched by operation of key 7, and the contents are displayed in turn.

When the above contents are displayed in each display interface, the contents of 27, 9 (displayed with Blue tooth, not displayed without Bluetooth) and 10 are also displayed at the same time.


3

Control Function

Inverter Generator Owner's Manual

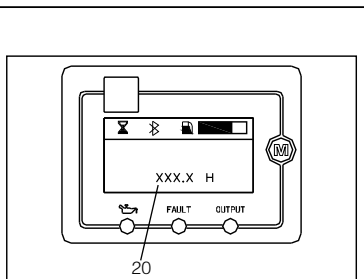


(20) Remaining run time

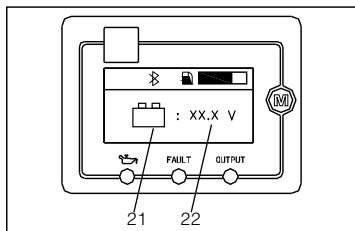


(21) Battery normal

(22) Battery (Voltage greater than 10V)

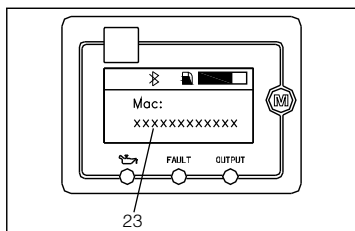

(23) MAC address

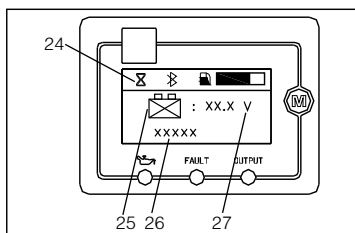

(24) Operation identification(Not running)

(25) Battery (loss of capacity)

(26) Hand Start Tips

(27) Battery (More than 8V and less than 10V)

If the unit does not have Blue tooth, the screen interface does not display the content of 23.

3. When the combination switch is placed on the "On" position, and the engine starts successfully and runs normally: the screen interface displays the contents of 11-14, 15-17, 18, 19, 20, 21-22 and 23 (7 display interfaces in total).

Prompt: The interface content of 23 is used for the Mac address of connecting Blue tooth device.

The display interface can be switched by operation of key 7, and the contents are displayed in turn.

When the above contents are displayed in each display interface, the contents of 8, 9 (displayed with Blue tooth, not displayed without Blue tooth) and 10 are also displayed at the same time.

If the unit does not have Bluetooth, the screen interface does not display the content of 23.

4. When engine runs with failure: the screen interface displays the contents of 29-30, and the content of 30 represents the fault information as follows:

U> a: AC over voltage, indicating the character of AC (alternative indication of AC and digit)

b: DC over voltage, indicating the character of DC (alternative indication of DC and digit)

U< a: AC under-voltage, indicating the character of AC (alternative indication of AC and digit)

b: DC under-voltage, indicating the character of DC (alternative indication of DC and digit)

I> Output over current of generator.

⚡ Output short circuit of generator.


🔥 Over heat of frequency converter.

Prompt: When the above contents are



3

Control Function


Inverter Generator Owner's Manual

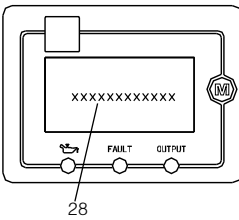

(28) Maintenance tips

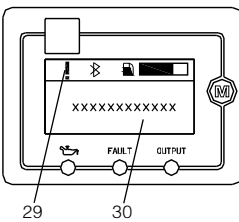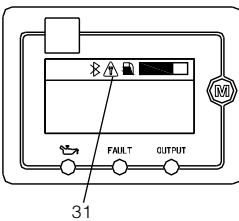(29) Fault identification
(30) Fault code symbol

(31) Maintenance identification

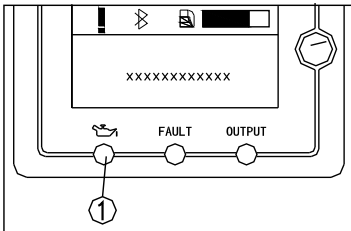

displayed in each display interface, the contents of 9 (displayed with Blue tooth, not displayed without Blue tooth) and 10 are also displayed at the same time.

5. When the combination switch is on the "On" position, the engine is not started or the engine is started successfully (running normally): the screen interface displays the content of 28, and the content of 28 represents the information as follows:

When the generator set reaches the maintenance time, it needs to be maintained immediately. If maintenance has been carried out, operate key 7 to clear this information.

Prompt: Operate key 7 to clear the maintenance information, the screen automatically switches to the next interface.

If key 7 is not operated to clear the maintenance information, the content of 28 will be displayed once every 1 minute in each screen interface for 10 seconds and the content of 28 will not be displayed again until 2 hours later. At the same time, the maintenance mark will not be displayed on the right side of the Bluetooth mark on the screen interface, until the generator set is maintained and key 7 is operated to clear the maintenance information.

Oil warning light


When the oil level falls below the lower level, the oil warning light comes on and then the engine stops automatically. Unless you refill with oil, the engine will not start again.

Tip: If the engine stalls or does not start, turn the engine switch to "ON" and then pull the recoil starter. If the oil warning light flickers for a few seconds, the engine oil is insufficient. Add oil and restart.

3

Control Function

Inverter Generator Owner's Manual

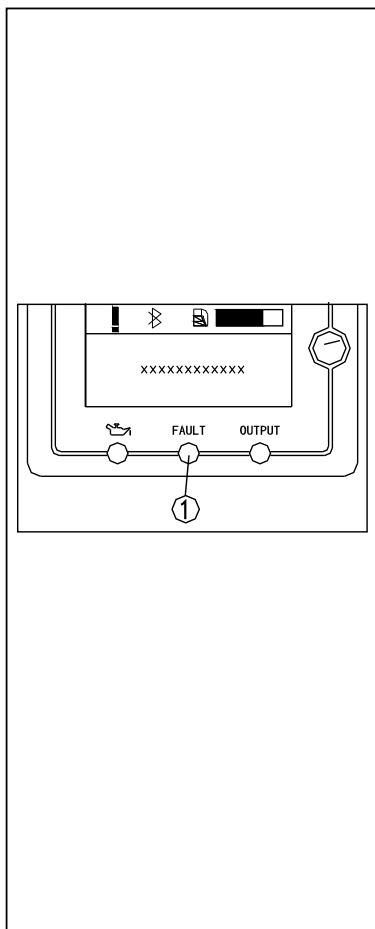


Overload indicator light (Red)

The overload indicator light comes on when an overload of a connected electrical device is detected, the inverter control unit overheats, or the AC output voltage rises. Then, the AC protector will trip, stopping power generation in order to protect the generator and any connected electric devices. The AC pilot light (Green) will go off and the overload indicator light (Red) will stay on, but the engine will not stop running.

When the overload indicator light comes on and power generation stops, proceed as follows:

1. Turn off any connected electric devices and stop the engine.
2. Reduce the total wattage of connected electric devices within the rated output.
3. Check for blockages in the cooling air Inlet and around the control unit. If any blockages are found remove.
4. After checking, restart the engine.

TIP : The overload indicator light may come on for a few seconds at first when using electric devices that require a large starting current, such as a compressor or a submersible pump. However, this is not a malfunction.

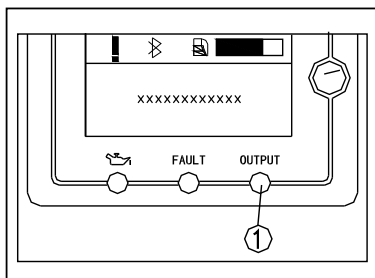

AC pilot light (Green)


The AC pilot light comes on when the engine starts and produces power.

3

Control Function

Inverter Generator Owner's Manual

FREQUENCY SELECTION

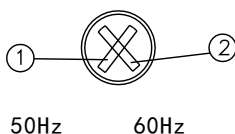

Frequency selection (FS) switch Only for 100V/200V product

- ① 50Hz
- ② 60Hz

If you need change the machine output frequency, please stop the generating set firstly, then adjust the position of frequency switch by screwdriver. Then restart it.

NOTICE

Frequency switch can change frequency only when the generator setting stops. The generator setting output frequency can't change if it operates.

DC protector

The DC protector turns to "OFF" automatically when electric device being connected to the generator is operating and current above the rated flows. To use this equipment again, turn on DC protector by pressing its button to "ON".

- ① "ON" Direct current is output.
- ② "OFF" Direct current is not output.

NOTICE

Reduce the load of the connected electric device below the specified rated output of the generator if the DC protector turns off. If the DC protector turns off again, stop using the device immediately and consult a franchised dealer.


Ground (Earth) terminal

Ground (Earth) terminal ① connects the earth line for prevention of electric shock. When the electric device is earthed, always the generator must be earthed.

3


Control Function

Inverter Generator Owner's Manual

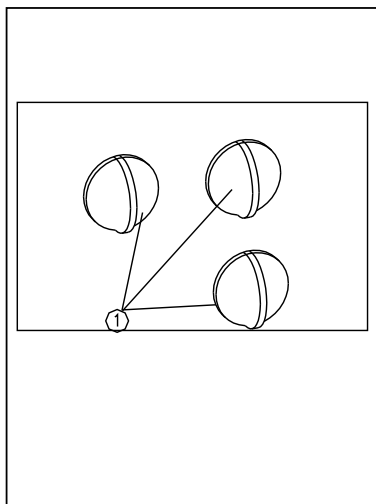

Parallel Operation Outlets

This is the terminal ① for connecting special cables for parallel running of two generator. The parallel running requires two generator and the special cables. (The rated output power of parallel operation is 12kVA. The rated current of two 100/200v generators in parallel is 120/60A; the rated current of two 120/240v generators in parallel is 100/50A; and the rated current of two 230V generators in parallel is 52A.) The handling, operation procedure and the notes on usage are described in the PARALLEL RUNNING KIT OWNER'S MANUAL included in the Parallel.

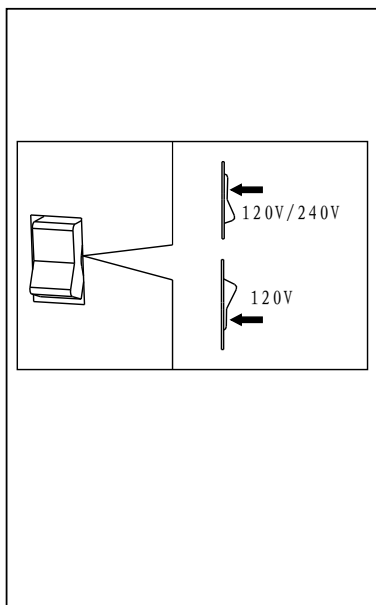

Voltage selector

Before starting the engine, select the voltage to be used. It is usual to disconnect or switch off all load devices when using a voltage change-over switch. The voltage change-over switch allows the generator to output 120V or 120/240V only. If a 240V load device is connected to a 4-hole socket, the voltage change-over switch must select "120/240" V gear. If only 120V 3-port socket is to be used, the voltage change-over switch must select "120V" gear.


120/240V : The sockets of 120V and 120/240V can be used simultaneously.

120V : Only 120V socket can be used, it is strictly prohibited to use 120/240V socket, the maximum power will be provided in 120V, 30A anti-trip socket.

3


Control Function

Inverter Generator Owner's Manual

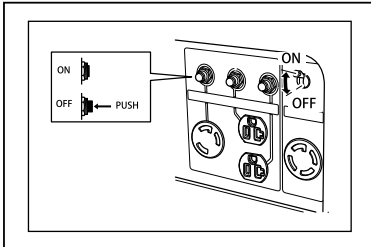


AC circuit breaker

It will break to protect the electric device when current is too heavy.

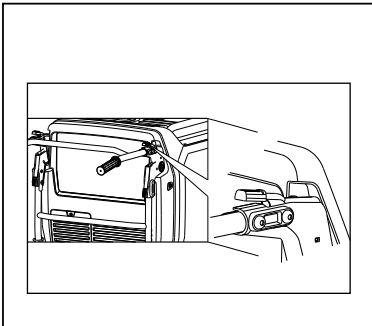

Folding handle

Pusher makes it easier to push the generator. When the generator is at rest, pusher should be folded. Do not place objects on extended arms. Lift handle up and lock handle and fix handle in place. Extend handle - lift handle up, lock handle and fix handle in place. Fold handle - press down both handles to lock the handle and lower the handle.

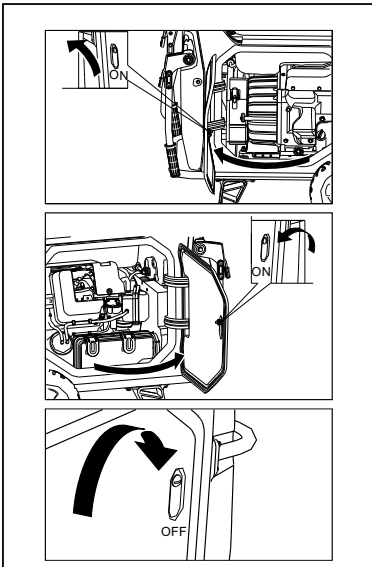

Maintenance door

Open and close maintenance doors for unit maintenance.

In the case of no electrical start, open the right maintenance door and start the engine by recoil starter.

Make sure that the maintenance door is closed while the engine is running.

Purpose of right door:

Inspection/replacement of engine oil; manual start.

Purpose of left door:

Inspection/replacement of spark plugs; inspection/cleaning of air filter; drain of carburetor.

Open maintenance door: Rotate lock 90° anticlockwise.

Close maintenance door: Rotate lock 90° clockwise.

4

Pre-operation

Inverter Generator Owner's Manual

Pre-operation

NOTICE

Pre-operation checks should be made each time operation.

⚠ WARNING

The engine and muffler will be very hot after the engine has been run. Avoid touching the engine and muffler while they are still hot with any part of your body or clothing during inspection or repair.

Fuel



⚠ WARNING

- Fuel is highly flammable and poisonous. Check "SAFETY INFORMATION"(See page 2-5) carefully before filling.
- Do not overfill the fuel tank, otherwise it may overflow when the fuel warms up and expands. After fill the fuel, make sure the fuel tank cap is tightened securely.
- Immediately wipe off spilled fuel with a clean.
- Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts.

Make sure that there is enough fuel in the tank. If the fuel is not enough, open the fuel tank cover and add fuel to the red indicated position.

Recommended fuel: Unleaded gasoline
Fuel tank capacity: Total: 25.0L

① Add fuel

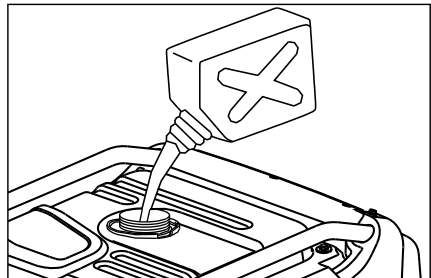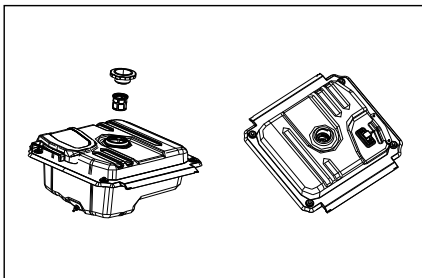

4

Pre-operation


Inverter Generator Owner's Manual

Engine Oil

The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.

Do not tilt the generator when adding engine. This could result in overfilling and damage to the engine.

Oil level

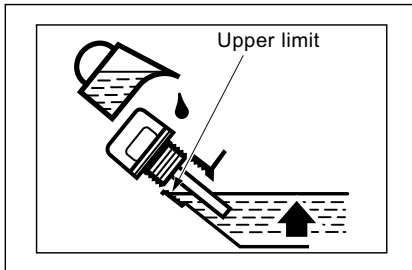

Recommended engine oil:

SAE 10W -30

Recommended engine oil grade:

API Service SE type or higher

Engine oil quantity:

1.45 L



Operation

Inverter Generator Owner's Manual

Operation

NOTICE

Never operate the engine in a closed area or it may cause unconsciousness and death within a short time. Operate the engine in a well ventilated area. The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.

TIP:

The generator can be used with the rated output load at standard atmospheric conditions.

“Standard atmospheric conditions”; Ambient temperature 25℃.


Barometric pressure 100kPa; Relative humidity 30%

The output of the generator varies due to change temperature, altitude (lower air pressure at higher altitude) and humidity.

The output of the generator is reduced when the temperature, the humidity and the altitude are higher than standard atmospheric conditions.

Additionally, the load must be reduced when using in confined areas, as generator cooling is affected.

STARTING THE ENGINE

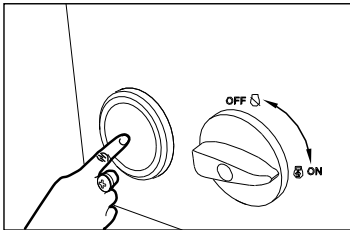

1. Do not connect any electrical equipment before starting the generator. Turn the idle switch to “Off”.
2. According to the required voltage requirements, select the gear of voltage change-over switch.
3. Turn the combination switch to “On” position.
4. One-key start - press and release the start switch button on the control panel. The start switch will start the motor for 5 seconds. When the engine starts successfully, the starter will stop automatically. If the engine does not start successfully, wait at least 10 seconds before starting again.


Tip: Press the start button for at least 0.5 second. When the generator does not run, it is strictly prohibited to put the combination switch on the “On” position, or the battery will be severely depleted. When the



Operation

Inverter Generator Owner's Manual

generator is not in use, place the combination switch in the "Off" position.

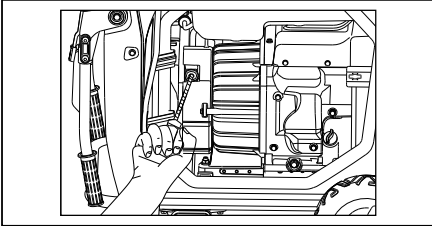

Recoil start

Turn the lock 90° anticlockwise, and open right maintenance door. First, pull the recoil starter gently, the guy wire is tightened, and then pull hard. Turn the lock 90° clockwise, and close right maintenance door.

If you want to use the energy saving function, turn the idle switch to the "On" position after the engine is started and preheated for 2-3 minutes.


Tip: When the engine is started, the ESC is on the "ON" position and the generator cannot be connected to any load. When the environment temperature is lower than 0 °C (32 °F), engine speed reaches 3,100r/min, and warm-up time reaches 5 min. When the environment temperature is less than 5 °C (41 °F), engine speed reaches 3,100 r/min, the warm-up time reaches 3 min. After running for the above time, ESC can only work normally when it is "ON".



Operation

Inverter Generator Owner's Manual

STOP THE ENGINE

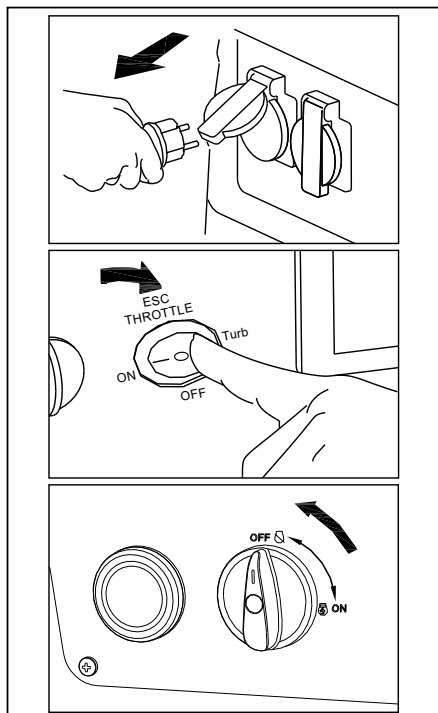

If the engine is turned off in an emergency, rotate the combination switch quickly to the "Off" position. Under normal circumstances, follow these steps to shut down the engine.

Tip: Turn off all electrical equipment.

1. Turn the idle switch to the "Off" position.

2. Disconnect all electrical equipment from the AC socket.

3. Manual extinguishing: press and release the start switch button on the control panel. Enter the homepage of Blue tooth APP of the mobile phone, click the start button to turn off the engine (skip this step and proceed to the next step directly).

4. Turn the combination switch to the "Off" position (ignition system off, fuel system off, solenoid valve off, power system off).

Tip: When the generator is not running or not in use, put the combination switch on the "Off" position, otherwise the battery will be seriously damaged to affect the next one-key start.



Operation Inverter Generator Owner's Manual

ALTERNATING CURRENT (AC) CONNECTION

⚠ WARNING

Be sure any electric devices are turned off before plugging them in.

NOTICE

- Be sure all electric devices including the lines and plug connections are in good condition before connection to the generator.
- Be sure the total load is within generator rated output.
- Be sure the receptacle load current is within receptacle rated current.

TIP: Make sure to ground (Earth) the generator. When the electric device is earthed, always the generator must be earthed.

1. Select the voltage change-over switch gear according to the required voltage requirements. When the voltage change-over switch is placed at the “120/240” V gear, the load devices of 120V and 120/240v can be used simultaneously.

If the “120/240” V load device is not used, place the voltage change-over switch to “120” V gear.

2. Start engine and make sure that AC indicator light is green.

3. Insert the plug into AC socket/

4. Make sure that AC indicator light is on.

5. Turn on the electrical equipment.

TIP: Many electric load devices require starting power above their rated power to start.

TIP: The ESC must be turned to “OFF” before increasing engine speed to rated rpm.

- Most motorized appliances require more than their electrical rating for startup. When an electrical motor is started, the overload indicator (red) may come on. This is normal if the overload indicator (red) goes off within 4 seconds. If the overload indicator (red) stays on, consult your generator dealer.
- If the generator is connected to multiple loads or electricity consumers, please remember to first connect the one with the highest starting current. And last connect the one with the lowest starting current.
- If the generator is overload, or if there is a short circuit in a connected appliance, the overload indicator (red) will go ON. The overload indicator (red) will stay ON, and after about 4 seconds, current to the connected appliance(s) will shut off, and the output indicator (green) will go OFF. Stop both engines and investigate the problem. Determine if the cause is a short circuit in a connected appliance or an overload, correct the problem and restart the generator.



Operation

Inverter Generator Owner's Manual

AC parallel operation

Before connection an appliance to either generator, make sure that it is in good working order and that its electrical rating does not exceed that of the receptacle.

During parallel operation, the ESC switch should be in the same position on both generators.

1. Connect the parallel operation cable between the generator to either an generator or companion generator following the instructions supplied with the cable kit.
2. Start the engines and make sure the output indicator (green) on each generator comes on.
3. Plug an appliance into the AC receptacle.
4. Turn on the appliance.

AC Parallel Operation Applications

TIP:

- Make sure that it is in good working order. A faulty appliance or power cord can create a potential for electrical shock.
- If an appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn it off immediately. Disconnect the appliance and determine whether the problem is the appliance, and determine whether the problem is the appliance or the rated load capacity of the generator has been exceeded.
- Make sure that the combined electrical rating of the tools or appliance do not exceed that of the generator. Never exceed the maximum may be used for no more than 30 minutes.
- Never connect different generator models.
- Don't remove the parallel operation cable when the generator operation.
- For single generator operation, the parallel operation cable must be removed.

⚠ WARNING





- Substantial overloading that continuously lights the overload indicator (red) may damage the generator
- Marginal overloading that temporarily lights the overload indicator (red) may shorten the service life of the generator.
- For continuous operation, do not exceed the rated power.
- Rated power in parallel operation is: 12kVA.

6

Application Range

Inverter Generator Owner's Manual

When using the generator, make sure the total load is within rated output of a generator. Otherwise, generator damage may occur.

AC				DC 
Power factor	1	0.8-0.95	0.4-0.75 (Efficiency 0.85)	
7000i	~6000W	~4800W	~2700W	Rated voltage 12v Rated current 8A

TIP:

- “~” means below.
- Application wattage indicates when each device is used by itself.
- The simultaneous usage of AC and DC power is possible but total wattage should not exceed the rated output.

EX:

Generator rated output		6000VA
Frequency	Power factor	
AC	1.0	~6000W
	0.8	~4800W
DC	—	96W(12V/8A)

The overload indicator light comes on when total wattage exceeds the application range. (See page 12 for more details.).

NOTICE

- Do not overload. The total load of all electrical appliances must not exceed the supply range of the generator. Overloading will damage the generator.
- When supplying precision equipment, electronic controllers, PCs, electronic computers, microcomputer based equipment or battery chargers, keep the generator a sufficient distance away to prevent electrical interference from the engine. Also ensure that electrical noise from the engine does not interfere with any other electrical devices located near the generator.
- If the generator is to supply medical equipment, advice should first be obtained from the manufacturer, a medical professional or hospital.
- Some electrical appliances or general-purpose electric motors have high starting currents, and cannot therefore be used, even if they lie within the supply ranges given in the above table. Consult the equipment manufacturer for further advice.

Maintenance

Safety is an obligation of the owner. Periodic inspection, adjustment and lubrication will keep your generator in the safest and most efficient condition possible. The most important points of generator inspection and lubrication are explained on the following pages.

WARNING

Improper maintenance can lead to danger, if you are not familiar with the maintenance operation, please refer to the designated dealer for your service.

Maintenance chart


Use only franchised dealer specified genuine parts for replacement. Ask an authorized franchised dealer for further attention.

Routine maintenance cycle (1)		Each check	First months or 20 Hr.	3 months or 50 Hr.	6 months or 100 Hr.	12 months or 300 Hr.
Item	Routine					
Oil	Inspect	○				
	Replace		○		○	
Air filter	Inspect	○				
	Clean			○ (2)		
	Replace					○ (*)
GFCI Socket	Inspect	○				
Carbon canister	Inspect	Every 2 years (3)				
Protective tube	Inspect	Every 2 years (3)				
Spark plug	Clean				○	
	Replace					○
Spark arrester	Clean				○	
Valve clearance	Inspect-Adjustment					○ (3)
Combustion chamber	Clean	Every 1000 hours (3)				
Fuel tank	Clean	Every 2 years or 1000 hours (3)				
Fuel filter	Replace	Every 2 years or 1000 hours (3)				
Fuel hose	Clean	Every 2 years (Replacement if necessary) (3)				

Tip: (*) Replace the paper filter element.

- (1) When it is used for commercial purposes, record the running time to ensure timely maintenance.
 - (2) Clean more frequently when using it in damp or dusty places.
 - (3) Unless you have the appropriate tools and mechanical proficiency, these items should be maintained by the service dealer. Stop using the generator and contact the dealer for disposal.
- Failure to follow this maintenance schedule can result in an unwarranted failure.

Add Fuel

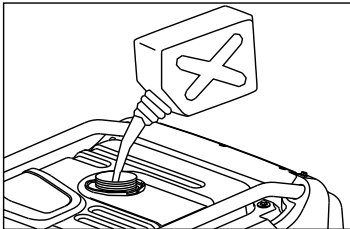

When the engine stops, check the level of gasoline. When the oil level is low, add gasoline to the tank.

WARNING

Gasoline is flammable and explosive. When refueling, you can get burns or serious injuries.

Stop the engine and stay away from fireworks, spark plugs and Flame and so on. Fuel only outdoors. Quickly The spilled fuel is wiped clean.

NOTICE

Gasoline can damage paint and plastics. When refueling, take care not to spill gasoline.

Add gasoline in a well-ventilated area before starting the engine. If the engine is running, let it cool down automatically. It is strictly prohibited to fill more than the fuel filter scale on the tank bracket (red).


It is strictly prohibited to add gasoline in the closed environment, because the gasoline will contact spark and flame after volatilization. Keep gasoline away from electrical indicator lights, household appliances, barbecue, power tools, etc.

Spilling fuel not only causes fires, but also causes environmental damage. Wipe off the spilled fuel quickly.

Maintenance

Inverter Generator Owner's Manual

ENGINE OIL INSPECTION

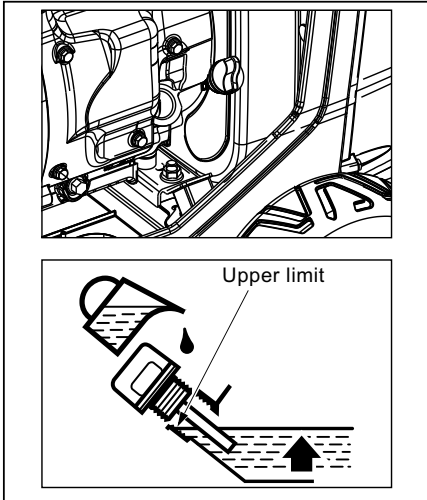


Check engine oil when engine is stopped and placed on a horizontal surface.

1. Rotate the lock 90°anticlockwise, and open right maintenance door.
2. Remove the oil gauge.
3. Check the oil. If the oil level is below the highest mark, add the specified oil to the highest mark.
4. Reinstall the oil gauge.
5. Rotate the lock 90°clockwise, and close right maintenance door.

When the oil level is below the minimum safety scale, the oil alarm system will automatically shut down the engine. For this reason, in order to avoid unexpected shutdown inconvenience, check the oil usually.

ENGINE OIL REPLACEMENT

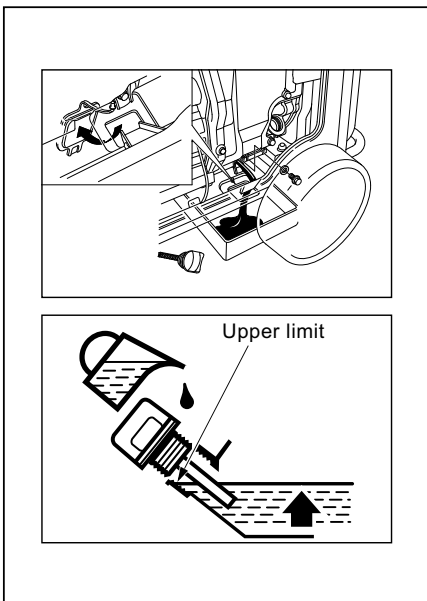


Discharge oil when engine is hot to ensure rapid and thorough discharge of oil.

1. Rotate the lock 90°anticlockwise, and open right maintenance door.
2. Remove the black rubber seal ring under the oil drain bolt.
3. A suitable container for oil is placed at the bottom of the engine.
4. Remove the oil gauge.
5. Remove oil drain bolts and washers to drain oil thoroughly.
6. Reinstall the oil drain bolts and washers and tighten the oil drain bolts.
7. Reinstall the black rubber seal ring.
8. Place the generator on a horizontal surface and add the specified oil to the maximum scale.
9. Reinstall the oil gauge.
10. Rotate the lock 90°clockwise, and close right maintenance door.

Maintenance


Inverter Generator Owner's Manual

OIL SPECIFICATION TABLE

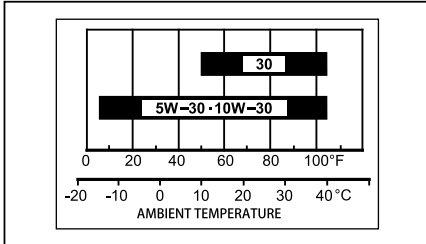

Oil is an important factor which affects performance and service life. Use four-stroke oil. SAE 10W30 is recommended for regular use. However, when the average temperature in your area is within the recommended range, you can use other viscosity types of oil shown in the chart.


AIR FILTER

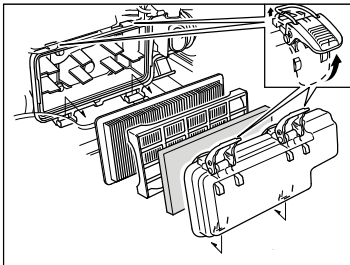

1. Rotate the lock 90° anticlockwise, and open left maintenance door.
2. Loosen the air filter cover clamp and remove the air filter cover, foam filter core, filter core bracket and paper filter core together.
3. Paper filter element:
 - a. Remove the paper filter element from the filter holder.
 - b. If the paper filter element is dirty, replace it with a new one. Do not clean the paper filter element.
 - c. Insert the paper filter element into the filter holder.
4. Foam filter:
 - a. Remove the foam filter element from the empty filter cover.
 - b. Check the foam air filter to make sure that it is clean and in good condition. If the foam filter element is dirty, refer to the following page for cleaning. If the foam filter element is damaged, replace it with a new one.
5. Put the foam filter element, the filter holder and the paper filter element together into the empty filter cover.
6. Install the air filter cover and lock the cover clamp.
7. Close the left maintenance door, and rotate the lock 90° clockwise.


NOTICE

Dust can enter the engine and quickly wear it out, if the engine runs without a filter element or if the filter element is damaged.

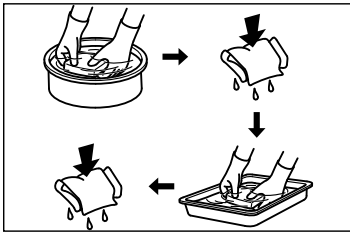FOAM FILTER CLEANING

The foam filter element of the dirty air filter will restrict the air flow to the fuel system and reduce the engine performance. If the generator is used in a dusty area, the maintenance frequency of the air filter's foam filter element is higher than that in the maintenance requirements.

1. Wash the filter element in warm soapy water and let it dry naturally, or clean and dry it in a non-flammable solvent.
2. Dip the filter element into clean oil and squeeze out excess oil. If there is too much oil left in the filter element, start the engine and the engine will smoke.
3. Use a wet cloth to remove dirt from the inside of the air filter's cover. Take care to prevent dust from entering the air ducts which leads to the fuel system.

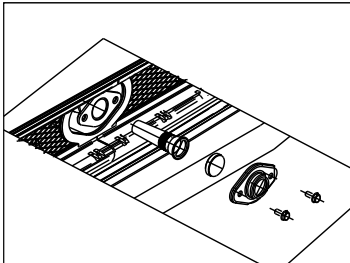
SPARK ARRESTER

The spark collector must be maintained every 100h to keep the engine running normally. After running the engine, the engine and muffler will become very hot. Do not allow your skin and clothes to directly touch the engine and muffler. When the motor and muffler are cooled, check and clean them up.

7

Maintenance

Inverter Generator Owner's Manual

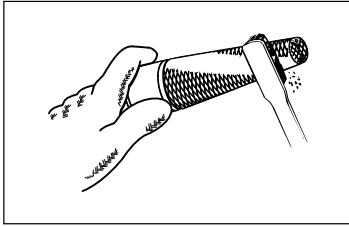

The spark collector must be maintained every 100h to keep the engine running normally. After running the engine, the engine and muffler will become very hot. Do not allow your skin and clothes to directly touch the engine and muffler. When the motor and muffler are cooled, check and clean them up.

1. Loosen two M5 x 12 pan head bolts and remove mounting cover, muffler mesh cover and spark collector


2. Clean the muffler's mesh cover and the cumulative carbon on the spark collector with a steel wire brush.

NOTICE

Clean them with steel wire brush gently to avoid damage or scratch to muffler's mesh and spark collector. The spark collector must not be broken or cracked. If it is damaged, please replace it in time.

3. Reload the spark collector in reverse order to remove the spark collector.

SPARK PLUG

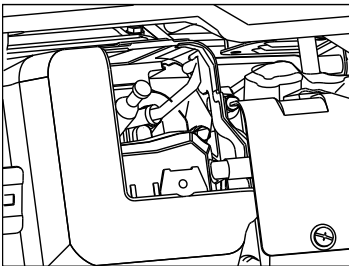


In order to maintain the spark plug, you need to prepare a set of spark plug sleeve ① and loading rod ②. In order to make sure that the engine is running properly, spark plug must be clean and carbon-free.

NOTICE

Incorrect spark plug can cause damage to engine.

If the engine is hot, let it cool naturally before maintenance of spark plug.

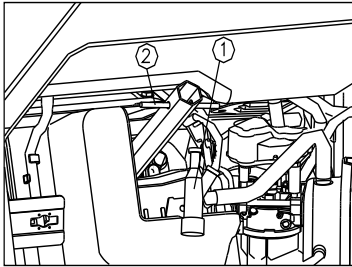


1. Rotate the lock 90° anticlockwise, and open left maintenance door.
2. Loosen bolt of spark plug's maintenance cover and remove it.
3. Remove the spark plug cap, remove impurities and dust around the spark plug, and place the sleeve in the appropriate position of the spark plug.
4. Use the spark plug sleeve and the loading rod (insert the loading rod into the sleeve), rotate counterclockwise and remove the spark plug.
5. Check the spark plugs. Replace the spark plug, if the electrode is worn or stained, or if the insulator is cracked or broken.
Standard spark plug: F7RTC/F7TC, clearance of spark plug: 0.6-0.8mm.
6. After ensuring that the spark plug is in good condition, fix the spark plug gently to the head of the cylinder by hand to prevent thread damage caused by force.
7. After the spark plug is fixed, tighten it with the spark plug sleeve. If the used spark plug is to be reinstalled, tighten 1/8-1/4 circle manually after fixing the spark plug and before tightening it to the specified position.
If the newly installed spark plug is to be reinstalled, tighten 1/2 circle manually after fixing the spark plug and before tightening it to the specified position.
Torque: 13.3 LBS. Ft (18 N.M, 1.8 kg.m)

Tip: If the spark plug is installed without torque wrench, a better estimation method is to tighten 1/4-1/2 circle manually, but the spark plug should be tightened to the specified torque.

7

Maintenance

Inverter Generator Owner's Manual


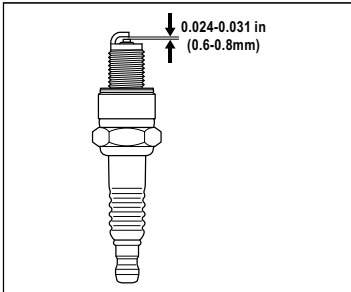

NOTICE

Loose spark plugs may overheat and damage the engine. Excessive tightening of spark plugs can damage the thread on the head of cylinder.

8. Install the spark plug cap.
9. Install spark plug maintenance cover and tighten maintenance cover's bolts.
10. Close the left maintenance door, and rotate the lock 90° clockwise.

BATTERY


When the engine is running, the generator's charging system will automatically charge the battery. However, if the generator is only used regularly, it must be charged monthly to maintain the service life of the battery.

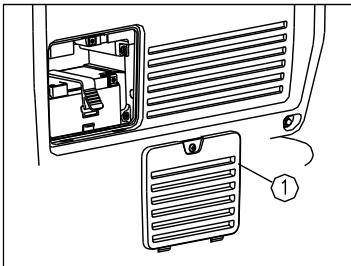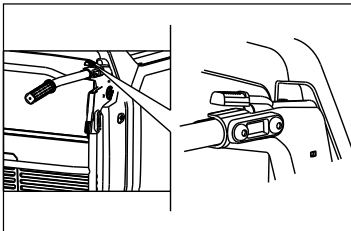

Remove battery

Battery terminals, wiring terminal and associated accessories containing lead and lead compounds. Wash hands immediately after handling.

1. Lift handle up, lock handle and fix it in place.
2. Loosen the bolts of maintenance cover, and remove the battery maintenance cover ①.
3. Remove the negative (-) cable from the negative (-) terminal of the battery, and then remove the positive (+) cable from the positive (+) terminal of the battery.
4. Remove the battery band from the hook at the bottom of generator.
5. Remove the battery from the mounting box.

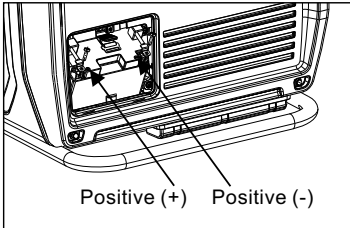

Install the battery

1. Put the battery in the mounting box.
 2. Connect the positive (+) cable with the positive (+) terminal of the battery, tighten the bolt and cover the rubber cap.
 3. Connect the negative (-) cable with the negative (-) terminal of the battery, and tighten the installation bolt.
 4. Install the battery band.
 5. Reinstall battery maintenance cover and tighten the bolts.
- In the case that the battery maintenance cover is not assembled, it is strictly prohibited to run the generator, otherwise the performance of the generator and the engine will become poor.

BATTERY CHARGING

TIP:

- The generator DC rated voltage is 12V.
 - Start the engine first, and then connect the generator to the battery for charging.
 - Before starting to charge the battery, make sure that the DC protector is turned on.
1. Start the engine.
 2. Connect the red battery charger lead to the positive (+) battery terminal.
 3. Connect the black battery charger lead to the negative (-) battery terminal.
 4. Turn the ESC "OFF" to start battery charging.

NOTICE

- Be sure the ESC is turned off while charging the battery.
- Be sure to connect the red battery charger lead to the positive (+) battery terminal, and connect the black lead to the negative (-) battery terminal. Do not reverse these positions.
- Connect the battery charger leads to the battery terminals securely so that they are not disconnected due to engine vibration or other disturbances.

7

Maintenance

Inverter Generator Owner's Manual

NOTICE

- Charge the battery in the correct procedure by following instructions in the owner's manual for the battery.
- The DC protector turns off automatically if current above the rated flows during battery charging. To restart charging the battery, turn the DC protector on by pressing its button to "ON". If the DC protector turns off again, stop charging the battery immediately and consult a franchised dealer.

⚠ WARNING

- Never smoke or make and break connections at the battery while charging. Sparks may ignite the battery gas.
- Battery electrolyte is poisonous and dangerous, causing severe burns, etc. contains sulfuric (sulphuric) acid. Avoid contact with skin, eyes or clothing.

Antidote:

External- Flush with water.

INTERNAL- Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil.



Call physician immediately.

EYES: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., away. Ventilate when charging or using in closed space. Always cover eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN

PROTECTIVE TUBE

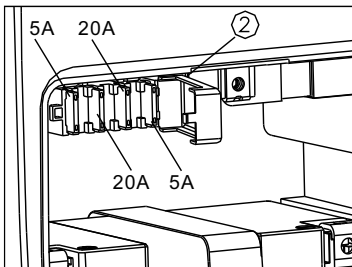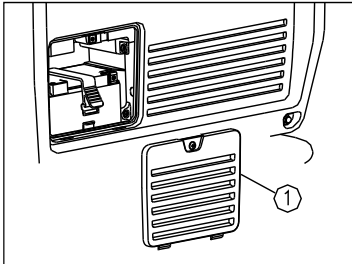

If the fuse blows, the generator will stop.

In the case of a fuse failure, find out the cause of the failure and fix it before continuing to use. If the fuse continues to fail, stop using the generator and contact the dealer.

1. Turn the combination switch to the "Off" position, before checking and replacing the fuse.

2. Loosen the bolts of battery maintenance cover, remove the battery maintenance cover ①.

3. Open the cover of the fuse mounting box ② (90 ° counterclockwise)

4. Replace the fuse with the one of the same type and grade.

Specifications of fuse: 5A, 20A.

NOTICE

Prohibited the use of fuses that do not conform to the type and grade, or they may cause serious damage to the electrical system or fire.

5. Cover the fuse mounting box and install the battery maintenance cover.

8

Accessories Installation

Inverter Generator Owner's Manual

Accessories Installation

REMOVE ACCESSORIES

Remove the attachment, remove the generator and attachment box from the packing box, and count the number of attachments according to the following table.

No.	Name	Quantity
1	Wheel	2
2	Axle	1
3	B pin	2
4	Washer	2
5	Bolt	8
6	Frame shock absorber bracket (left)	1
7	Frame shock absorber bracket (right)	1


WHEEL SET INSTALLATION

Tool requirements: 12 mm wrench, 10 mm wrench, crosshead screwdriver used for battery wiring, and clamp.

It is strictly forbidden to run the generator, when the wheel kit is not installed. The wheel kit provides air flow space between the ground and the air inlet of generator.

NOTICE

If the wheel kit is not installed, dust and debris may be sucked into the duct of generator, which will cause damage to the generator. Be sure to run the generator after the wheel kit is installed.

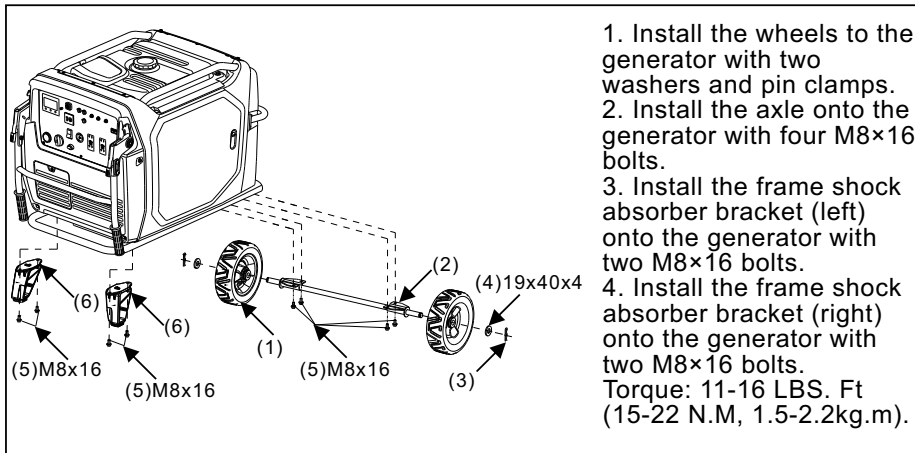

Transporting

If the generator set just runs, allow it to cool naturally for at least 15 minutes before loading it into the vehicle. The thermal power and exhaust system can cause harm to people and ignite some combustible materials. To prevent fuel leakage, the generator shall be placed horizontally and the engine switch shall be off during transportation.

⚠ WARNING

When transporting the generator:

- Do not overfill the tank.
- Do not operate the generator while it is on a vehicle. Take the generator off the vehicle and use it in a well ventilated place.
- Avoid a place exposed to direct sunlight when putting the generator on a vehicle. If the generator is left in an enclosed vehicle for many hours, high temperature inside the vehicle could cause fuel to vaporize resulting in a possible explosion.
- Do not drive on a rough road for an extended period with the generator on board. If you must transport the generator on a rough road, drain the fuel from the generator beforehand.


NOTE:

To transport the generator, hold the holding part(See below).

Take care not to drop or strike the generator when transporting.

Do not place heavy objects on the generator.

When the rope or strap is used for fixing generator for transportation, only the frame's lifting part must be used as the connection point. Do not attach rope or strap to the main body of the generator or to any position on the folding handle.

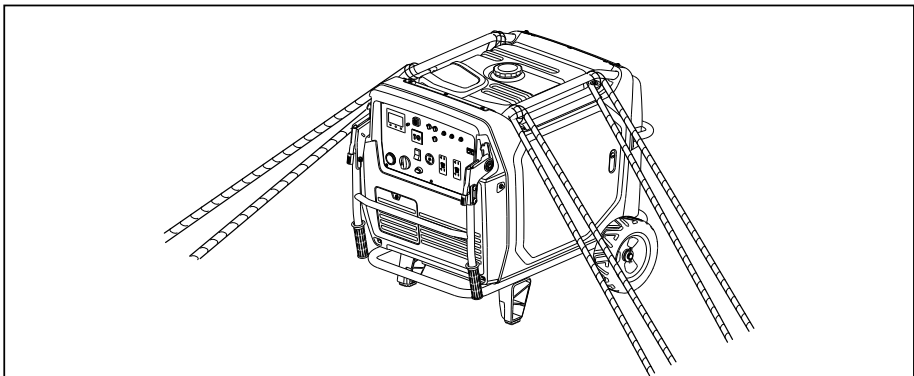

10

Storage and Transportation
Inverter Generator Owner's Manual

Storage and Transportation

Long term storage of your machine will require some preventive procedures to guard against deterioration.

In order to make your generator trouble-free and in good condition, proper storage preparation is essential. The following steps will help to prevent rust and corrosion that damage the generator's function and appearance, and make it easier to start the engine when you use the generator again.

FUEL


NOTICE

Depending on the area of operation equipment, the fuel may deteriorate and oxidize rapidly. The fuel may deteriorate and oxidize within 30 days and may cause damage to the fuel system.

Fuel may deteriorate and oxidize during storage. Old gasoline can make it difficult to start and leave deposits that can clog up the fuel system. If gasoline in the generator deteriorates during storage, maintenance and replacement of fuel system's components may be required. The length of time of gasoline which remains in the fuel tank and will not cause functional problems varies with factors such as the mixture of gasoline, storage temperature, and whether the tank is partially or fully filled. The partially filled air in the tank can cause the fuel to deteriorate. Higher storage temperature can accelerate fuel deterioration. Fuel deterioration problems can occur within months, or even less if the gasoline added to the tank is not fresh.

The distributor's effective warranty does not cover damage to the fuel system or performance problems caused by careless storage. You can extend fuel storage life by adding gasoline stabilizers, or you can avoid fuel deterioration problems by removing fuel from the tank.

DRAIN THE FUEL

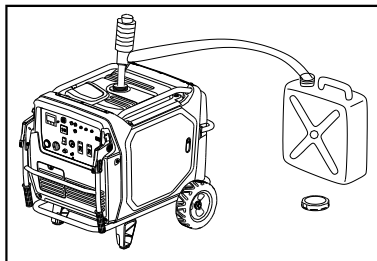



Storage and Transportation

Inverter Generator Owner's Manual

1. Turn the combination switch to "ON" position.
2. Open the tank cover and remove the filter; all the fuel in the tank is extracted into the special tank and then put back into the filter screen and tank cover.
3. Fuel oil is extremely volatile and toxic. Please read "Safety Tips" carefully and use clean and soft cloth to test the fuel oil, which prevents damage to the plastic cover.
4. Start the engine, about 20 minutes later, till the fuel runs out, the engine will automatically stop.

TIP:

- Do not connect with any electrical devices. (Unloaded operation).
- Duration of the running engine depends on the amount of the fuel left in the tank.

5. Rotate the lock 90°counterclockwise, and open the left maintenance door.
6. Loosen the drain bolt on the carburetor and put the fuel in the carburetor into the special tank.
7. Turn the combination switch to "Off" position.
8. Tighten the drain bolt on the carburetor.
9. Rotate the lock 90°clockwise, and close the left maintenance door.

ENGINE

Follow the following steps to protect the tank, piston ring and other vulnerable parts.

1. Open the left maintenance door, loosen the bolt of spark plug maintenance cover, and remove the spark plug's maintenance cover.
2. Remove spark plug, and pour one tablespoon of SAE10W30 oil.
3. Turn the combination switch to "Off" position.
4. Open the right maintenance door, and pull the recoil starter for a few minutes to lubricate the cylinder.
5. Install spark plugs and pull the recoil starter, till you feel tight (prevent cylinder and valve from rusting).
6. Install the spark plug's maintenance cover, and close left and right maintenance doors.
7. Clean the surface of the unit, and put the unit in a ventilated and dry horizontal place. Cover it with a sleeve.



Common Fault Analysis

Failure to Start of Engine		
No.	Potential Reasons	Countermeasures
1	The combination switch is placed on the "Off" position.	Turn the combination switch to the "On" position.
2	Not enough fuel in the tank.	Add fuel.
3	The engine is untreated or fails to exhaust gasoline during storage, or inferior gasoline is added before use.	Drain the fuel from the tank, and refill with new gasoline.
4	Too low oil level causes the oil alarm system to run.	Add engine oil.
5	The spark plug got wet by gasoline.	Turn the combination switch to the "Off" position, pull recoil starter for five times or more times, which can dry the spark plug. If it still doesn't run, remove the spark plug and dry it.
6	Ignition system fault, wiring harness fault, valve clearance, etc.	Contact dealers for handling.
Decrease of output power		
No.	Potential Reasons	Countermeasures
1	Air filter element failure	Clean or replace filter element.
2	The engine is untreated or fails to exhaust gasoline during storage, or inferior gasoline is added before use.	Drain the fuel from the tank, and refill with new gasoline.
3	Ignition system fault, wiring harness fault, valve clearance, etc.	Contact dealers for handling.
No output of control panel		
No.	Potential Reasons	Countermeasures
1	AC indicator light is off, and overload indicator light is on.	Check AC load. Stop and restart the engine.
		Check the inlet of cooling duct. Stop and restart the engine.
2	Over-current protector action.	Check AC load and reset over-current protector.
3	GFCI system action.	Test GFCI and reset button. Replace or repair load tools or equipment.
4	Load tool or equipment failure.	Replace or repair load tools or equipment, Stop and restart the engine.
5	Other faults of engine	Contact dealers for handling.


Parameters

Model No.		7000 IS
Generator	Type	Inverter
	Rated frequency /Hz ※	50/60/50&60
	Rated voltage /V ※	230,120/240,100/200
	Maximum power MAX/kVA	7.0
	Rated power COP/kVA	6.0
	Power factor	1.0
	AC output quality	ISO8528 G2
	THD/%	≤1.5
	Noise Level dB/LpA/LwA/K 4m (3/4 load)	70 / 90
	DC Output/ V-A	12-8
	Overload Protect	DC Non-fuse Protector
		AC Control by inverter overload protect program
Engine	Engine	LC190FD-2
	Engine type	Single cylinder, 4-Stroke, forced air cooling, OHV
	Displacement/cc	420
	Fuel type	Unleaded Gasoline
	Fuel capacity/L	25
	Continue Running Time (at rated power) / h	6.5
	Oil Capacity/L	1.45
	Spark Model No.	F7TC/F7RTC
	Starting mode	Recoil start / Electric start / APP start
Generator	Length×Width×Height/mm	950×765×773
	Wheel / inch	2×10
	Net weight/kg	130


● 120V/240V



120V/240V (Parallel socket with 50A)

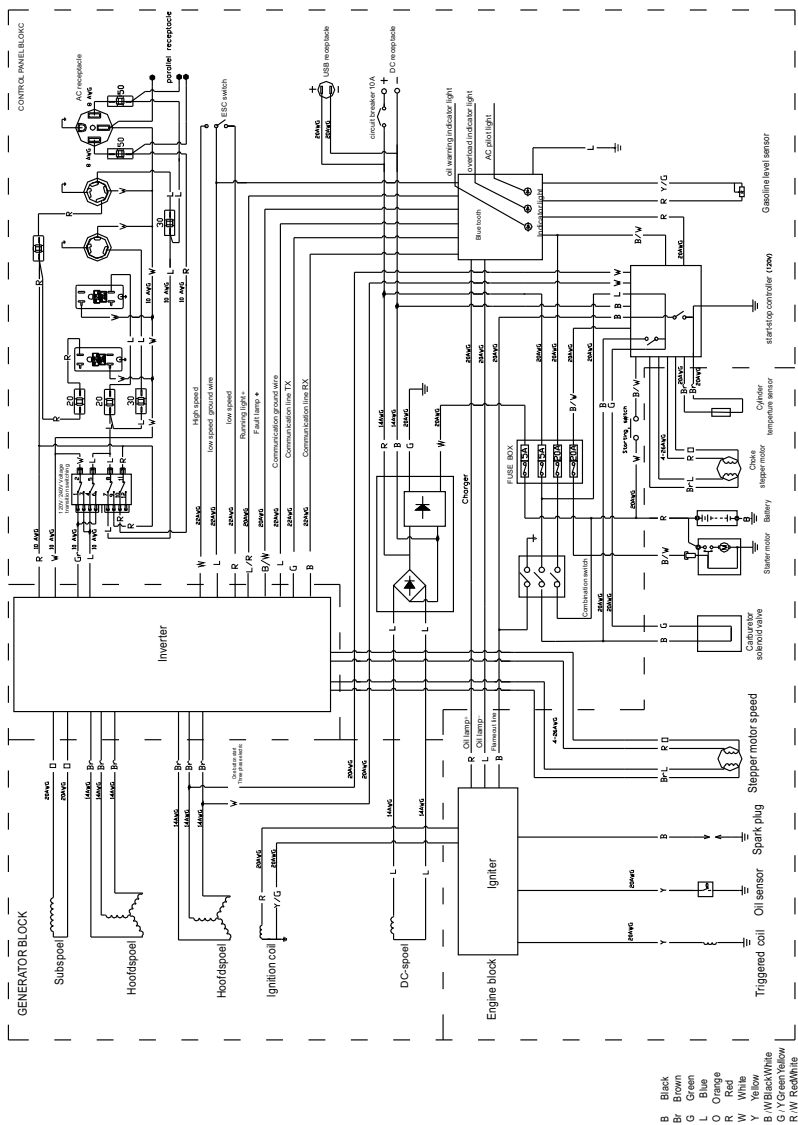


100V/200V

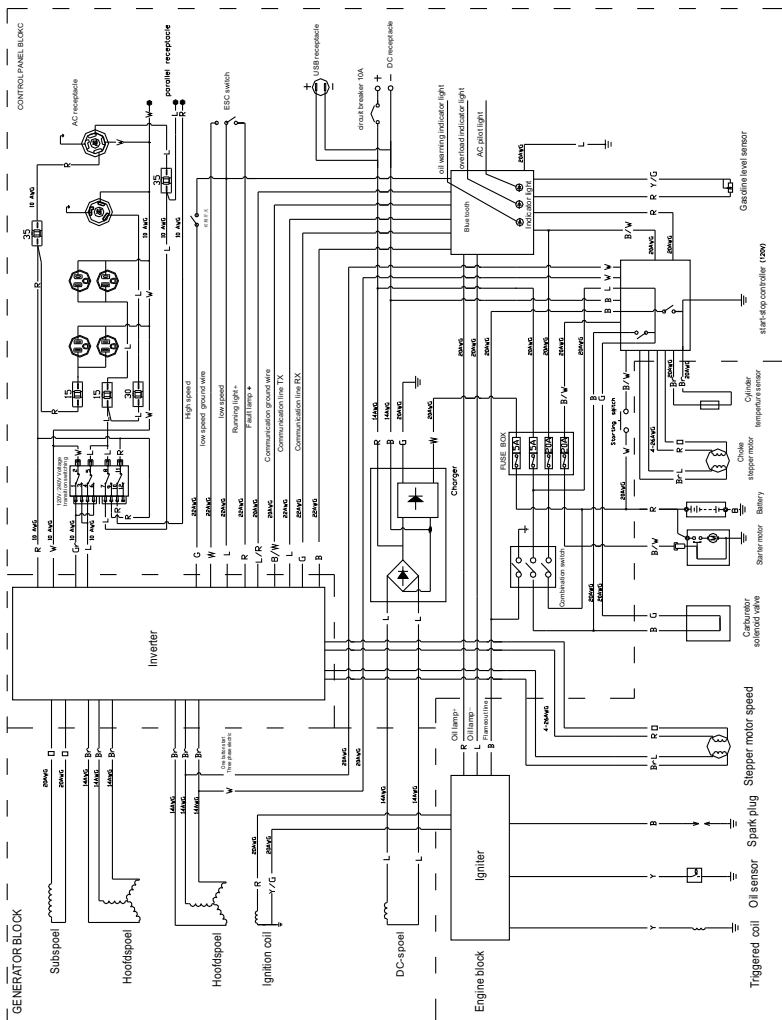


B Black
Br Brown
G Green
L Blue
O Orange
R Red
W White
Y Yellow
B/W Black/White
G/Y Green/Yellow
R/W Red/White

● 230V



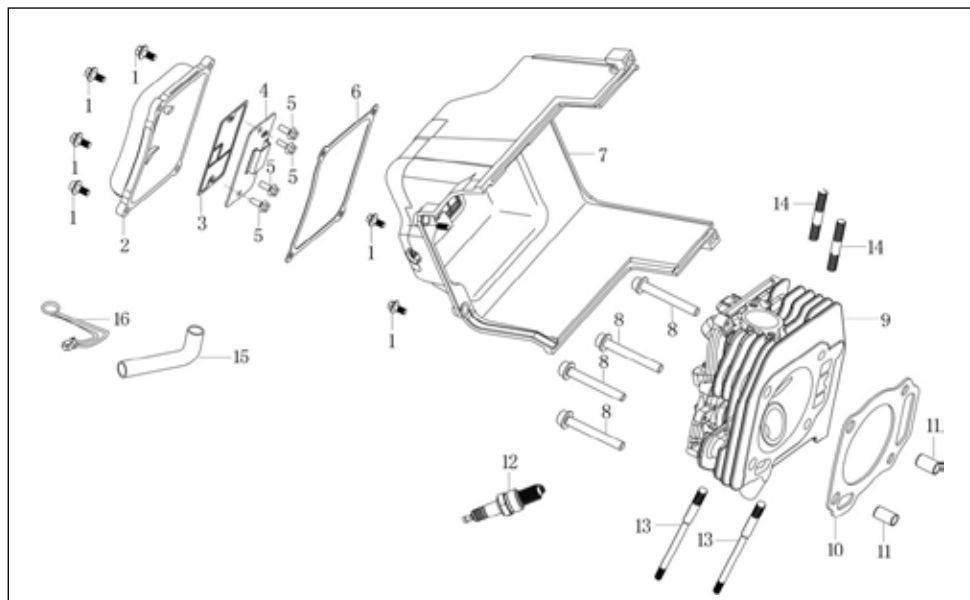


CYLINDER HEAD			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380140077	BOLT, FLANGE M6×20	6
2	GEN120230190	COVER, HEAD	1
3	GEN110850032	GASKET, CAP, BREATHER	1
4	GEN110840040	CAP, BREATHER CHAMBER	1
5	GEN380140037	BOLT, FLANGE M6×10	4
6	GEN120250070	PACKING, HEAD COVER	1
7	GEN160190127	SHROUD COMP	1
8	GEN380140337	BOLT, FLANGE ,M10×80	4
9	GEN120080668	HEAD COMP,CYLINDER	1
10	GEN120150141	GASKET, CYLINDER	1
11	GEN380600116	PIN, DOWEL	2
12	GEN270960014	PLUG , SPARK F7RTC	1
13	GEN380180092	BOLT, STUD,I N	2
14	GEN380180099	BOLT, STUD, EX. M8×54	2
15	GEN380741374	TUBE, BREATHER	1
16	GEN160720011	CYLINDER TEMPERATURE SENSOR	1

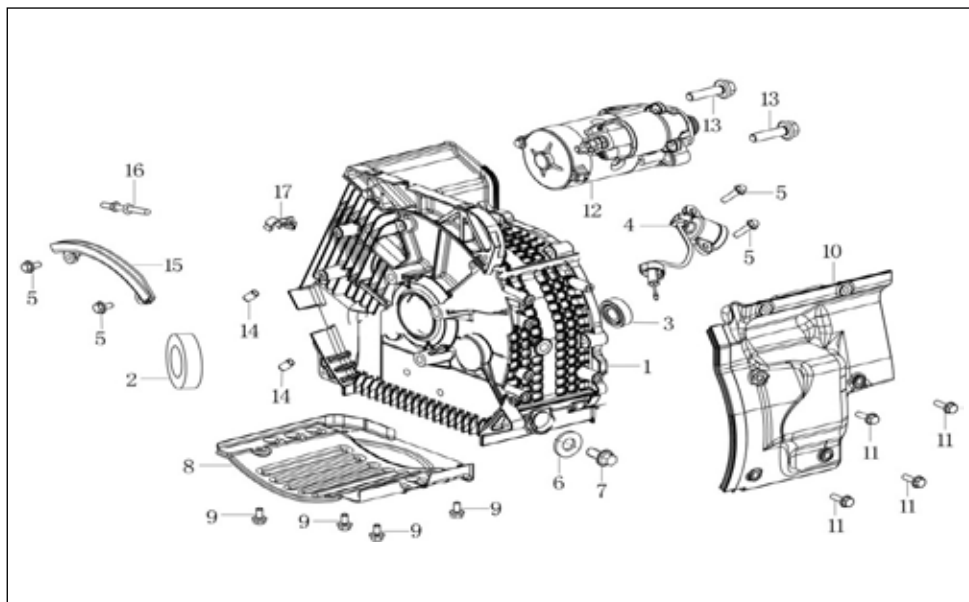


CRANKCASE

Ser.No	P/N Maxima	Description	Quantity
1	GEN110810406	CRANK CASE	1
2	GEN380650337	OIL SEAL 35×52×7	1
3	GEN380630099	BEARING 6202	1
4	GEN281850152	SWITCH ASSY., OIL LEVEL	1
5	GEN380140013	BOLT ,FLANGE M6×16	4
6	GEN380450516	WASHER, DRAIN PLUG	1
7	GEN110260024	BOLT, DRAIN PLUG	1
8	GEN160200079	BOTTOM, GUARD SHIELD	1
9	GEN380140037	BOLT, FLANGE M6×10	4
10	GEN160190128	SHROUD COMP	1
11	GEN380140077	BOLT, FLANGE M6×20	4
12	GEN270360153	STARTER MOTOR	1
13	GEN380140126	BOLT, FLANGE M10×40	2
14	GEN380600117	PIN, DOWEL 10×14	2
15	GEN110480051	PLATE	1
16	GEN380850016	BOLT, STUD	1
17	GEN380930085	LOCATION CABLE CLIP	1

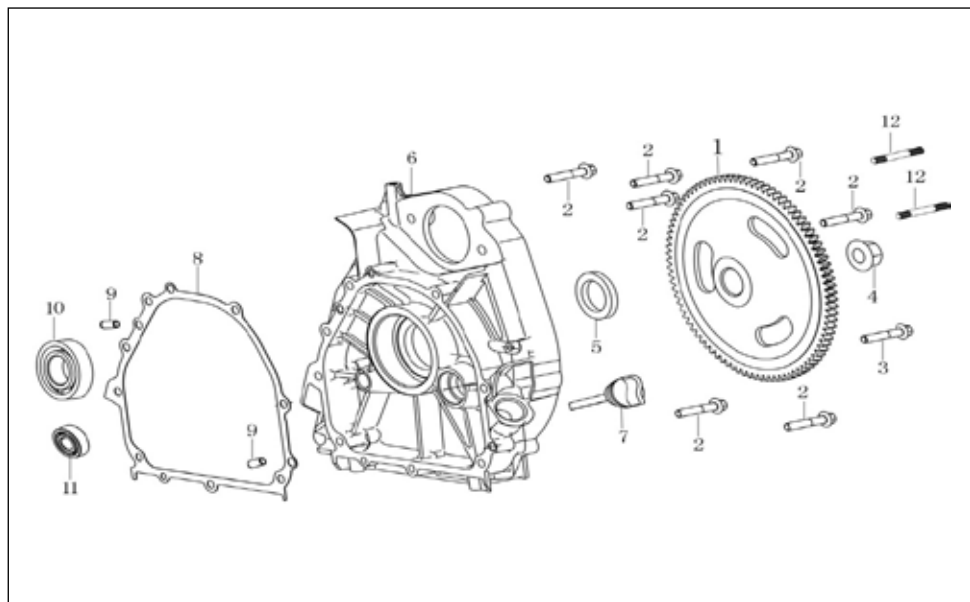


CRANKCASE COVER

Ser.No	P/N Maxima	Description	Quantity
1	GEN270020428	FLYWHEEL COMP	1
2	GEN380140005	BOLT, FLANGE M8×40	7
3	GEN380140149	BOLT, FLANGE M8×60	1
4	GEN380370050	NUT, FLANGE M16	1
5	GEN380650337	OIL SEAL 35×52×7	1
6	GEN110820245	COVER, CRANKCASE	1
7	GEN110690098	CAP ASSY	1
8	GEN110830073	PACKING, CASE COVER	1
9	GEN380600119	PIN, DOWEL 8×12	2
10	GEN380630665	BEARING 6307	1
11	GEN380630099	BEARING 6202	1
12	GEN380180205	BOLT, STUD M8×58	2

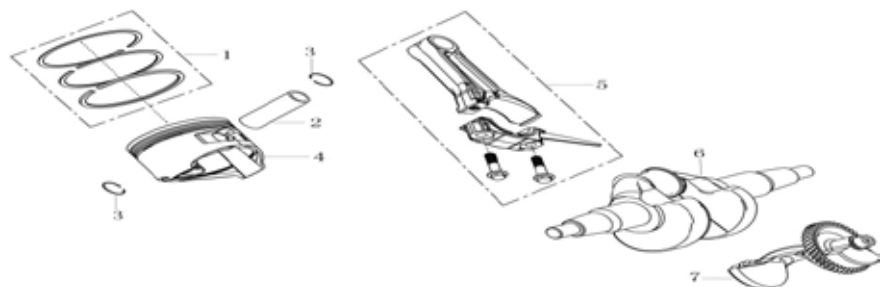


CRANKSHAFT/PISTON			
Ser.No	P/N Maxima	Description	Quantity
1	GEN130070281	RING SET	1
2	GEN130060034	PIN, PISTON	1
3	GEN380560057	CLIP, PISTON PIN	2
4	GEN130030233	PISTON	1
5	GEN130150049	ROD ASSY., CONNECTING	1
6	GEN130290663	CRANKSHAFT COMP	1
7	GEN130450016	WEIGHT, BALANCER	1

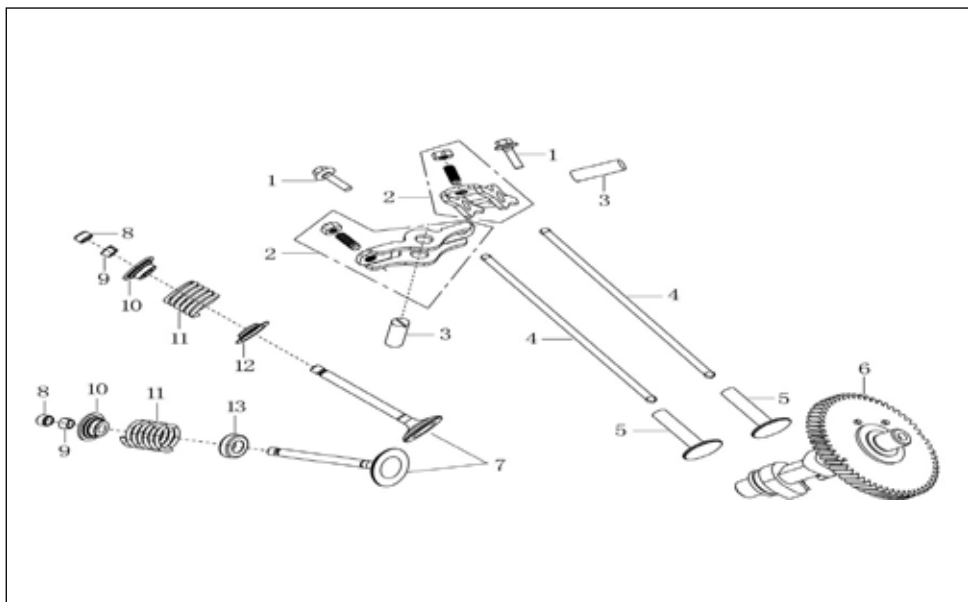


ROCKER, CAMSHAFT

Ser.No	P/N Maxima	Description	Quantity
1	GEN380140077	BOLT, FLANGE M6×20	2
2	GEN140450069	ARM COMP.	2
3	GEN140510059	VALVE ROCKER SHAFT	2
4	GEN140670017	ROD, PUSH	2
5	GEN140690004	LIFTER VALVE	2
6	GEN140020109	CAMSHAFT ASSY.	1
7	GEN500550063	VALVE COMP.	1
8	GEN140320002	ROTATOR, VALVE	2
9	GEN140390015	VALVE LOCKER	4
10	GEN140380021	RETAINER, VALVE SPRING	2
11	GEN140340025	SPRING, VALVE	2
12	GEN140360010	SEAT, VALVE SPRING	1
13	GEN140400012	SEAL, GUIDE	1

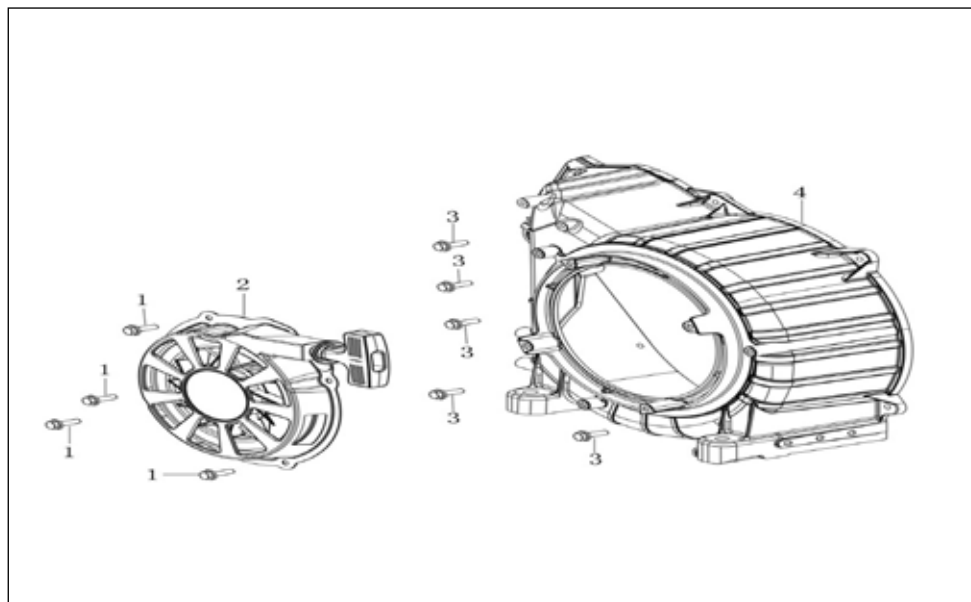


STARTER SUBASSEMBLY


Ser.No	P/N Maxima	Description	Quantity
1	GEN380140037	BOLT ,FLANGE M6x10	4
2	GEN193500161	STARTER ASSY.	1
3	GEN380140077	BOLT ,FLANGE M6x20	5
4	GEN160210171	FAN COVER	1

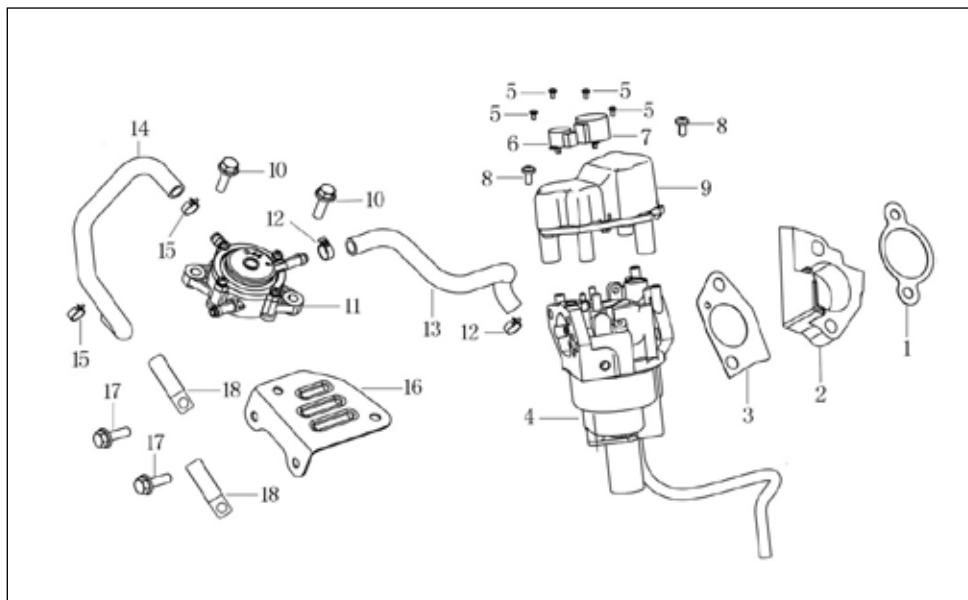


CARBURETOR			
Ser.No	P/N Maxima	Description	Quantity
1	GEN170430217	PACKING, INSULATOR	1
2	GEN170440116	INSULATOR,CARBURETOR	1
3	GEN170430218	PACKING., CARBURETOR	1
4	GEN170022128	CARBURETOR	1
5	GEN380200069	SCREW, M3X5	4
6	GEN660910003	SPEED VARIABLE STEPPER MOTOR	1
7	GEN660910007	SPEED VARIABLE STEPPER MOTOR	1
8	GEN380200046	SCREW, TAPPING , M4x12	2
9	GEN660920010	BRACKET, ELECTROMOTOR	1
10	GEN380140013	BOLT, FLANGE M6x16	2
11	GEN170460019	FUEL PUMP ASSY	1
12	GEN380960155	CARD HOOP COMBINATION	2
13	GEN380741375	TUBE, BREATHER	1
14	GEN380751067	TUBE, FUEL	1
15	GEN380960120	CARD HOOP COMBINATION	2
16	GEN170470020	BRACKET, FUEL PUMP	1
17	GEN380140037	BOLT, FLANGE M6x10	2
18	GEN380940346	STRAP CLAMP	2

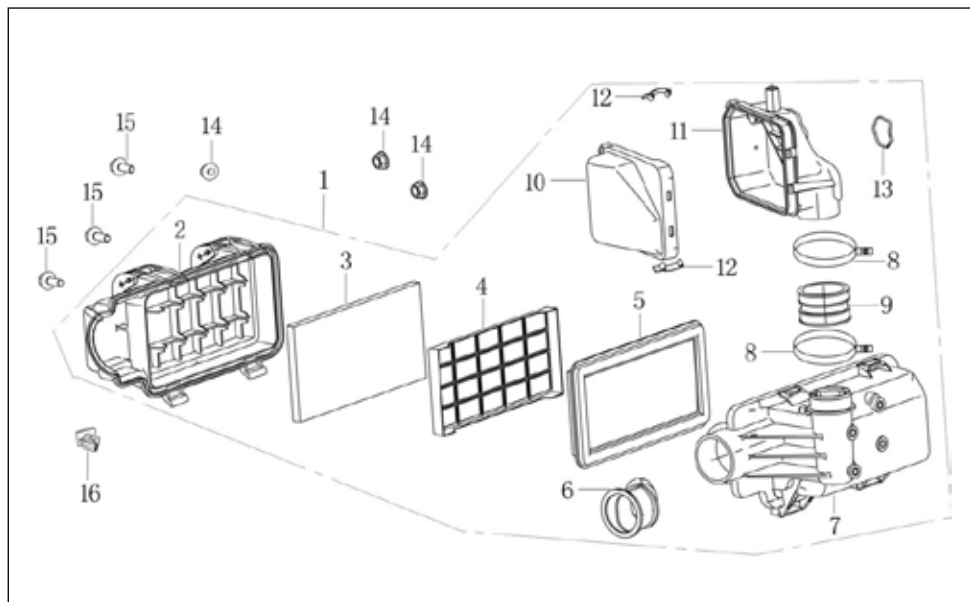

AIR CLEANER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN180021005	AIR CLEANER	1
2	GEN180070288	COVER, AIR CLEANER	1
3	GEN180130334	ELEMENT, AIR CLEANER	1
4	GEN183010015	AIR FILTER ELEMENT SUPPORT PLATE	1
5	GEN180100122	ELEMENT, AIR CLEANER ASSY.	1
6	GEN180160018	AIR INLET LINKER	1
7	GEN180280154	BASE, AIR CLEANER	1
8	GEN380960273	CARD HOOP COMBINATION	2
9	GEN180180213	AIR INLET LINKER	1
10	GEN180070287	COVER, AIR CLEANER	1
11	GEN180280153	BASE, AIR CLEANER	1
12	GEN381760015	SPRING BUCKLE	2
13	GEN170430220	SEAL RING	1
14	GEN380370048	NUT, FLANGE, M6	3
15	GEN380140077	BOLT, FLANGE M6x20	3
16	GEN380930121	LOCATION CABLE CLIP	1

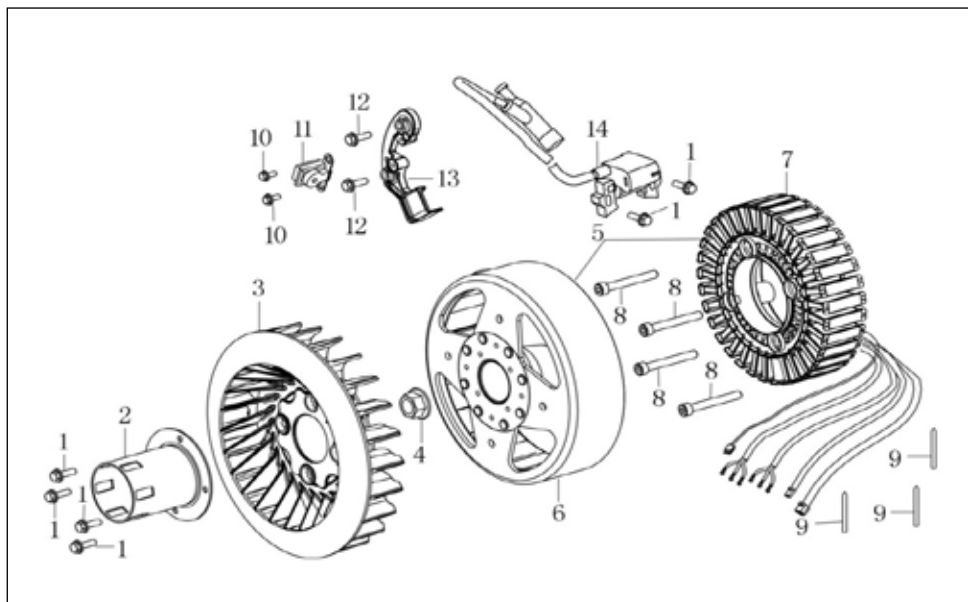


ROTOR.STATOR			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380140077	BOLT, FLANGE M6×20	6
2	GEN193590042	PULLEY, STARTER	1
3	GEN160180047	FAN COOLING	1
4	GEN380370050	NUT SPECIAL, M16	1
5	GEN660080577	ALTERNATOR ASSY.	1
6	GEN660110118	MOTOR ROTOR	1
7	GEN660100175	MOTOR STATOR	1
8	GEN380140149	BOLT, FLANGE M8×60	4
9	GEN380900062	STRAP	3
10	GEN380140332	BOLT, FLANGE M5×10	2
11	GEN270140021	TRIGGER	1
12	GEN380140103	BOLT, FLANGE M6×25	2
13	GEN662840001	TRIGGER BRACKET	1
14	GEN271000271	IGNITION	1

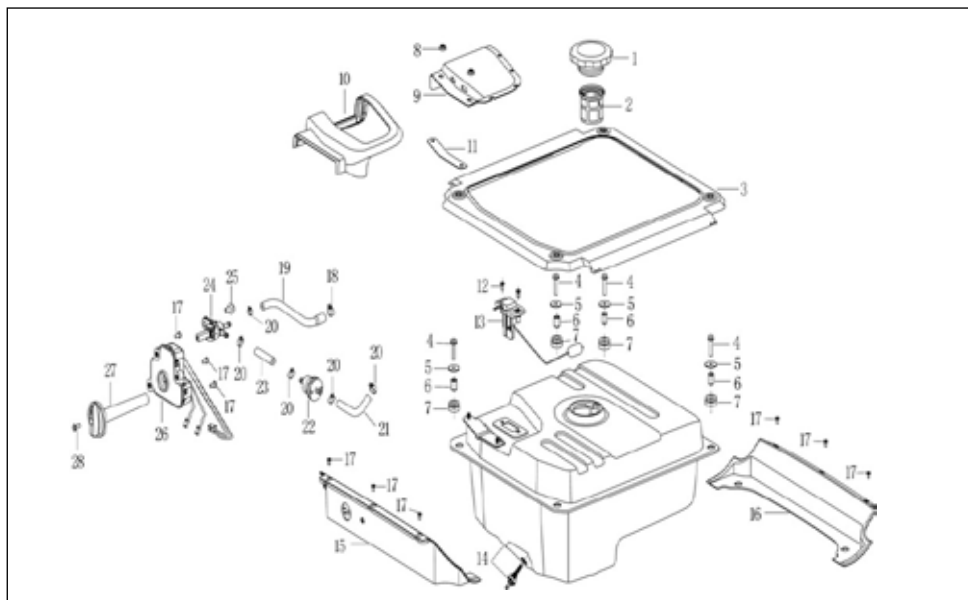


FUEL TANK			
Ser.No	P/N Maxima	Description	Quantity
1	GEN170870106	CAP COMP., FUEL FILLER	1
2	GEN170720014	FILTER, FUEL TANK	1
3	GEN380841189	SEAL RING, FUEL TANK	1
4	GEN380140054	BOLT, FLANGE, M6×30	4
5	GEN380451268	WASHER, FLAT	4
6	GEN170710026	COLLAR, TANK CUSHION	4
7	GEN170700050	RUBBER, FUEL CUSHION	4
8	GEN380370048	NUT, FLANGE, M6	2
9	GEN662830001	FUEL LEVEL SENSOR COVER PLATE	1
10	GEN380841192	SEAL RING	1
11	GEN110480052	PRESS PLATE	1
12	GEN380220009	SCREW, FLAT, 5×16	2
13	GEN281850346	METER COMP., FUEL	1
14	GEN170501409	TANK COMP., FUEL	1
15	GEN343210045	TANK DECORATION COVER, FRONT	1
16	GEN343210046	TANK DECORATION COVER, BACK	1
17	GEN380690017	SCREW FLAT MAT COMBINATION	9
18	GEN380960155	CARD HOOP COMBINATION	1
19	GEN380751072	TUBE, FUEL	1


20	GEN380960170	CARD HOOP COMBINATION	5
21	GEN380751064	TUBE, FUEL	1
22	GEN170010016	FUEL FILTERS	1
23	GEN380750746	TUBE, FUEL	1
24	GEN170980135	COCK COMP., FUEL	1
25	GEN380140011	BOLT, FLANGE, M6×10	1
26	GEN661920020	COMBINED SWITCH PARTS	1
27	GEN173260011	OIL SWITCH KNOB	1
28	GEN381210035	SCREW M4x18	1

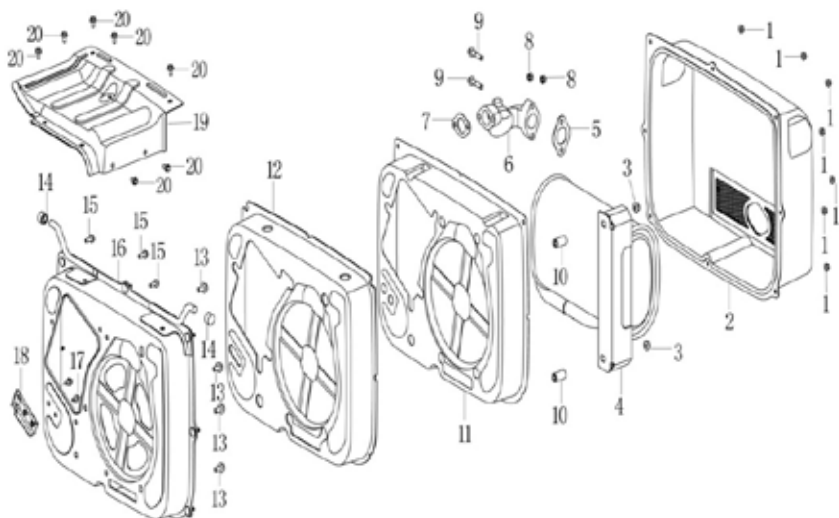

MUFFLER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380370048	NUT,FLANGE, M6	7
2	GEN180960228	MUFFLER COVER, BACK	1
3	GEN380370007	NUT,FLANGE, M8	2
4	GEN180572388	MUFFLER COMP	1
5	GEN180660091	GASKET,EX.PIPE	1
6	GEN180590343	PIPE COMP., EX	1
7	GEN180650005	GASKET, MUFFLER	1
8	GEN380390033	NUT M8	2
9	GEN380140759	BOLT, FLANGE M10×40	2
10	GEN380823669	BUSHING	2
11	GEN182090014	MUFFLER INSULATION BOARD	1
12	GEN182190006	HEAT INSULATION COTTON (GLASS FIBER)	1
13	GEN380140009	BOLT, FLANGE, M8×12	4
14	GEN290340060	RUBBER BUFFER	2
15	GEN380140013	BOLT, FLANGE, M6×16	3
16	GEN180960227	MUFFLER COVER, FRONT	1
17	GEN380140039	BOLT, FLANGE, M6×8	2
18	GEN181930032	CARBON TANK BRACKET	1
19	GEN182000049	MUFFLER REINFORCEMENT PLATE	1
20	GEN380140209	BOLT, FLANGE, M6×14	7

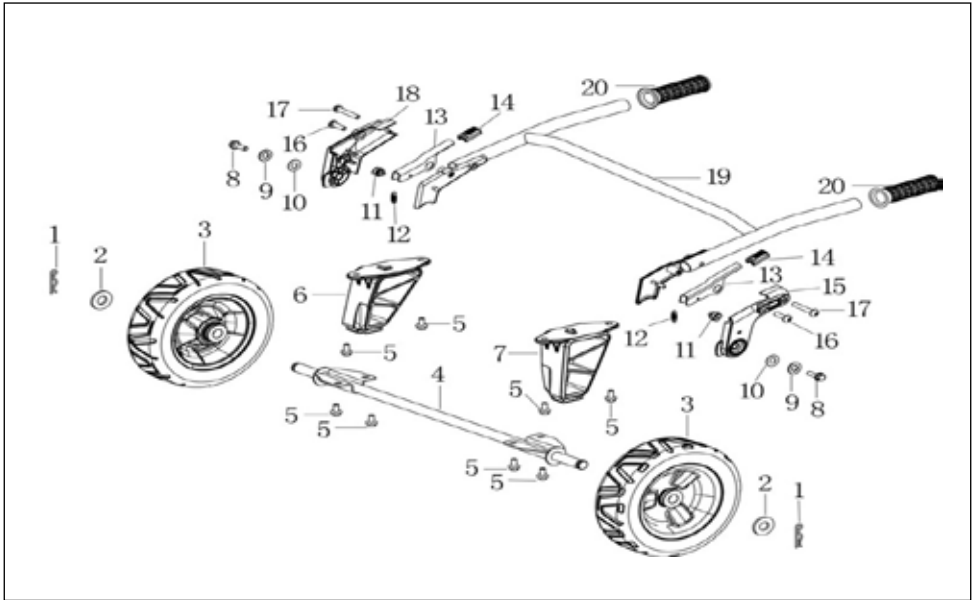


HANDLE KIT			
Ser.No	P/N Maxima	Description	Quantity
1	GEN381350015	PIN, LOCK	2
2	GEN380451231	WASHER, FLAT	2
3	GEN660690063	WHEEL COMP.	2
4	GEN660730071	AXLE PIN	1
5	GEN380140108	BOLT, FLANGE, M8×16	8
6	GEN300800054	BRACKET, SHOCK ABSORBER	1
7	GEN300800053	BRACKET, SHOCK ABSORBER	1
8	GEN380100056	BOLT, M8×26	2
9	GEN380450824	WASHER, FLAT	2
10	GEN380510011	WASHER	2
11	GEN320750024	HANDLE PIPE LIMIT BLOCK	2
12	GEN381140628	TENSION SPRING	2
13	GEN192530001	LOCKING HANDLE	2
14	GEN320180285	RUBBER JACKET	2
15	GEN320050117	CONNECTION SEAT	1
16	GEN380190116	INNER SIX ANGLE SCREW	2
17	GEN380190506	INNER SIX ANGLE SCREW	2
18	GEN320050116	CONNECTION SEAT	1
19	GEN320400086	PIPE, HANDLE	1
20	GEN320180206	RUBBER JACKET	2

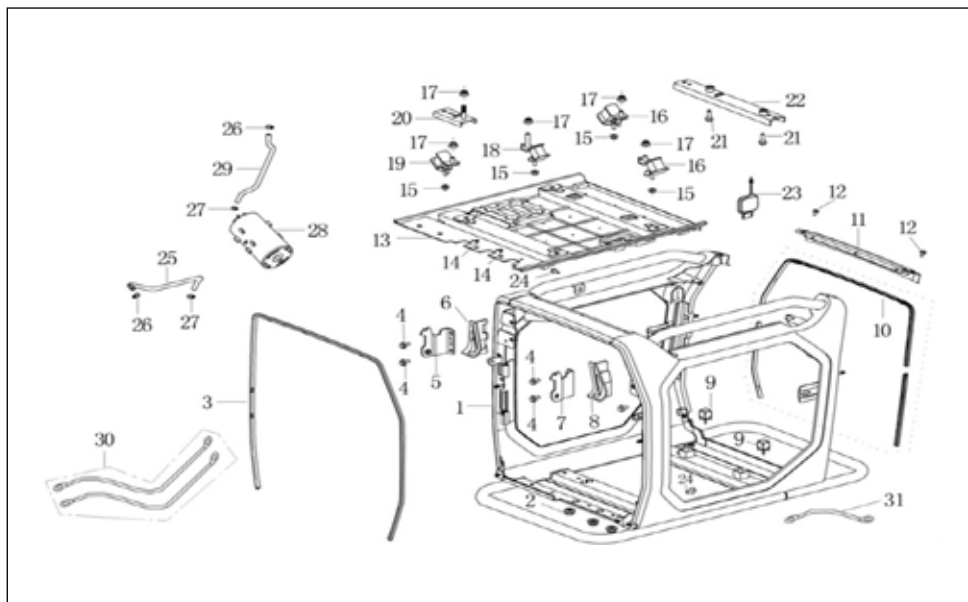

FRAME			
Ser.No	P/N Maxima	Description	Quantity
1	GEN300720631	FRAME COMP	1
2	GEN290340059	RUBBER BUFFER	3
3	GEN380841183	SEAL RING, FRAME FRONT PART	1
4	GEN380140108	BOLT, FLANGE, M6×16	4
5	GEN320420043	HANDPIPE CONNECTION BRACKET,LEFT	1
6	GEN380841193	SEAL RING	1
7	GEN320420044	HANDPIPE CONNECTION BRACKET,RIGHT	1
8	GEN380841194	SEAL RING	1
9	GEN290340062	RUBBER BUFFER	2
10	GEN380841184	SEAL RING, FRAME BACK PART	1
11	GEN300730054	FRAME CROSS GEAR	1
12	GEN380190150	BOLT,M6×12	2
13	GEN303240009	MOTHERBOARD	1
14	GEN380690017	SCREW FLAT MAT COMBINATION	2
15	GEN380370007	NUT,FLANGE M8	4
16	GEN300780040	RUBBER, SHOCK ABSORBER	2
17	GEN380370026	NUT,FLANGE M10	5
18	GEN300780042	RUBBER, SHOCK ABSORBER	1
19	GEN300780041	RUBBER, SHOCK ABSORBER	1


GENEMAX 7000 IS

20	GEN341950030	ENGINE SUPPORT PLATE (FRONT)	1
21	GEN380140125	BOLT, FLANGE, M8×25	2
22	GEN341950031	ENGINE SUPPORT PLATE (BACK)	1
23	GEN662690002	OIL RELEASING RUBBER	1
24	GEN380140011	BOLT, FLANGE, M6×10	3
25	GEN181940100	TUBE, CARBON CANISTER	1
26	GEN380960155	CARD HOOP COMBINATION	2
27	GEN380960170	CARD HOOP COMBINATION	2
28	GEN181920044	CARBON CANISTER ASSY.	1
29	GEN181940099	TUBE, CARBON CANISTER	1
30	GEN272980022	GROUND WIRE	1
31	GEN272980023	GROUND WIRE	1

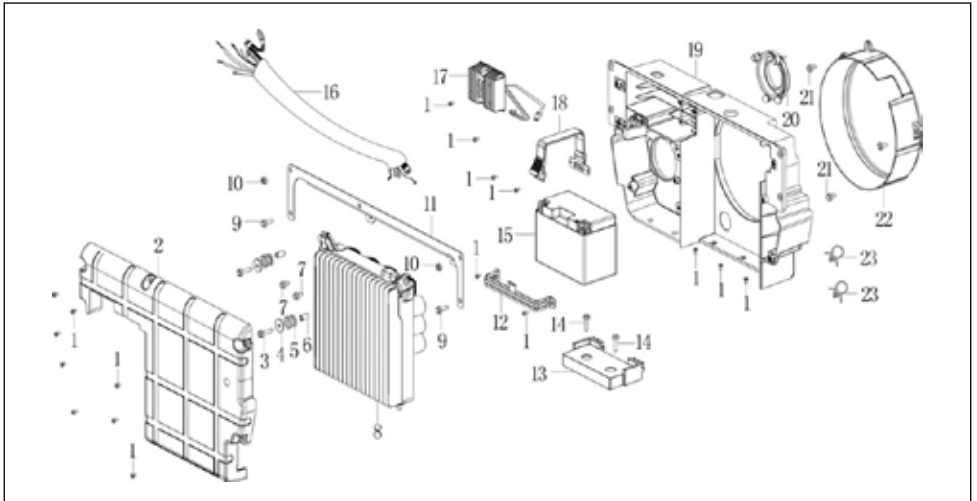


INVERTER ASSY

Ser.No	P/N Maxima	Description	Quantity
1	GEN380690017	SCREW FLAT MAT COMBINATION	17
2	GEN661880013	WIND GUIDER, FRONT	1
3	GEN380140024	BOLT, FLANGE, M6×28	2
4	GEN380450444	WASHER, FLAT	2
5	GEN290340061	RUBBER BUFFER	2
6	GEN380823668	BUSHING	2
7	GEN380140011	BOLT, FLANGE, M6×10	2
8	GEN660900110	INVERTER ASSY.	1
9	GEN380140077	BOLT, FLANGE M6×20	2
10	GEN380370048	NUT, FLANGE, M6	2
11	GEN661930012	INVERTER BRACKET	1
12	GEN339170004	STORAGE BATTERY BRACKER	1
13	GEN272320080	RUBBER	1
14	GEN380140103	BOLT, FLANGE M6×25	2
15	GEN271060420	BATTERY	1
16	GEN272040169	HARNESS ASSY.WIRE	1
17	GEN272900042	BATTARY CHARGER	1
18	GEN380900284	HOOP	1
19	GEN661880014	WIND GUIDER, BACK	1
20	GEN380841188	SEAL RING,AIR FILTER	1
21	GEN380140013	BOLT, FLANGE M6×16	3
22	GEN661880015	WIND GUIDER	1
23	GEN380930027	LOCATION CABLE CLIP	2

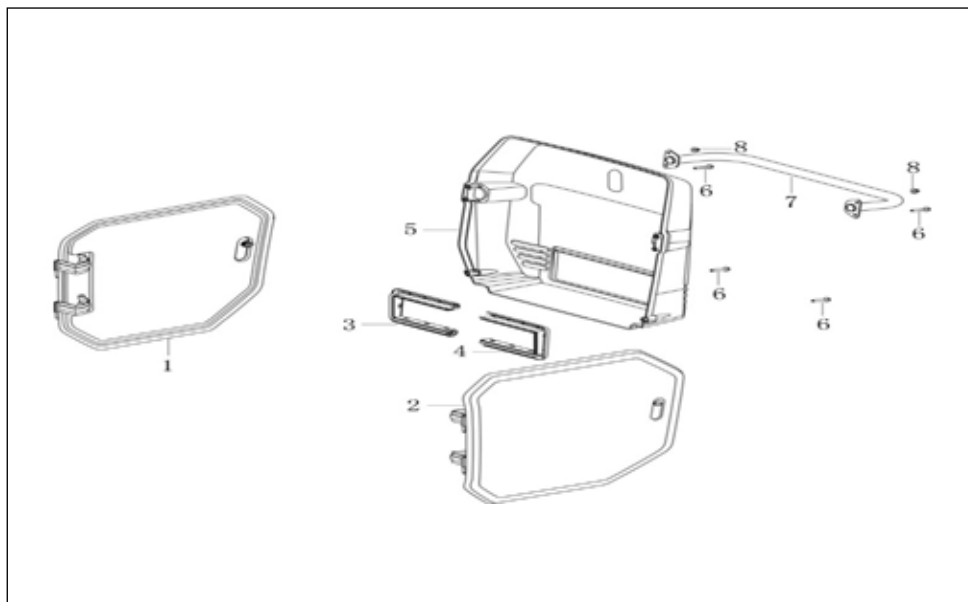

APPEARANCE COVER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN661860011	LEFT APPEARANCE COVER PLATE	1
2	GEN661870010	RIGHT APPEARANCE COVER PLATE	1
3	GEN380841191	SEAL RING, SHIELD OUTLET (RIGHT)	1
4	GEN380841190	SEAL RING, SHIELD OUTLET (LEFT)	1
5	GEN303060010	FRAME SHIELD	1
6	GEN380140100	BOLT, FLANGE M6x35	4
7	GEN320400085	PIPE, HANDLE	1
8	GEN380330054	NUT M6	2

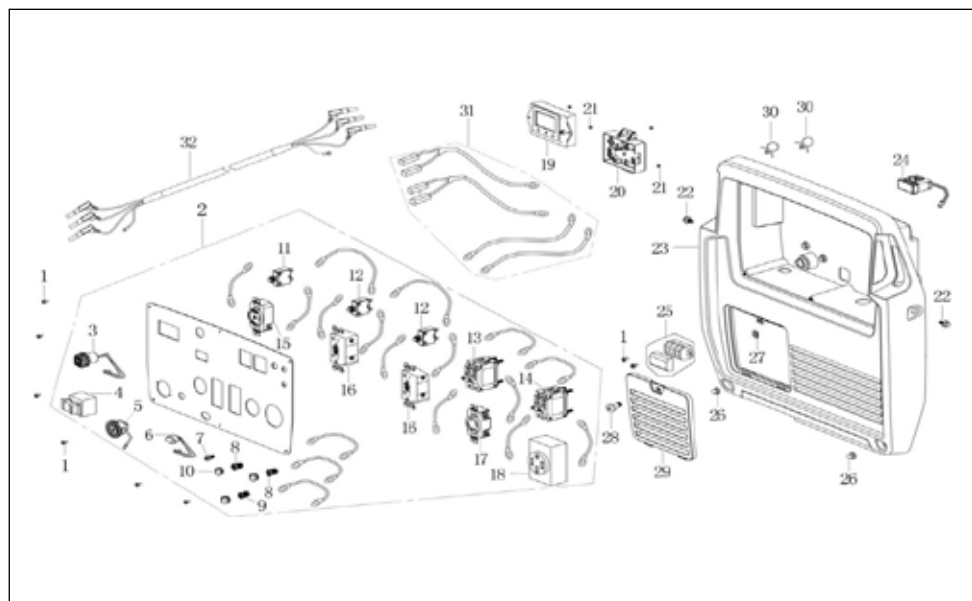

CONTROL PANEL			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380690017	SCREW FLAT MAT COMBINATION	8
2	GEN271852717	CONTROL PANEL ASSY	1
3	GEN284700010	USB/AUX	1
4	GEN271940008	VOLTAGE SELECTOR SWITCH	1
5	GEN271810066	ENGINE SWITCH	1
6	GEN173400004	IDLING SWITCH	1
7	GEN272030008	GROUND BOLT	1
8	GEN381070011	GRID SOCKET (RED)	2
9	GEN381070011	GRID SOCKET (BLACK)	1
10	GEN273330006	GRID SOCKET WATERPROOF GLUE SETS	3
11	GEN271290026	CIRCUIT BREAKER	1
12	GEN271290025	CIRCUIT BREAKER	2
13	GEN271290044	CIRCUIT BREAKER	1
14	GEN271290205	CIRCUIT BREAKER	2
15	GEN271890024	POWER SOCKET COMBINATION	1
16	GEN271890005	POWER SOCKET COMBINATION	2
17	GEN271890007	POWER SOCKET COMBINATION	1
18	GEN271890097	POWER SOCKET COMBINATION	1
19	GEN273140013	DIGITAL DISPLAY METER	1
20	GEN271810059	CONTROL SWITCH, START	1
21	GEN380370047	NUT,FLANGE, M4	4
22	GEN380100055	BOLT	2
23	GEN271970038	PANEL SEAT	1
24	GEN272490024	FUSE BOX ASSEMBLY	1
25	GEN271240004	LINE CONNECTION	1
26	GEN380330054	NUT M6	2
27	GEN380420041	NUT	1
28	GEN381810002	SCREWS	1
29	GEN662460003	STORAGE BATTERY MAINTENANCE COVER	1
30	GEN380930027	LOCATION CABLE CLIP	2
31	GEN271280203	CONNECTING WIRE	1
32	GEN661050009	POWER OUTPUT LINE COMBINATION	1



EC DECLARATION OF CONFORMITY


For the following machinery:

Product name: GENEMAX 7000 IS
 Commercial name: GENEMAX 7000 IS
 Function: Low-power generating set
 Type: Gasoline
 Model number: GENEMAX7000IS
 Serial number: --

is herewith confirmed to fulfill all the relevant provisions of

- Machinery Directive (2006/42/EC)

and the following harmonized standard have been complied with:

- EN ISO 8528-13:2016

is herewith confirmed to fulfill all the relevant provisions of

- Electromagnetic Compatibility Directive (2014/30/EU)

and the following harmonized standard have been complied with:

- EN 61000-6-1:2007; EN 55012:2007+A1

is herewith confirmed to fulfill all the relevant provisions of

- Noise Emission Directive by equipment for use outdoors (2000/14/EC + 2005/88/EC)

MODEL	Measured sound power level dB(A)	Guaranteed sound power level dB(A)
GENEMAX3000IS, GENEMAX3500IS	87	88
GENEMAX7000IS	90	92
GENEMAX3500IO	95	96

Responsible for marking this declaration is the


Manufacture's Name : MAXIMA S.p.A.
 Manufacturer's Address : Via G. Matteotti, 6 - 42028 Poviglio RE - Italy

Person responsible for compiling the technical files established within the EU

Name, Surname : MAXIMA S.p.A.
 Address : Via G. Matteotti, 6 - 42028 Poviglio RE - Italy

Person responsible for making this declaration

Name, Surname : Mirco Dall'Olio
 Position/Title : Presidente e AD
 Place : Poviglio
 Date : 2022-05-18

 (signature)

