



**MAXIMA®**  
ONLY FOR REAL PROFESSIONALS



**GENEMAX 3500 IS**


**User Manual**

**SERIAL NUMBER M**



# INVERTER GENERATOR Owner's Manual

GENEMAX 3500 IS

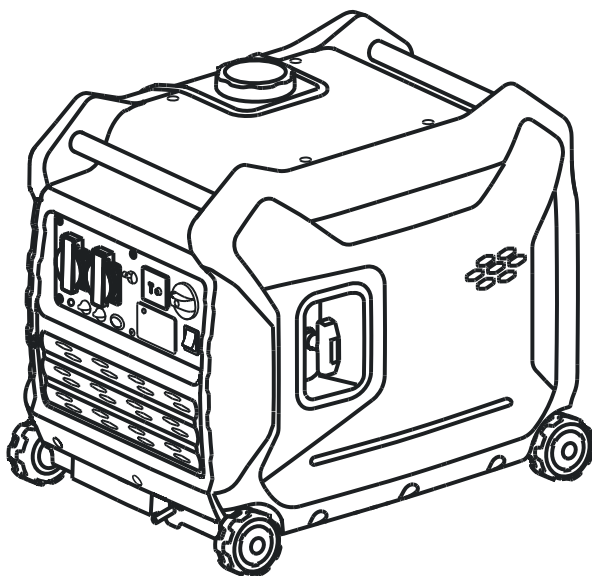

Tips—read this manual carefully before operating this generator.





**Save this operating manual properly and carry it with the generator for the convenience of emergency query in the future. This manual constitutes one permanent element of the generator. This manual shall be provided along with the generator set when you lend or resell it.**

**Relevant information and technical specifications defined in this manual take effect when printing is approved, with the contents based on the equipment in production at time of publication. Manufacturer reserves the rights to modify and improve any parts described in the text without prior notice.**

Original instruction

# Contents

1	Foreward	07
2	Safety Information	08-14
3	Control Function	15-21
4	Pre-operation	22-23
5	Operation	24-30
6	Application Range	31
7	Maintenance	32-38
8	Storage	39
9	Troubleshooting	40
10	Parameters	41
11	Electrical Schematic Diagram	42-45

## 1

# Foreward

## Inverter Generator Owner's Manual

## Foreward


Thank you for purchasing a generator. We recommend that the operator read this manual carefully before use this generator, and fully comprehend all requirements and operating procedure concerning the generator. In case of any questions about this manual, contact the recent authorized dealer for startup, operation, maintenance program and so on. The technician will teach you how to use the generator in a correct and safe manner. We also recommend that the operator consult startup and operating procedure of this generator when buying it.

## Safety precautions

This generator will work in a safe, effective and reliable way only when it is kept, operated and maintained properly. Before operation or maintenance of the generator, the operator should:

- Know well and strictly observe local laws and regulations.
- Read and observe all safety warnings in this manual and on the device.
- Let your family get familiar with all safety warnings in this manual.

It is impossible for manufacturers to predict all hazardous circumstances that may occur, for this reason, warnings in this manual and caution signs on the generator set may not cover all hazardous circumstances. If we do not give extra cautions for operating procedures, methods or techniques, operate the generator in such ways that helps guarantee personal safety, make sure no damage to generator set arises there from.

To make sure safe operation, Please read carefully three vital safety warnings in this manual and on the generator, preceded by a safety alert symbol  including:

### DANGER

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

### WARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

### CAUTION

You CAN be HURT if you don't follow instructions.

### NOTICE

Your generator or other property could be damaged if you don't follow instructions.

## 2

# Safety Information

Inverter Generator Owner's Manual

## Safety Information

**⚠ DANGER**

Do not use it indoors.

**⚠ DANGER**

Keep the machine clean and avoid spilt combustibles including gasoline on it.

**⚠ WARNING**

Do not use it in a wet condition.

## 2

# Safety Information

## Inverter Generator Owner's Manual




### ⚠ WARNING

Turn the generator "OFF" when add fuel.



### ⚠ WARNING

Don't add fuel near the flammable thing or cigarette.

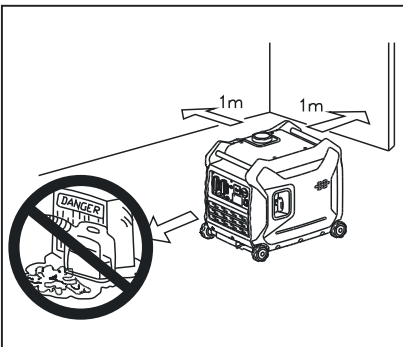

### ⚠ WARNING

Keep children and pets away from the area of operation. Do not place flammable objects close to the outlet valve when generator operation. Keep it at least 1m away from inflammables.

## 2

# Safety Information

## Inverter Generator Owner's Manual



### ⚠ WARNING

The generating set must not be connected to other power sources, such as the power company supply main.

Protection against electrical shock depends on circuit breaker specially matched to the generating set.

Due to high mechanical stresses only, tough rubber-sheathed flexible cable (in accordance with ICE 245 or the equivalent) should be used.


When using extension lines or mobile distribution networks the total length of lines for a cross section of  $1.5 \text{ mm}^2$  should not exceed 60 m; for a cross section of  $2.5 \text{ mm}^2$  this should not exceed 100 m.

Electrical equipment (including lines and plug connections) should not be defective.

## 2

# Safety Information

## Inverter Generator Owner's Manual

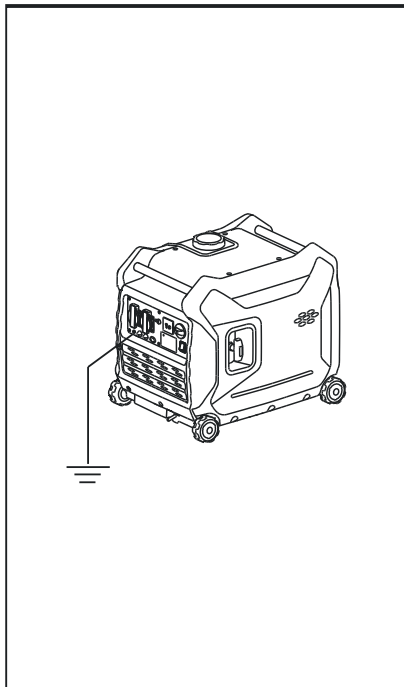

### ⚠ WARNING

**It must realize safe grounding.**

#### NOTICE


**Use the ground wire with enough electric flux.**

Ground wire diameter : 0.12mm/A  
EX:10A-1.2mm

There is a permanent conductor between the generator (stator winding) and the frame.

The generator (stator winding) is isolated from the frame and from the ac receptacle ground pin.

Electrical devices that require a grounded receptacle pin connection will not function if the receptacle ground pin is not functional.

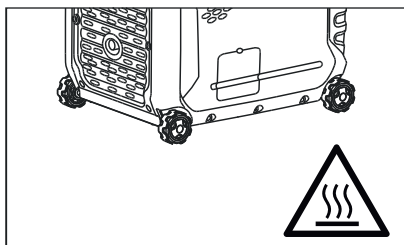

### ⚠ WARNING

**The generator surface has high temperature, avoid scalding.  
Pay attention to the warnings on the generating set.**

## Connection to a home power supply


If the generator is to be connected to a home power supply as a standby, connection shall be performed by a professional electrician or by another person with proficient electrical skill.

When the loads are connected to the generator, please carefully check whether electrical connections are safe and reliable. Any improper connection may cause damage to the generator, or cause a fire.

## 2

# Safety Information

## Inverter Generator Owner's Manual

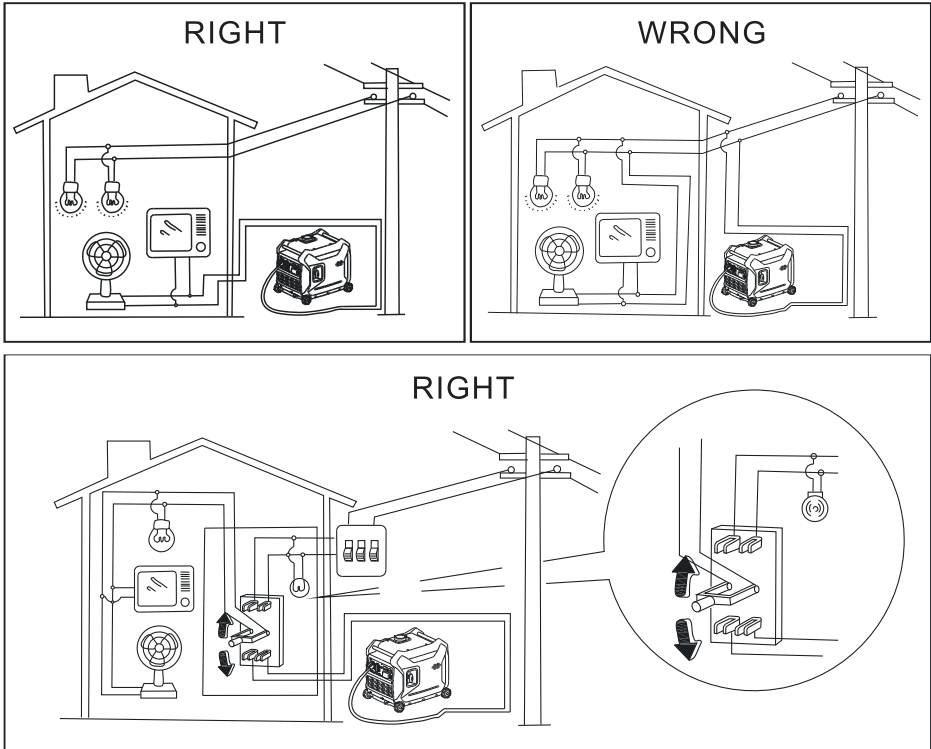

If the generator is to be connected to a home power supply as a standby, connection shall be performed by a professional electrician or by another person with proficient electrical skill.

When the loads are connected to the generator, please carefully check whether electrical connections are safe and reliable. Any improper connection may cause or damage to the generator.

### Others

Make sure Inverter ducted fan, muffler louver and the inverter bottom side cooling well and without chips, mud and water come in. It may damage the generator, inverter or alternator if the cooling vent blocked. Do not mix the generator with other stuff if moving, storing or running the unit. It may cause generator damage or bring property safety issue when the inverter in leakage.




## 2

# Safety Information

## Inverter Generator Owner's Manual


There is the warning label on the machine to remind you of the safety regulations.

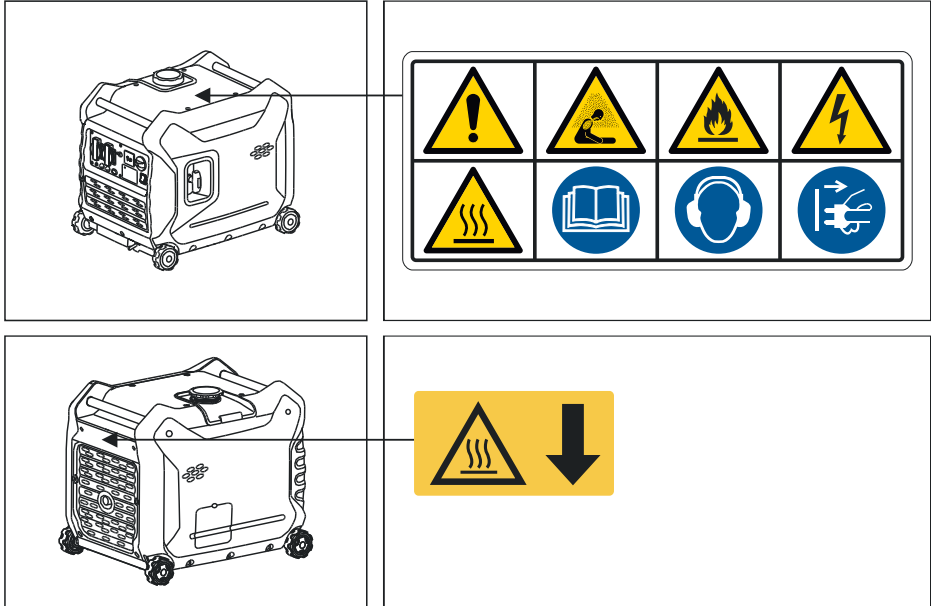

Some parts of equipment will generate high temperature during operation, which will scald skin.



Read the safety instructions before using the generator.

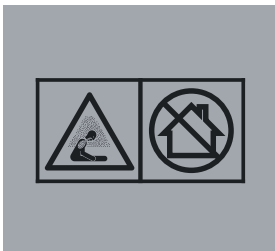

Gases such as carbon monoxide (colourless and odourless gas) are produced during operation which may lead to suffocation. Only use the generator in well-ventilated areas.

## 2

## Safety Information

### Inverter Generator Owner's Manual



Only fill the generator in well-ventilated areas and keep it away from open flames, sparks and cigarettes. Spilled fuel should be soaked up immediately.

Switch off the engine and let it cool down before filling the generator. Fuel is easily flammable and may even explode under certain circumstances.



Warning! Dangerous voltages are present when the generator is in operation.

Generator must always be switched off before performing maintenance works.



Wear ear protection when operating the generator.



Disconnect all devices from the connections before performing maintenance works, before leaving the device and after switching it off.

#### **⚠ WARNING**

- A warning reminding the user that he shall conform to regulations of electrical safety applicable to the place where the generating sets are used.
- A warning on the requirements and the precautions to be respected by the user in the case of re-supply by generating sets of an installation, depending on existing protective measures in this installation and applicable regulations.


## 3

# Control Function


## Inverter Generator Owner's Manual

## Control Function

### DESCRIPTION

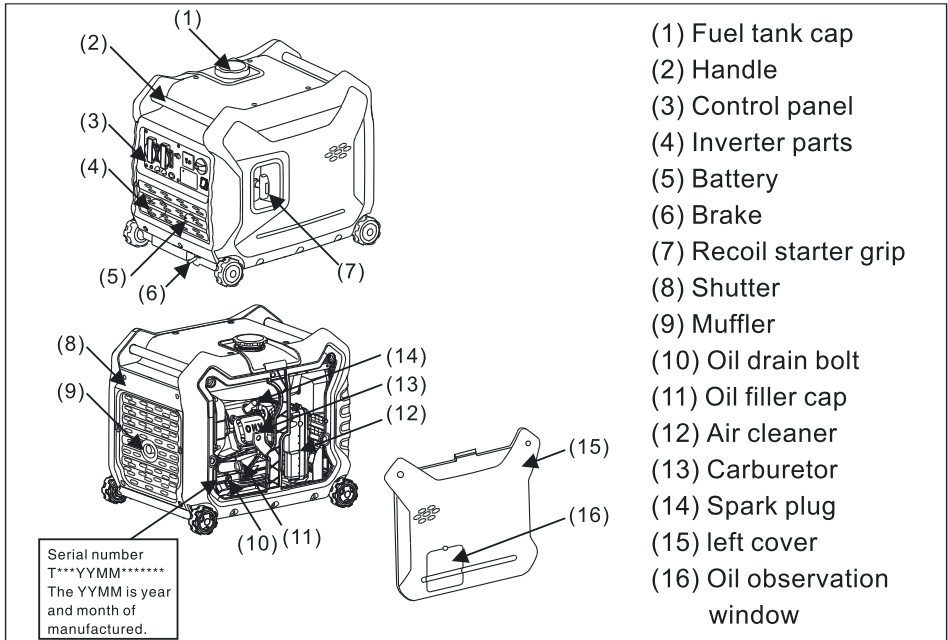

### CONTROL PANEL

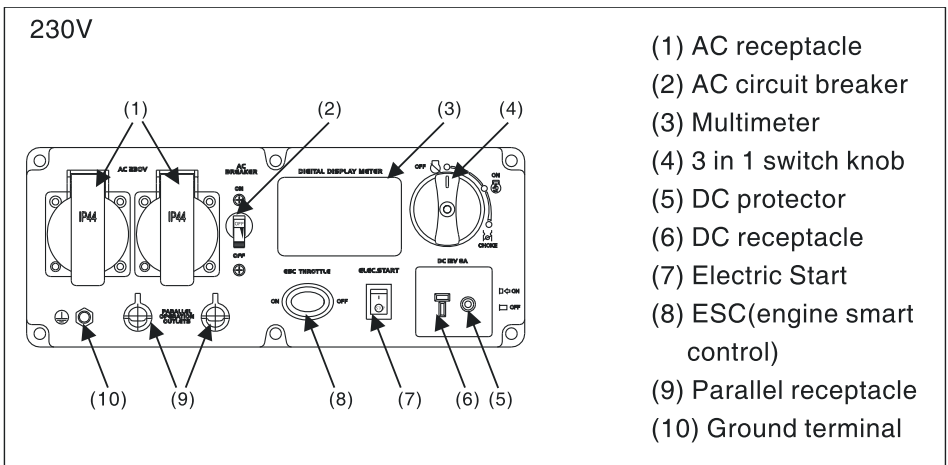


## 3

# Control Function


## Inverter Generator Owner's Manual

## 120V

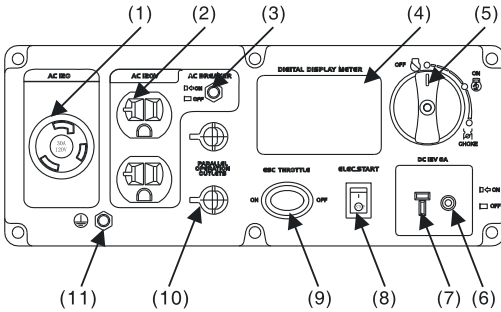

- (1) AC receptacle
- (2) AC receptacle
- (3) AC circuit breaker
- (4) Multimeter
- (5) 3 in 1 switch knob
- (6) DC protector
- (7) DC receptacle
- (8) Electric Start
- (9) ESC(engine smart control)
- (10) Parallel receptacle
- (11) Ground terminal

## 100V

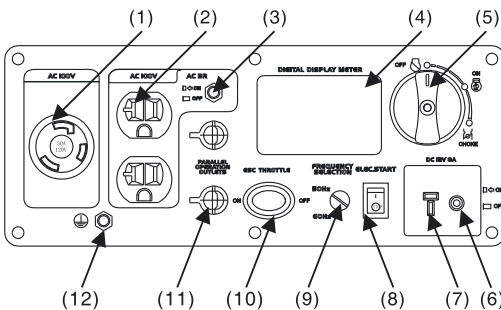


- (1) AC receptacle
- (2) AC receptacle
- (3) AC circuit breaker
- (4) Multimeter
- (5) 3 in 1 switch knob
- (6) DC protector
- (7) DC receptacle
- (8) Electric Start
- (9) FS switch
- (10) ESC(engine smart control)
- (11) Parallel receptacle
- (12) Ground terminal

## 3

# Control Function

## Inverter Generator Owner's Manual


### CONTROL FUNCTION

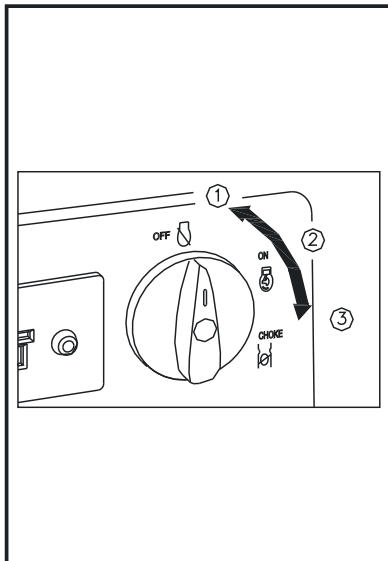

#### 3 in 1 switch knob

- ① Engine/fuel valve "OFF"; Ignition circuit is switched off. Fuel is switched off. The engine will not run.
- ② Engine switch \fuel valve \chock. "ON" Ignition circuit is switched on. Fuel is switched on. Chock is switched on. The engine can be running.
- ③ Engine switch \fuel valve \chock. "ON" Ignition circuit is switched on. Fuel is switched on. Chock is switched on. The engine can be start.

**TIP:** The chock is not required to start a warm engine.

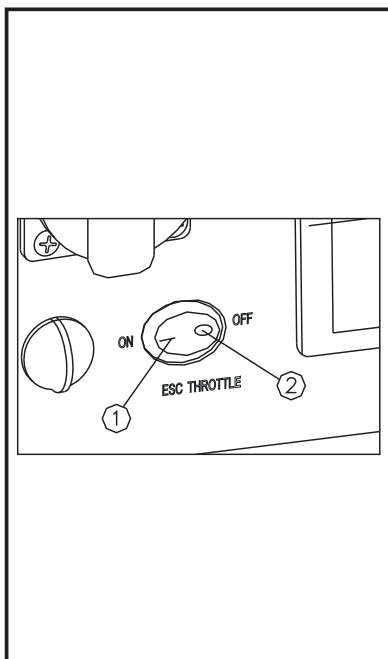

#### Engine smart control


- ① "ON"  
When the ESC switch is turned to "ON", the economy control unit controls the engine speed according to the connected load. The results are better fuel consumption and less noise.
- ② "OFF"  
When the ESC switch is turned to "OFF", the engine runs at the rated (3100r/min) Regard-less of whether is a load connected or not.

**Tip:** The ESC must be turned to "OFF" when using electric devices that require a large starting current, such as a compressor or a submersible pump.


## 3

# Control Function

## Inverter Generator Owner's Manual

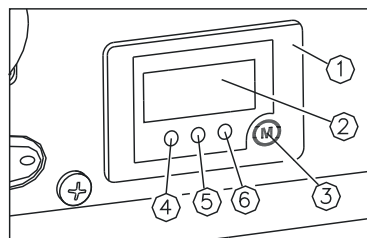

- ① Multimeter
- ② Liquid crystal display
- ③ Operating key
- ④ Oil warning light
- ⑤ Overload indicator light
- ⑥ AC pilot light

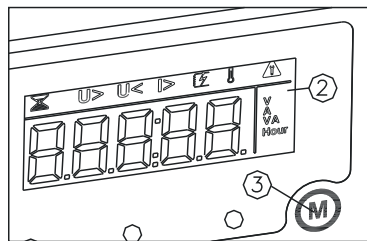

### Digital display meter


#### Liquid crystal display

Normal operation:

During the normal operation, the operation key ③ for switching the display and recycling showing: voltage-current-power-accumulative time-current time.

In case of failed operation:

- U> a: AC over voltage, indicating the character of AC (alternative indication of AC and digit)  
b: DC over voltage, indicating the character of DC (alternative indication of DC and digit)
- U< a: AC under-voltage, indicating the character of AC (alternative indication of AC and digit)  
b: DC under-voltage, indicating the character of DC (alternative indication of DC and digit)
- I> Output over current of generator
- ⚡ Output short circuit of generator
- 🔥 Over heat of generator
- ⚠ Maintenance time

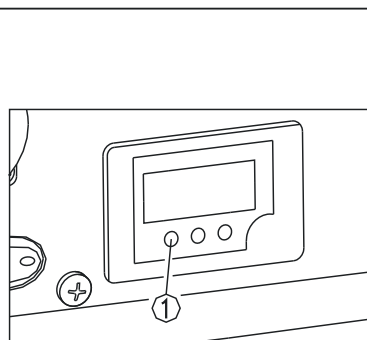

### Oil warning light


When the oil level falls below the lower level, the oil warning light comes on and then the engine stops automatically. Unless you refill with oil, the engine will not start again.

**Tip:** If the engine stalls or does not start, turn the engine switch to “ON” and then pull the recoil starter. If the oil warning light flickers for a few seconds, the engine oil is insufficient. Add oil and restart.

## 3

## Control Function

### Inverter Generator Owner's Manual

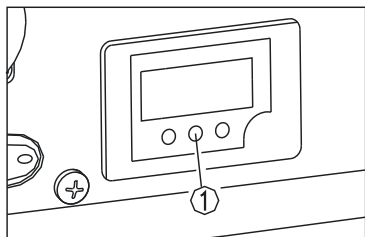

#### Overload indicator light (Red)

The overload indicator light comes on when an overload of a connected electrical device is detected, the inverter control unit overheats, or the AC output voltage rises. Then, the AC protector will trip, stopping power generation in order to protect the generator and any connected electric devices. The AC pilot light (Green) will go off and the overload indicator light (Red) will stay on, but the engine will not stop running.


When the overload indicator light comes on and power generation stops, proceed as follows:

1. Turn off any connected electric devices and stop the engine.
2. Reduce the total wattage of connected electric devices within the rated output.
3. Check for blockages in the cooling air Inlet and around the control unit. If any blockages are found remove.
4. After checking, restart the engine.

**TIP :** The overload indicator light may come on for a few seconds at first when using electric devices that require a large starting current, such as a compressor or a submersible pump. However, this is not a malfunction.

#### AC pilot light (Green)

The AC pilot light comes on when the engine starts and produces power.

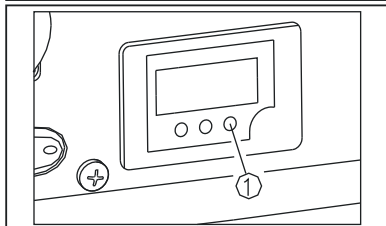


## 3

# Control Function

## Inverter Generator Owner's Manual

### FREQUENCY SELECTION

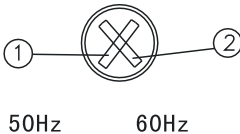

### Frequency selection (FS) switch Only for 100V product

① 50Hz

② 60Hz

If you need change the machine output frequency, please stop the generating set firstly, then adjust the position of frequency switch by screwdriver. Then restart it.

#### NOTICE

Frequency switch can change frequency only when the generator setting stops. The generator setting output frequency can't change if it operates.

### DC protector


The DC protector turns to “OFF” automatically when electric device being connected to the generator is operating and current above the rated flows. To use this equipment again, turn on DC protector by pressing its button to “ON” .

① “ON” Direct current is output.

② “OFF” Direct current is not output.

#### NOTICE

Reduce the load of the connected electric device below the specified rated output of the generator if the DC protector turns off. If the DC protector turns off again, stop using the device immediately and consult a franchised dealer.

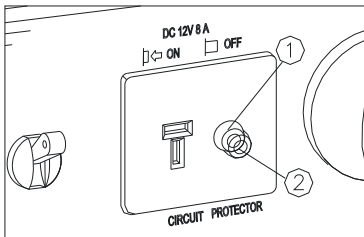




## 3


## Control Function

### Inverter Generator Owner's Manual

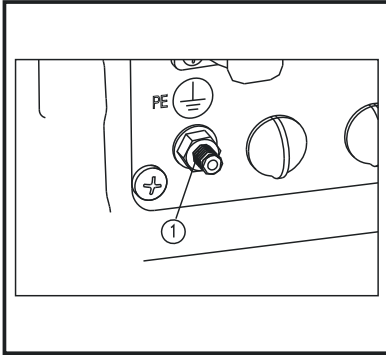

#### Ground (Earth) terminal


Ground (Earth) terminal ① connects the earth line for prevention of electric shock. When the electric device is earthed, always the generator must be earthed.

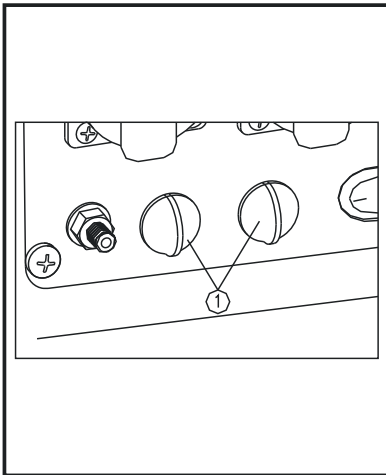

#### Parallel Operation Outlets

This is the terminal ① for connecting special cables for parallel running of two generator. The parallel running requires two generator and the special cables. (The rated output in parallel running is 5.6Kva and the rated current is 60A/100V;50A/120V;26A/230V.)

The handing, operation procedure and the notes on usage are described in the PARALLEL RUNNING KIT OWNER'S MANUAL included in the Parallel.

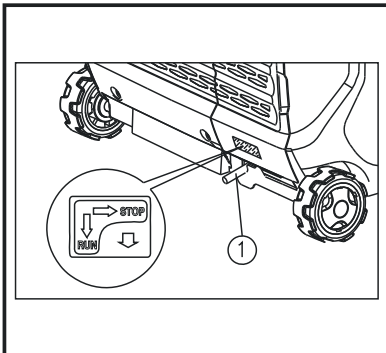

#### Brake

During the operation and idle period of machine, brake timely and switch to "STOP".

In case of the machine required to be move, switch the brake to "RUN".

## 4

# Pre-operation

## Inverter Generator Owner's Manual

## Pre-operation

### NOTICE

Pre-operation checks should be made each time operation.

### ⚠ WARNING

The engine and muffler will be very hot after the engine has been run. Avoid touching the engine and muffler while they are still hot with any part of your body or clothing during inspection or repair.

## Fuel

### ⚠ WARNING


- Fuel is highly flammable and poisonous. Check "SAFETY INFORMATION"(See page 2-5) carefully before filling.
- Do not overfill the fuel tank, otherwise it may overflow when the fuel warms up and expands. After fill the fuel, make sure the fuel tank cap is tightened securely.
- Immediately wipe off spilled fuel with a clean.
- Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts.

Make sure enough gasoline in fuel tank.

Recommended fuel: Unleaded gasoline

Fuel tank capacity: Total: 10.0L

### ① Fuel level gauge

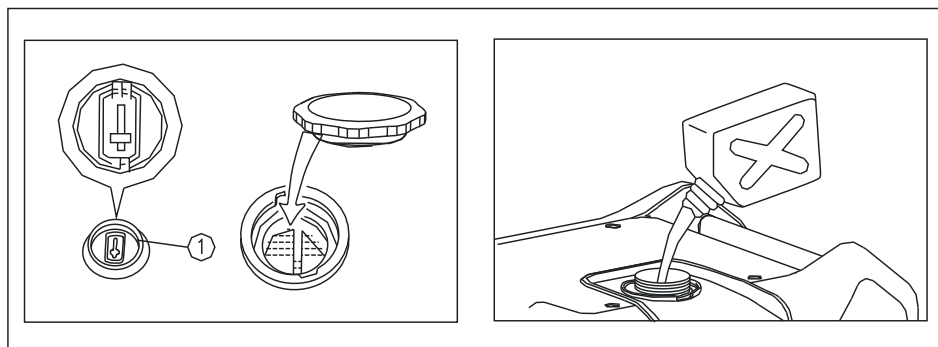


# 4

## Pre-operation Inverter Generator Owner's Manual


### Engine Oil

The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.

Do not tilt the generator when adding engine. This could result in overfilling and damage to the engine.

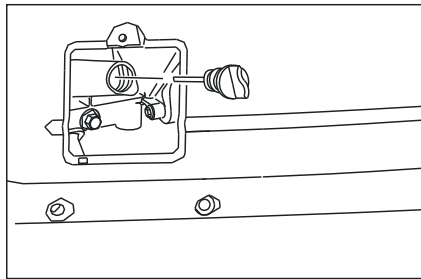

### Oil level

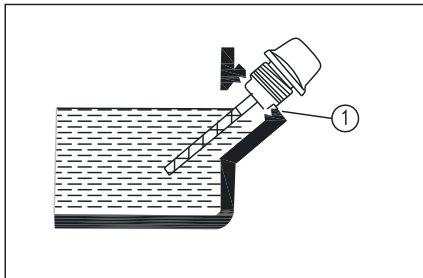

Recommended engine oil:

SAE 10W -30

Recommended engine oil grade:

API Service SE type or higher

Engine oil quantity:

0.6 L



# Operation

## Inverter Generator Owner's Manual

## Operation


### NOTICE

Never operate the engine in a closed area or it may cause unconsciousness and death within a short time. Operate the engine in a well ventilated area. The generator has been shipped without engine oil. Do not start the engine till fill with the sufficient engine oil.

### TIP:


- The generator can be used with the rated output load at standard atmospheric conditions.
- “Standard atmospheric conditions”; Ambient temperature 25℃.
- Barometric pressure 100kPa; Relative humidity 30%
- The output of the generator varies due to change temperature, altitude (lower air pressure at higher altitude) and humidity.
- The output of the generator is reduced when the temperature, the humidity and the altitude are higher than standard atmospheric conditions.
- Additionally, the load must be reduced when using in confined areas, as generator cooling is affected.

## STARTING THE ENGINE

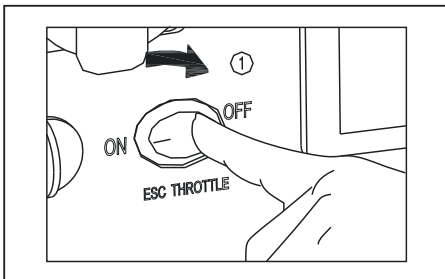

Before starting the engine, do not connect any electric devices.

Turn the ESC switch to “OFF” ①

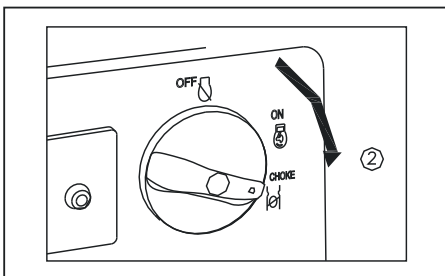

Turn the 3 in 1 switch to “CHOCK” ②


- a. Ignition circuit is switched on.
- b. Fuel is switched on.
- c. Chock is switched off.

**TIP:** The choke is not required to start a warm engine. Push the choke knob in to the position “ON”.



# Operation

## Inverter Generator Owner's Manual

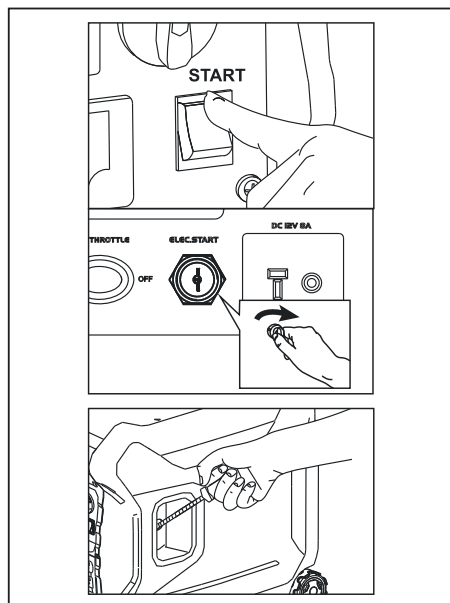


### Electric start

Turn the engine switch on the control panel to ON. And press it to START or turn key right if it's electrical start state, then generator unit can be started. In order to extend the service life of the storage battery, do not press on the switch for more than 3 seconds and the interval between two pressings should be longer than 10 seconds.

### Recoil start

Grasp the carrying handle firmly to prevent the generator from falling over when pulling the recoil starter.

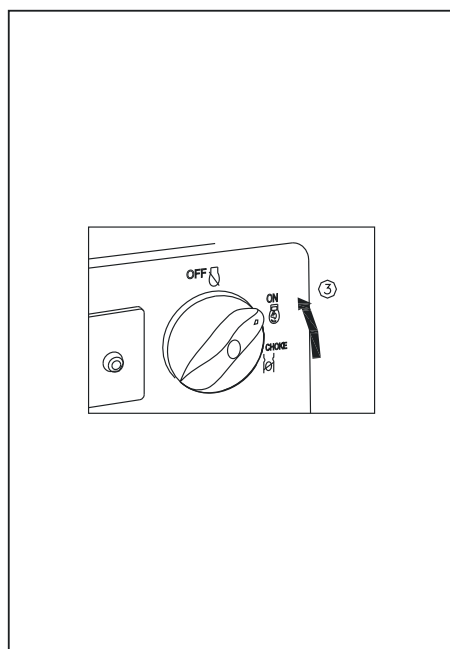

After the engine starts, warm up the engine until the engine does not stop when the choke knob is returned to the "ON" position ③.

### TIP:


When starting the engine, with the ESC "ON" and there is no load on the generator:  
In ambient temperature below 0°C (32°F), the engine will run at the rated (3600r/min) for 5 minutes to warm up the engine.  
In ambient temperature below 5°C (41°F), the engine will run at the rated r/min (3600r/min) for 3 minutes to warm up the engine.  
The ESC unit operates normally after the above time period, while the ESC is "ON".




# Operation

## Inverter Generator Owner's Manual

### STOP THE ENGINE

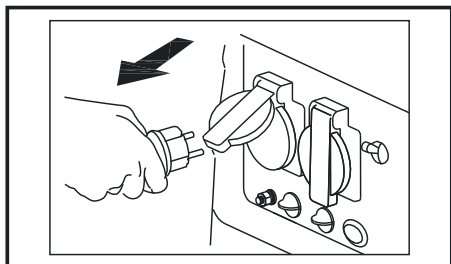


Release the load.

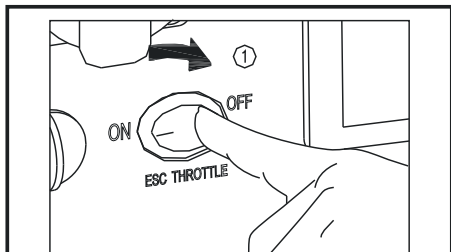

**TIP:** Turn off any electric devices.

1. Disconnect any electric devices.
2. Turn the ESC to “OFF” ①.
3. Turn the 3 in 1 switch to “OFF” ②.
  - a. Ignition circuit is switched off.
  - b. Fuel valve is switched off.

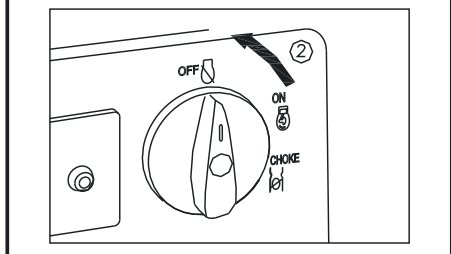



### ALTERNATING CURRENT (AC) CONNECTION

#### **⚠ WARNING**

Be sure any electric devices are turned off before plugging them in.

#### **NOTICE**

- Be sure all electric devices including the lines and plug connections are in good condition before connection to the generator.
- Be sure the total load is within generator rated output.
- Be sure the receptacle load current is within receptacle rated current.

**TIP:** Make sure to ground (Earth) the generator. When the electric device is earthed, always the generator must be earthed.

1. Start the engine.
2. Turn the ESC to "ON".
3. Plug in to AC receptacle.
4. Make sure the AC pilot light is on.
5. Turn on any electric devices.

**TIP:** The ESC must be turned to "OFF" before increasing engine speed to rated rpm.

- Most motorized appliances require more than their electrical rating for startup. When an electrical motor is started, the overload indicator (red) may come on. This is normal if the overload indicator (red) goes off within 4 seconds. If the overload indicator (red) stays on, consult your generator dealer.
- If the generator is connected to multiple loads or electricity consumers, please remember to first connect the one with the highest starting current. And last connect the one with the lowest starting current.
- If the generator is overload, or if there is a short circuit in a connected appliance, the overload indicator (red) will go ON. The overload indicator (red) will stay ON, and after about 4 seconds, current to the connected appliance(s) will shut off, and the output indicator (green) will go OFF. Stop both engines and investigate the problem. Determine if the cause is a short circuit in a connected appliance or an overload, correct the problem and restart the generator.



# Operation

## Inverter Generator Owner's Manual

### BATTERY CHARGING

#### TIP:

- The generator DC rated voltage is 12V.
- Start the engine first, and then connect the generator to the battery for charging.
- Before starting to charge the battery, make sure that the DC protector is turned on.

- 1.Start the engine.
- 2.Connect the red battery charger lead to the positive (+) battery terminal.
- 3.Connect the black battery charger lead to the negative (-) battery terminal.
- 4.Turn the ESC "OFF" to start battery charging.

#### NOTICE

- Be sure the ESC is turned off while charging the battery.
- Be sure to connect the red battery charger lead to the positive (+) battery terminal, and connect the black lead to the negative (-) battery terminal. Do not reverse these positions.
- Connect the battery charger leads to the battery terminals securely so that they are not disconnected due to engine vibration or other disturbances.
- Charge the battery in the correct procedure by following instructions in the owner's manual for the battery.
- The DC protector turns off automatically if current above the rated flows during battery haring. To restart charging the battery, turn he DC protector on by pressing its button to "ON". If the DC protector turns off again, top charging the battery immediately and consult a franchised dealer.

#### TIP:

- Follow instructions in the owner are manual for the battery to determine the end of battery charging.
- Measure the specific gravity of electrolyte to determine if the battery is fully charged. At full charge, the electrolyte specific gravity is between 1.26 and 1.28.





# Operation

## Inverter Generator Owner's Manual

- It is advisable to check the specific gravity of the electrolyte at least once every hour to prevent overcharging the battery.

### **⚠ WARNING**

- Never smoke or make and break connections at the battery while charging. Sparks may ignite the battery gas.
- Battery electrolyte is poisonous and dangerous, causing severe burns, etc. contains sulfuric (sulphuric) acid. Avoid contact with skin, eyes or clothing.

### **Antidote:**

External- Flush with water.

INTERNAL- Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil.

Call physician immediately.

EYES: Flush with water for 15 minutes and get prompt medical attention.

Batteries produce explosive gases. Keep sparks, flame, cigarettes, etc., away. Ventilate when charging or using in closed space. Always cover eyes when working near batteries.

## **KEEP OUT OF REACH OF CHILDREN**

### **AC parallel operation**

Before connection an appliance to either generator, make sure that it is in good working order and that its electrical rating does not exceed that of the receptacle.

During parallel operation, the ESC switch should be in the same position on both generators.

1. Connect the parallel operation cable between the generator to either an generator or companion generator following the instructions supplied with the cable kit.
2. Start the engines and make sure the output indicator (green) on each generator comes on.
3. Plug an appliance into the AC receptacle.
4. Turn on the appliance.



## Operation

### Inverter Generator Owner's Manual

## AC Parallel Operation Applications

### TIP:

- Make sure that it is in good working order. A faulty appliance or power cord can create a potential for electrical shock.
- If an appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn it off immediately. Disconnect the appliance and determine whether the problem is the appliance, and determine whether the problem is the appliance or the rated load capacity of the generator has been exceeded.
- Make sure that the combined electrical rating of the tools or appliance do not exceed that of the generator. Never exceed the maximum may be used for no more than 30 minutes.
- Never connect different generator models.
- Don't remove the parallel operation cable when the generator operation.
- For single generator operation, the parallel operation cable must be removed.

### WARNING




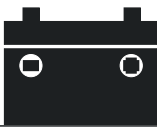
- Substantial overloading that continuously lights the overload indicator (red) may damage the generator  
Marginal overloading that temporarily light the overload indicator (red) may shorten the service life of the generator.
- For continuous operation, do not exceed the rated power.
- Rated power in parallel operation is: 6KW.

## 6

# Application Range

## Inverter Generator Owner's Manual

When using the generator, make sure the total load is within rated output of a generator. Otherwise, generator damage may occur.

AC				DC 
Power factor	1	0.8-0.95	0.4-0.75 (Efficiency 0.85)	
3500i	~3000W	~2400W	~1200W	Rated voltage 12v Rated current 8A

**TIP:**

- “~” means below.
- Application wattage indicates when each device is used by itself.
- The simultaneous usage of AC and DC power is possible but total wattage should not exceed the rated output.

**EX:**

Generator rated output		3000VA
Frequency	Power factor	
AC	1.0	~3000W
	0.8	~2400W
DC	--	96W(12V/8A)

The overload indicator light comes on when total wattage exceeds the application range. (See page 12 for more details.).

**NOTICE**

- Do not overload. The total load of all electrical appliances must not exceed the supply range of the generator. Overloading will damage the generator.
- When supplying precision equipment, electronic controllers, PCs, electronic computers, microcomputer based equipment or battery chargers, keep the generator a sufficient distance away to prevent electrical interference from the engine. Also ensure that electrical noise from the engine does not interfere with any other electrical devices located near the generator.
- If the generator is to supply medical equipment, advice should first be obtained from the manufacturer, a medical professional or hospital.
- Some electrical appliances or general-purpose electric motors have high starting currents, and cannot therefore be used, even if they lie within the supply ranges given in the above table. Consult the equipment manufacturer for further advice.

# Maintenance

## Inverter Generator Owner's Manual

## Maintenance

Safety is an obligation of the owner. Periodic inspection, adjustment and lubrication will keep your generator in the safest and most efficient condition possible. The most important points of generator inspection and lubrication are explained on the following pages.



### WARNING

If you are not familiar with maintenance work, have a franchised dealer do it for safety.

## Maintenance chart



### WARNING

Stop the engine before starting maintenance work.

Use only franchised dealer specified genuine parts for replacement. Ask an authorized franchised dealer for further attention.

Item	Routine	Pre-operation check(daily)	6 months or 100 Hr	12 months or 300 Hr
Spark plug	Check condition. Clean and replace if necessary.	○		
Fuel	Check fuel level and leakage.	○		
Fuel hose	Check fuel hose for cracks or damage, Replace if necessary.	○		
Oil	Check oil level in engine.	○		
	Replace		○ (1)	
Air filter	Check condition. Clean.		○ (2)	
Muffler screen	Check condition. Clean and replace if necessary.		○	
Spark arrester	Check condition. Clean and replace if necessary.		○	

# Maintenance

## Inverter Generator Owner's Manual




Item	Routine	Pre-operation check(daily)	6 months or 100 Hr	12 months or 300 Hr
Fuel filter	Clean and replace if necessary.			○
Crankcase breather hose	Check hose weather for cracks or damage. Replace if necessary.			○
Cylinder head	Decarbonizes cylinder head More frequently if necessary			★
Valve clearance	Check and adjust when engine is cold			★
Fittings/ fasteners	Check all fittings and fasteners. Correct if necessary.			★
The point where abnormality was recognized by use		○		

- (1) Initial replacement of the engine oil is after before one month or after 20 hours of operation.
  - (2) The air filter needs to be cleaned more frequently when using in unusually wet or dusty areas.
- ★ Since these items require tools, date and technical skills, you should find a local dealer perform the service.

# Maintenance

## Inverter Generator Owner's Manual

### SPARK PLUG INSPECTION

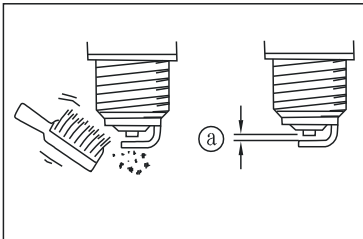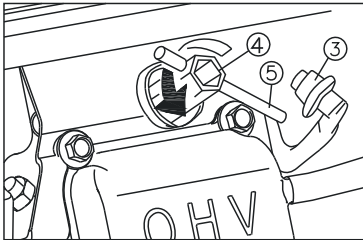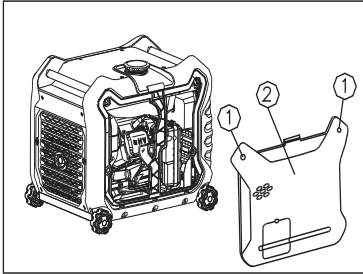

The spark plug is important engine components, which should be checked periodically.

1. Unscrew but unloosen the screw ①, and take off the left exterior cover ②.
2. Noise suppressor cap assy ③, install spark plug wrench box ④ on the spark plug appropriately.
3. Insert the handlebar ⑤ in to the tool and turn it counterclockwise to remove the spark plug.
4. Check for discoloration and remove the carbon. The porcelain insulator around the center electrode of spark plug should be a medium-to- light tan color.
5. Check the spark plug type and gap.

Standard spark plug:  
BPR6ES/BP6ES (NGK)  
F7RTC/F7TC  
Spark plug gap: 0.6-0.7mm

6. Install the spark plug.

#### TIP:

**If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4-1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.**

7. Install the spark plug cap and spark plug cover.


# Maintenance

## Inverter Generator Owner's Manual

### CARBURETOR ADJUSTMENT


The carburetor is a vital part of the engine. Adjusting should be left to a dealer with the professional knowledge, specialized date, and equipment to do so properly.

### CLEAN FUEL FILTER

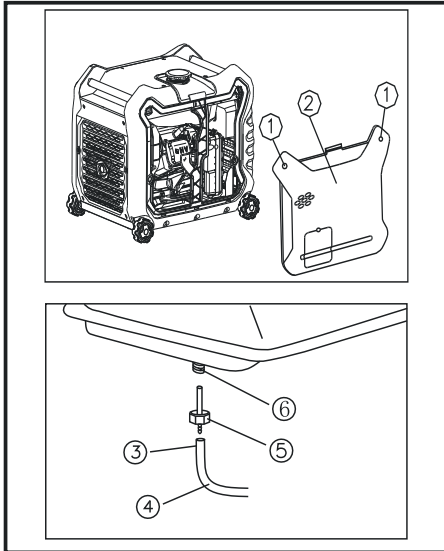

1. Unscrew but unloosen the screw ①, and take off the left exterior cover ②.
2. Drain the fuel in the fuel tank.  
Hold the tube clip ③ toward downward and pull out the fuel tube ④ which connect on the fuel tank, then disassemble fuel filter.
3. Put the fuel filter ⑤ into non-combustible or higher flash point solvent and clean it.
4. Assemble fuel filter to the main jet ⑥ on the fuel tank, then assemble fuel tube to main jet on the fuel tank and install tube clip.

### ENGINE OIL REPLACEMENT

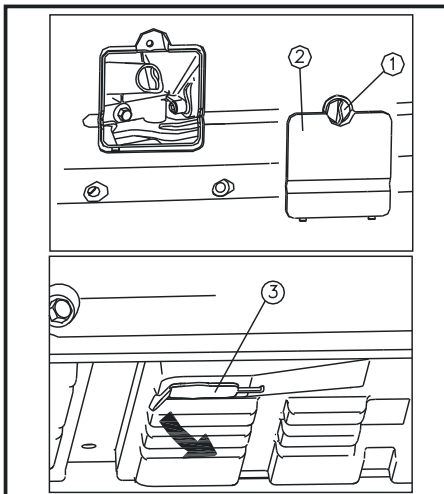


Avoid draining the engine oil immediately after stopping the engine. The oil is hot and should be handled with care to avoid burns.

1. Place the generator on a level surface and warm up the engine for several minutes.
2. Unscrew but unloosen the screw ① and take off the sight glass of engine oil ②.
3. Lift and incline the machine; take off the end cap ③ at the bottom plate of machine.
4. Remove the oil filler cap ④.

# Maintenance

## Inverter Generator Owner's Manual

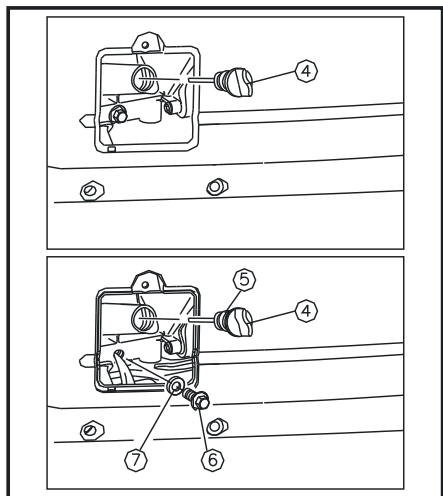


5. Place an oil pan under the engine, remove the oil drain bolt⑥, drain the oil from the oil tank.
6. Check oil filler cap④、O-ring⑤、Oil drain bolt⑥, Oil filler cap packing⑦. Replace immediately new one if it damages.
7. Assemble oil drain bolt and oil filler cap packing.
8. Add oil till to a suitable level, tighten oil filler cap.
9. Assembly the end cap at the bottom of machine .
10. Assembly the sight glass of engine oil.

### NOTICE

- Do not tilt the generator when adding engine oil. This could result in overfilling and damage to the engine. Don't make foreign body fall into engine.
- Oil and gasoline could pollute the environment, don't throw it in the trash or pour it on the ground.

## AIR FILTER

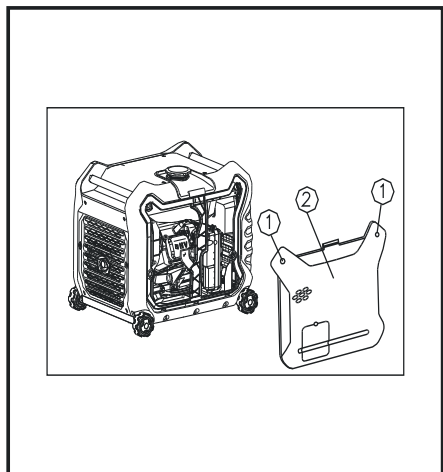


1. Unscrew but unloosen the screw ① , and take off the left exterior cover ②.
2. Remove the air filter cover and foam element③.
3. Wash the foam element in solvent and dry it..
4. Add oil for the foam element and squeeze out excess oil. The foam element should be wet but not dripping, avoid be damage.
5. Insert the foam element into the air filter case.



# Maintenance

## Inverter Generator Owner's Manual

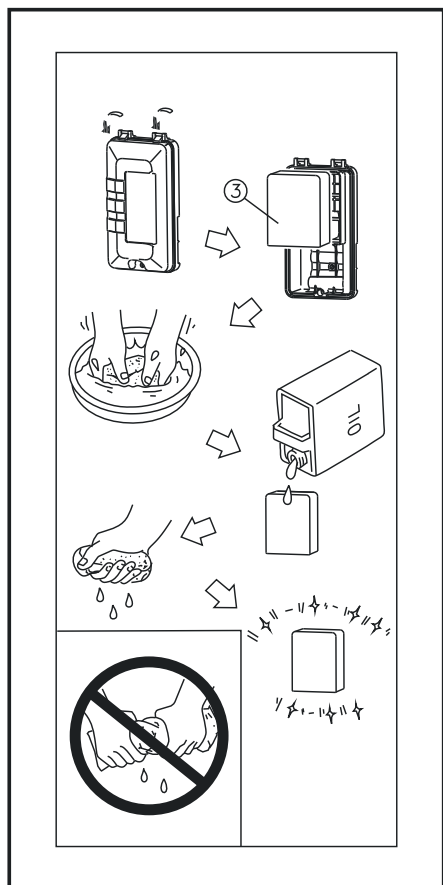

### TIP:

Be sure the foam element sealing surface matches the air filter so there is no air leak.

The engine should never run without the air filter; excessive poisonous gas will lead to piston and cylinder wear.

6. Install the air filter case cover in its original position.




## MUFFLER SCREEN

### WARNING


The engine and muffler will be very hot after the engine has been run. Avoid touching the engine and muffler while they are still hot with any part of your body or clothing during inspection or repair.

# Maintenance

## Inverter Generator Owner's Manual

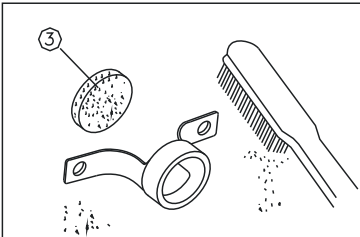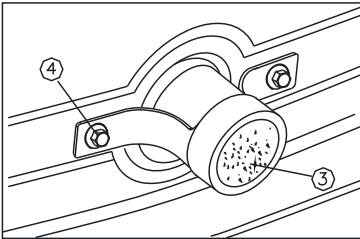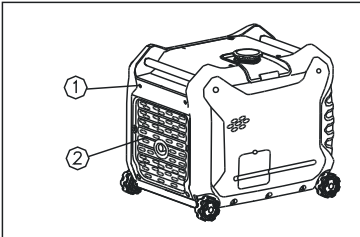

**Ordinary**

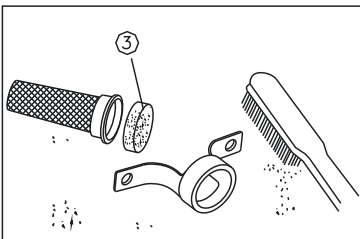

**USDA**

1. Unscrew 6 bolts ① , and take off shutter ②.
2. Remove the muffler screen ③ , and remove the bolt ④ .
3. Clean the carbon on the muffler screen by wire brush.
4. Check the muffler screen and spark arrester, replace if it damage.
5. Install spark arrester.

### **⚠ WARNING**

Never use an engine without an appropriate spark arrester in the forest areas! Doing so may cause a fire!

## 8


## Storage and Transportation

### Inverter Generator Owner's Manual

## Storage and Transportation

Long term storage of your machine will require some preventive procedures to guard against deterioration.

### DRAIN THE FUEL

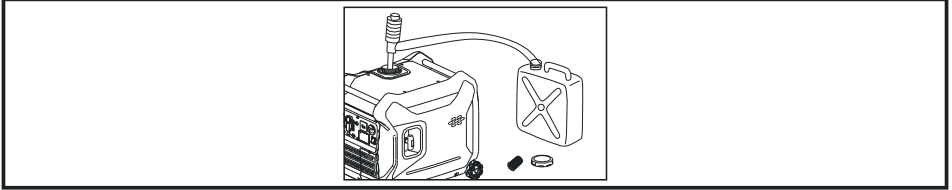

1. Turn the 3 in 1 switch to "OFF".
  2. Remove the fuel tank cap, remove the filter. Extract the fuel from the fuel tank into an approved gasoline container using a commercially available hand siphon. Then, install the fuel tank cap.
  3. Fuel is highly flammable and poisonous. Check "SAFETY INFORMATION" (See page 1) carefully immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.
  4. Start the engine and leave it run until it stops. The engine stops in approx. 20 mins. Time by running out of fuel.
- TIP:
- Do not connect with any electrical devices. (Unloaded operation).
  - Duration of the running engine depends on the amount of the fuel left in the tank.
5. Drain the fuel from the carburetor by loosening the drain screw on the carburetor float chamber.
  6. Turn the 3 in 1 switch to "OFF".
  7. Tighten the drain screw.

### ENGINE

Perform the following steps to protect the cylinder, piston ring, etc. from corrosion.

1. Remove the spark plug; pour about one table-spoon of SAE 10W-30 into the spark plug hole and reinstall the spark plug.
2. Recoil start the engine by turning over several times (with 3 in 1 switch knob off) to coat the cylinder walls with oil.
3. Pull the recoil starter until you feel compression. (This prevents the cylinder and valves from rusting).
4. Then stop pulling.
5. Clean the outside of engine and spray antirust additive.
6. Store the generator in a dry, well-ventilated place, with the cover placed over it.
7. Lay the engine vertically.

## 9

# Troubleshooting

## Inverter Generator Owner's Manual

# Troubleshooting

## ENGINE CAN'T START

### . Fuel systems

- No gasoline in the fire chamber.
- No fuel in the fuel tank...add fuel.
- Fuel in tank.
- Clogged fuel filter .... Clean fuel filter.
- Clogged carburetor.... Clean carburetor.

### . Engine oil system

- Oil level is low.... Add engine oil.

### . Electrical systems

- Put the 1 in 3 switch to “CHOKE” and pull the recoil starter...Poor spark.
- Spark plug dirty with carbon or wet.... Remove carbon or wipe spark plug dry.
- Faulty ignition system.... Consult a franchised dealer.

## GENERATOR WON'T PRODUCE POWER

- Safety device (DC protector) to “OFF”.... Press the DC protector to “ON”.
- The AC pilot light (Green) go off .... Stop the engine, and then restart.



# Parameters

## Inverter Generator Owner's Manual

## Parameters


Model No.		3500 is
Generator	Type	Inverter
	Rated frequency /Hz ※	50/60/50&60
	Rated voltage /V ※	100/120/230
	Max. output power /kW	3.3
	Rated output power /kW	3.0
	Power factor	1.0
	AC output quality	ISO8528 G2
	THD/%	≤5
	Noise Level dB/LpA/LwA/K 4m (3/4 load)	65
	DC Output/ V-A	12-8
	Overload Protect	DC Non-fuse Protector
		AC Control by inverter overload protect program
Engine	Engine	170FD-3
	Engine type	Single cylinder, 4-Stroke, forced air cooling, OHV
	Displacement/cc	212
	Fuel type	Unleaded Gasoline
	Fuel capacity/L	10
	Continue Running Time (at rated power) / h	5.5
	Oil Capacity/L	0.6
	Spark Model No.	BPR6ES/BP6ES(NGK) F7RTC/F7TC
	Starting mode	Recoil start / Electric start
Generator set	Length×Width×Height/mm	578×440×510
	Net weight/kg	45

※ Only 230V 50Hz with data meter product is GS certificated.

# Electrical Schematic Diagram

## Inverter Generator Owner's Manual

100V

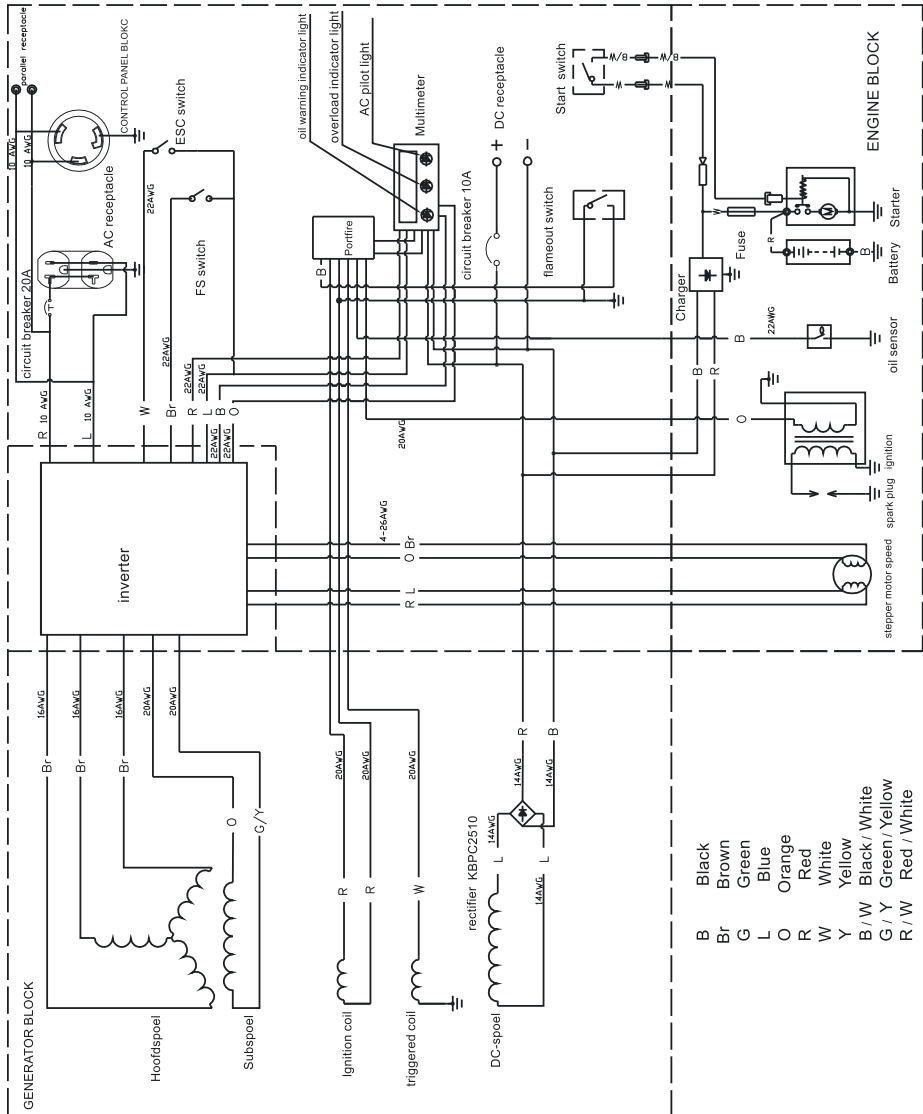

**GENERATOR BLOCK**

Hoofdspoel  
Subspoel  
Ignition coil  
triggered coil  
DC-spoel

**INVERTER**

inverter

**ENGINE BLOCK**

oil warning indicator light  
overload indicator light  
AC pilot light  
Multimeter  
circuit breaker 10A  
+ DC receptacle  
flameout switch  
Start switch  
Charger  
Fuse  
oil sensor  
Ignition  
spark plug  
stepper motor speed


**Color Code Legend:**

B	Black
Br	Brown
G	Green
L	Blue
O	Orange
R	Red
W	White
Y	Yellow
B/W	Black / White
G / Y	Green / Yellow
R / W	Red / White

# Electrical Schematic Diagram

## Inverter Generator Owner's Manual

### 120V (CSA)

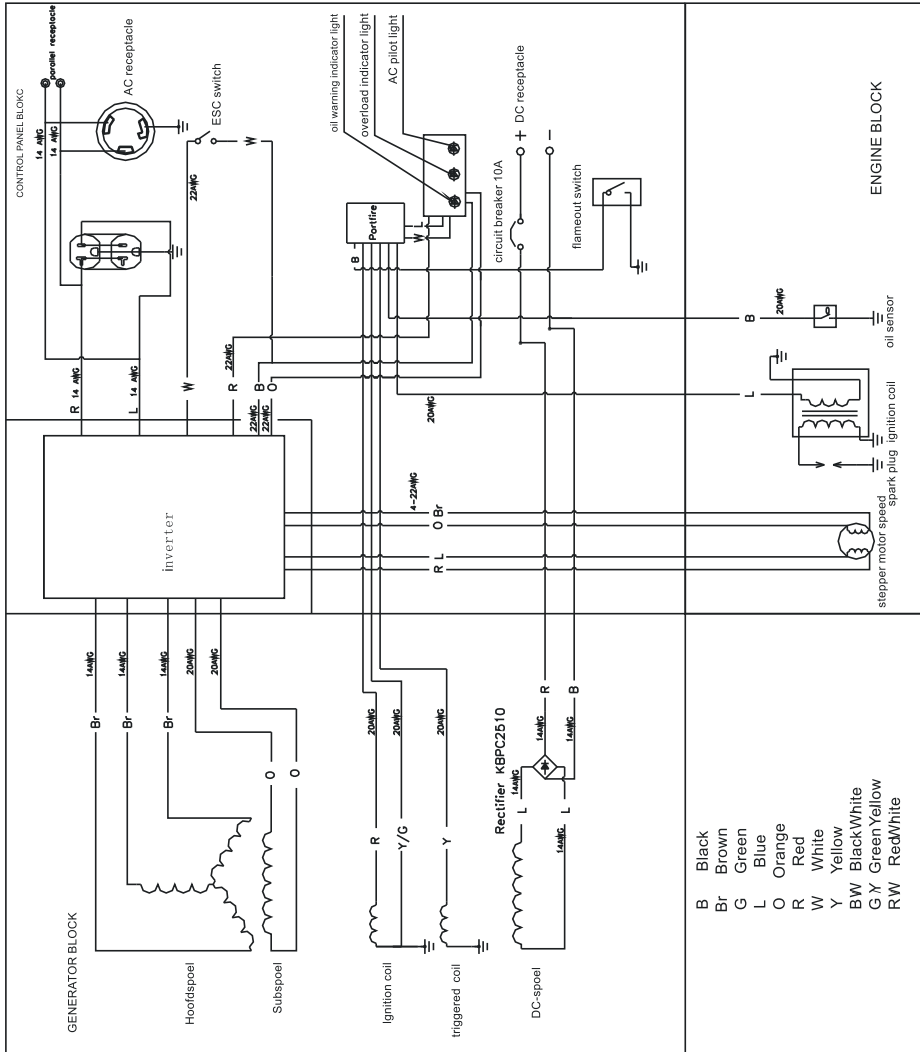





# Electrical Schematic Diagram


## Inverter Generator Owner's Manual

230V

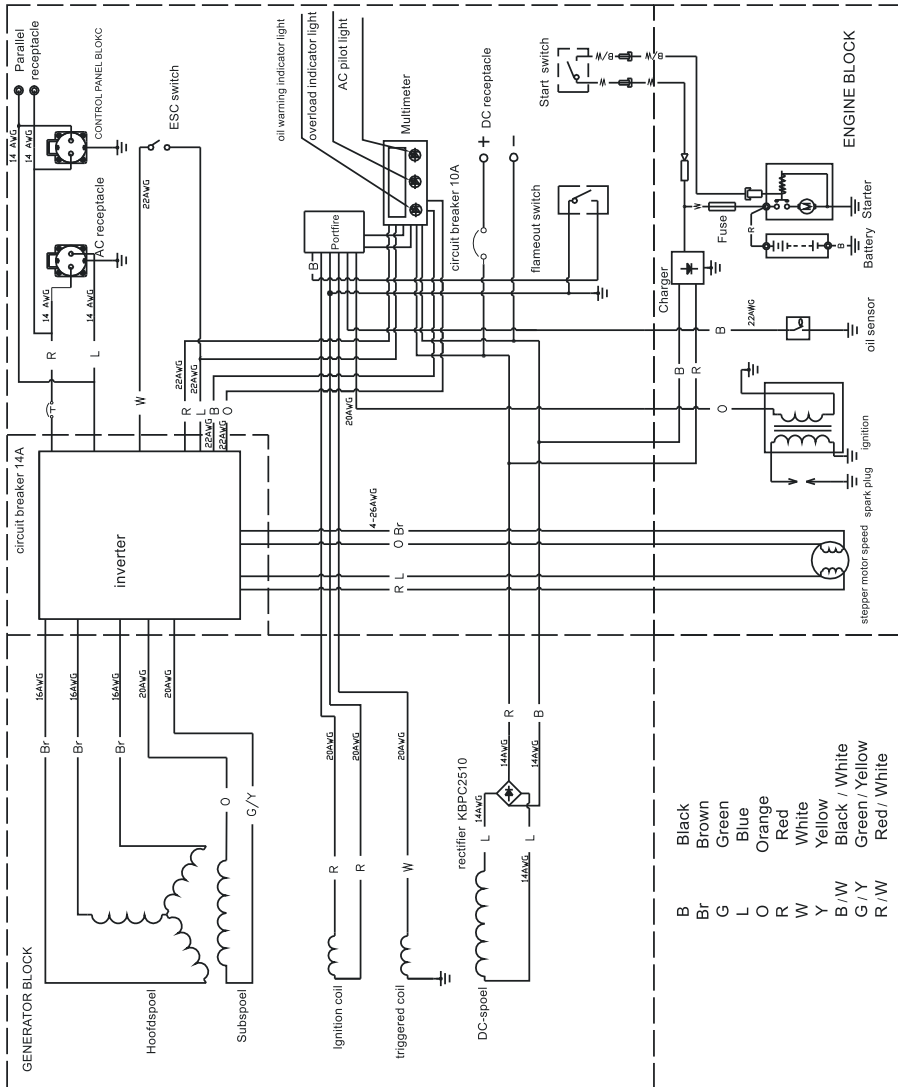


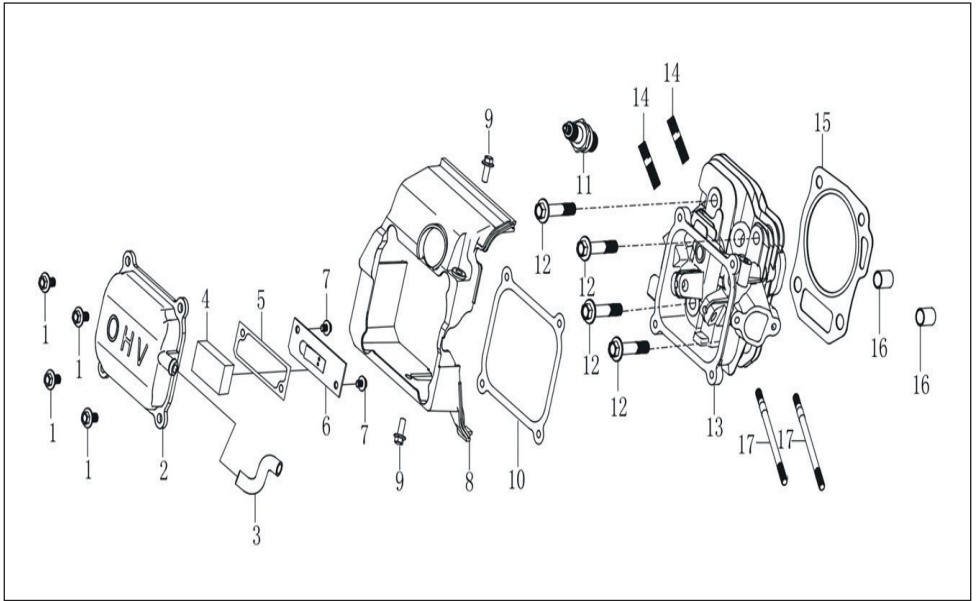

CYLINDER HEAD			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380140215	BOLT, FLANGE M6X14	4
2	GEN120230109	COVER, HEAD	1
3	GEN380741218	TUBE, BREATHER	1
4	GEN150290027	FILTER, HEAD COVER	1
5	GEN110850018	GASKET, CAP, BREATHER	1
6	GEN110840024	CAP, BREATHER CHAMBER	1
7	GEN380140429	BOLT, FLANGE M5X10	2
8	GEN160190092	SHROUD COMP	1
9	GEN380140011	BOLT, FLANGE , 6X10	2
10	GEN120250043	PACKING, HEAD COVER	1
11	GEN270960014	PLUG, SPARK F7RTC	1
12	GEN380140336	BOLT, FLANGE ,M8X60	4
13	GEN120080532	HEAD COMP .,CYLINDER	1
14	GEN380180098	BOLT, STUD, EX. M8X34	2
15	GEN120150193	GASKET, CYLINDER	1
16	GEN380600117	PIN, DOWEL	2
17	GEN380180095	BOLT, STUD, IN M6X96	2

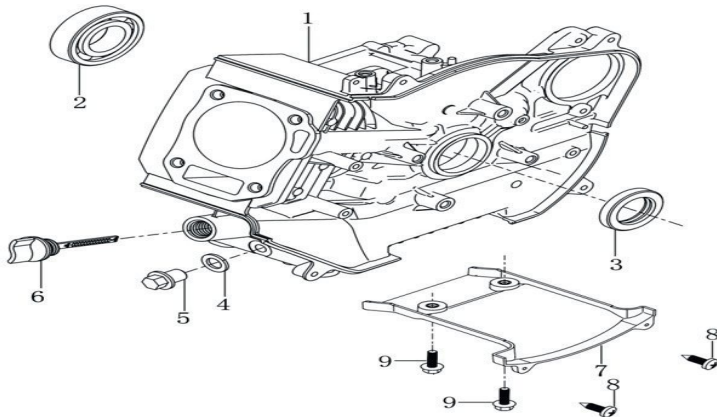


CRANKCASE			
Ser.No	P/N Maxima	Description	Quantity
1	GEN110810324	CRANK CASE	1
2	GEN380630417	BEARING 6205	1
3	GEN380650347	OIL SEAL 25×41.25×6	1
4	GEN380450514	WASHER, DRAIN PLUG 10×16×1.5	1
5	GEN110260025	BOLT, DRAIN PLUG M10×1.25×15	1
6	GEN110690073	CAP ASSY.	1
7	GEN160200054	BOTTOM, GUARD SHIELD	1
8	GEN380310135	SELF THREADING SCREW	2
9	GEN380200014	SCREW, PAN	2

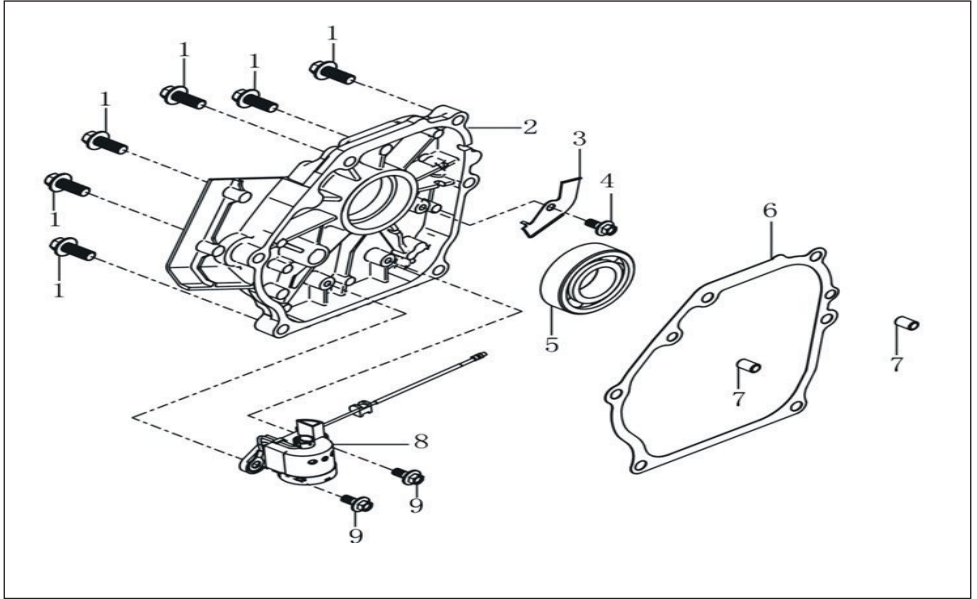


### CRANKCASE COVER

Ser.No	P/N Maxima	Description	Quantity
1	GEN380140028	BOLT, FLANGE M8×32	6
2	GEN110820122	COVER, CRANKCASE	1
3	GEN110480032	PLATE	1
4	GEN380140011	BOLT, FLANGE M6×10	1
5	GEN380630417	BEARING 6205	1
6	GEN110830031	PACKING, CASE COVER	1
7	GEN380600120	PIN, DOWEL 8×14	2
8	GEN281850341	OIL LEVEL SWITCH	1
9	GEN380140215	BOLT, FLANGE M6×14	2

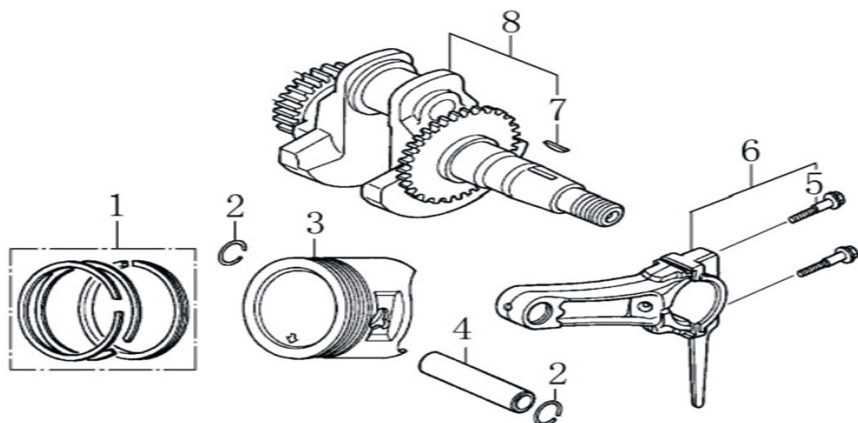


CRANKSHAFT/PISTON			
Ser.No	P/N Maxima	Description	Quantity
1	GEN130070187	RING SET	1
2	GEN380560056	CLIP, PISTON PIN	2
3	GEN130030208	PISTON	1
4	GEN130060031	PIN, PISTON	1
5	GEN130180001	BOLT, CONNECTING ROD	2
6	GEN130150054	ROD ASSY ., CONNECTING	1
7	GEN380620050	KEY	1
8	GEN130290447	CRANKSHAFT COMP	1

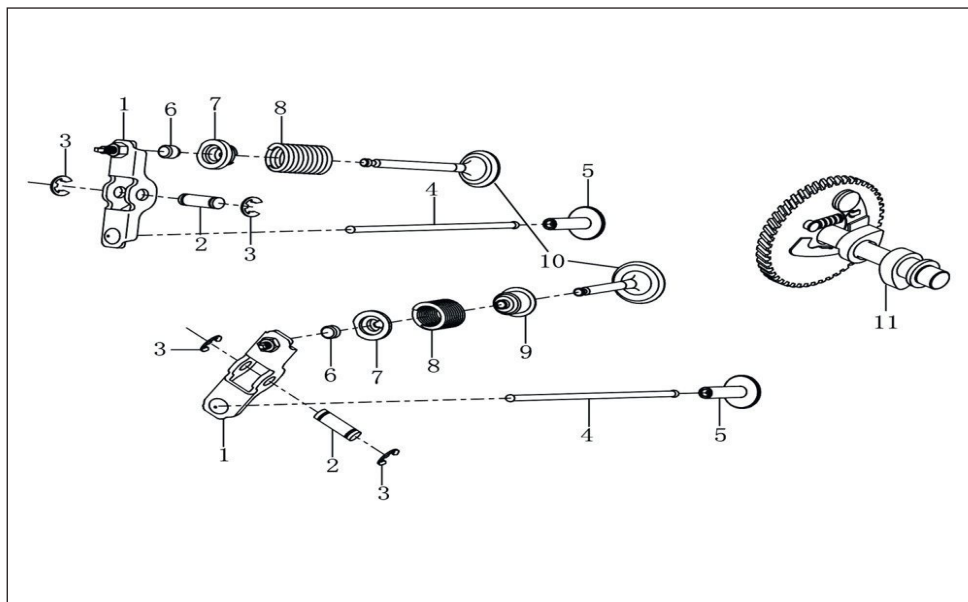


## ROCKER,CAMSHAFT

Ser.No	P/N Maxima	Description	Quantity
1	GEN140450056	ARM COMP.	2
2	GEN141730001	VALVE ROCKER SHAFT	2
3	GEN380570024	LOCKER	4
4	GEN140670041	ROD,PUSH	2
5	GEN140690003	LIFTER VALVE	2
6	GEN140320001	ROTATOR,VALVE	2
7	GEN140380017	RETAINER,VALVE SPRING	2
8	GEN140340022	SPRING , VALVE	2
9	GEN140400016	SEAL, GUIDE	1
10	GEN500550041	VALVE COMP.	1
11	GEN140020114	CAMSHAFT ASSY.	1

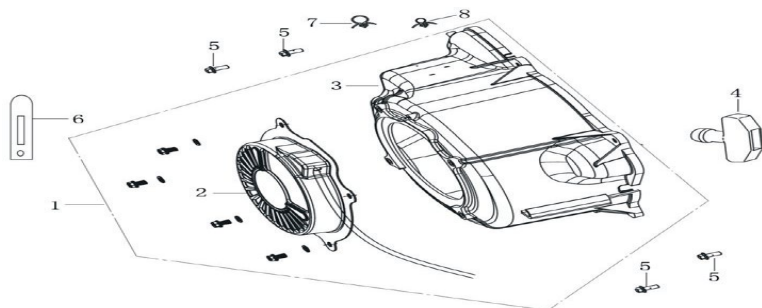


STARTER SUBASSEMBLY			
Ser.No	P/N Maxima	Description	Quantity
1	GEN160210121	COVER COMP., FAN	1
2	GEN193500146	STARTER ASSY.	1
3	GEN160530021	FAN COVER	1
4	GEN193560021	HANDLE	1
5	GEN380140002	BOLT, FLANGE M6×16	4
6	GEN380940346	CABLE CLEAT	1
7	GEN380930108	LOCATION CABLE CLIP	1
8	GEN380930024	LOCATION CABLE CLIP	1

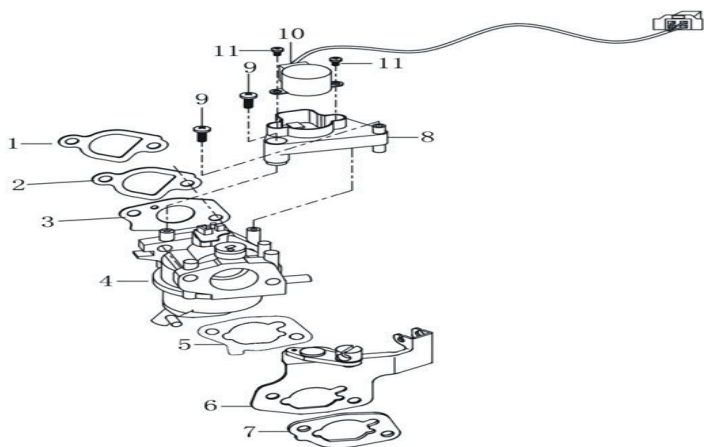


CARBURETOR			
Ser.No	P/N Maxima	Description	Quantity
1	GEN170430060	PACKING , INSULATOR	1
2	GEN170440099	INSULATOR, CARBURETOR	1
3	GEN170430048	PACKING ., CARBURETOR	1
4	GEN170021727	CARBURETOR	1
5	GEN170430140	GASKET,CARBURETOR	1
6	GEN171480028	BRACKET CHOKE	1
7	GEN170430180	SPACER COMP., AIR CLEANER	1
8	GEN660920001	BRACKET, ELECTROMOTOR	1
9	GEN380200046	SCREW, TAPPING , M4x12	2
10	GEN660910003	SPEED VARIABLE STEPPER MOTOR	1
11	GEN380200069	SCREW, M3X5	2




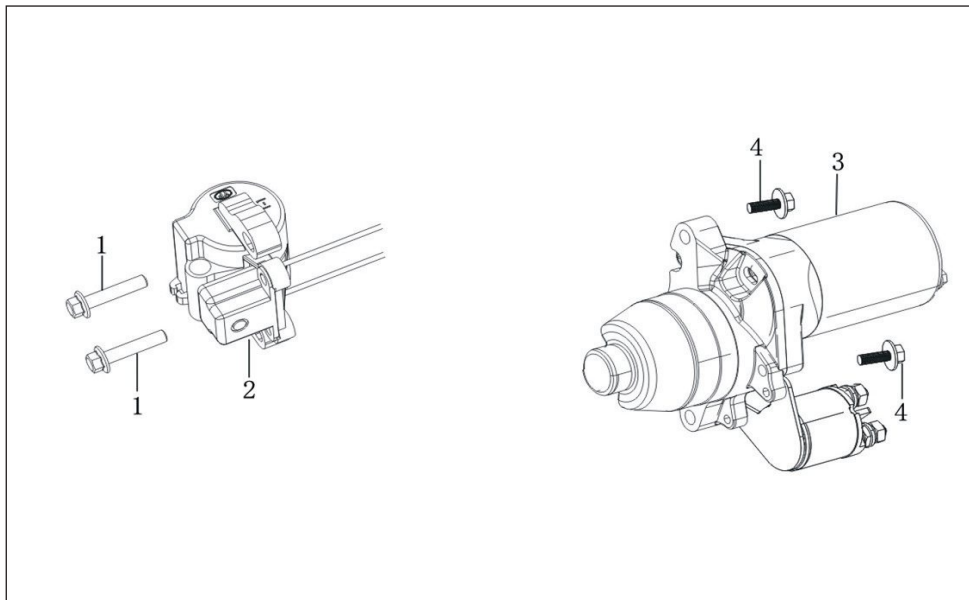


IGNITION COMP/STARTER MOTOR.			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380140102	BOLT, FLANGE M6×25	2
2	GEN270920357	COIL ASSY., IGNITION	1
3	GEN270360127	STARTER MOTOR	1
4	GEN380140001	BOLT, FLANGE M6×12	2

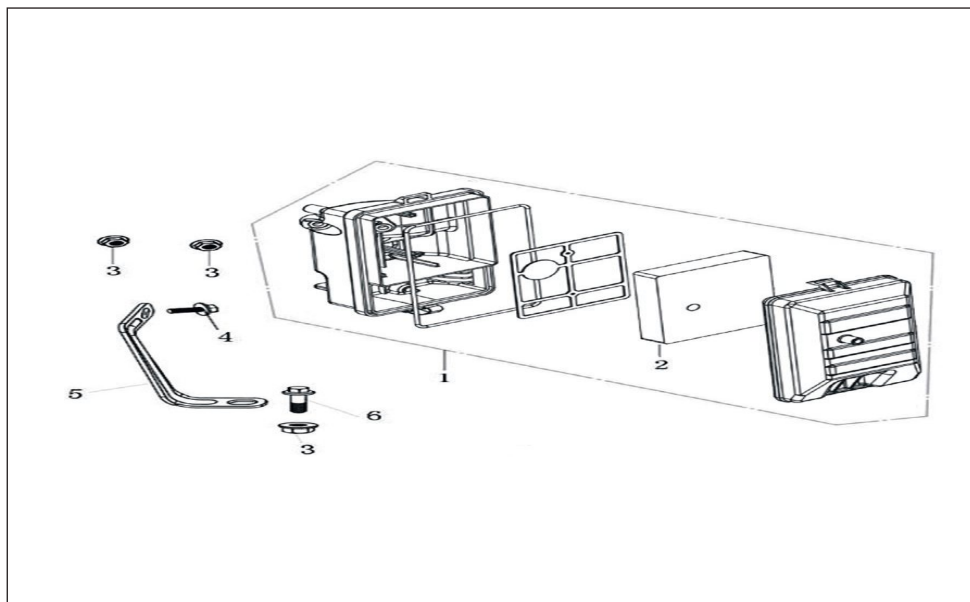


AIR CLEANER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN180020828	AIR CLEANER	1
2	GEN180130276	FILTER, OUTER	1
3	GEN380370066	NUT, FLANGE	3
4	GEN380140001	BOLT, FLANGE	1
5	GEN300710112	STAY, AIR CLEANER	1
6	GEN380140002	BOLT, FLANGE, M6x16	1

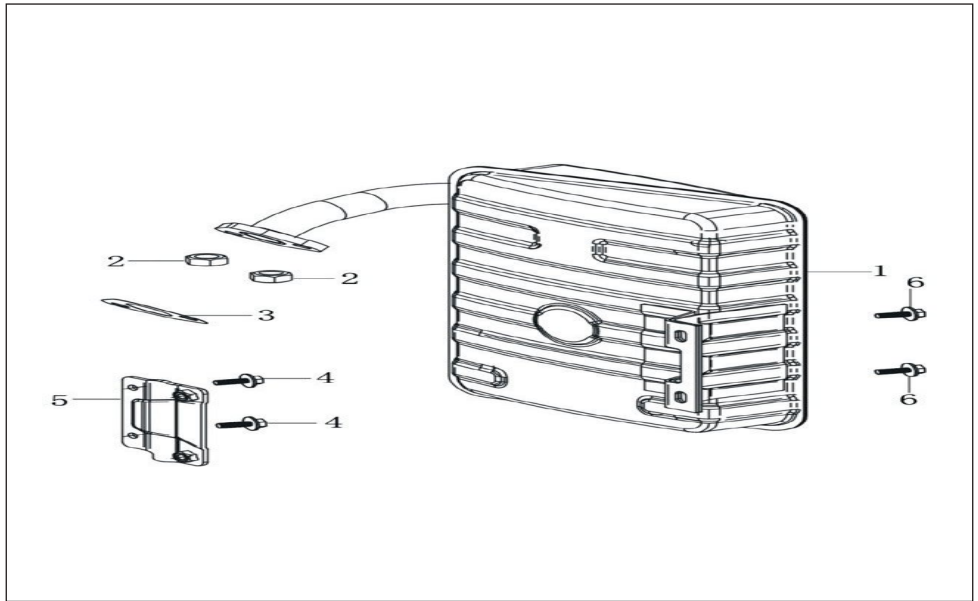

MUFFLER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN180690265	MUFFLER COMP	1
2	GEN380340005	NUT M8	2
3	GEN180650065	GASKET, MUFFLER	1
4	GEN380140001	BOLT, FLANGE M6X12	2
5	GEN180990090	MUFFLER BRACKET	1
6	GEN380140001	BOLT, FLANGE	2

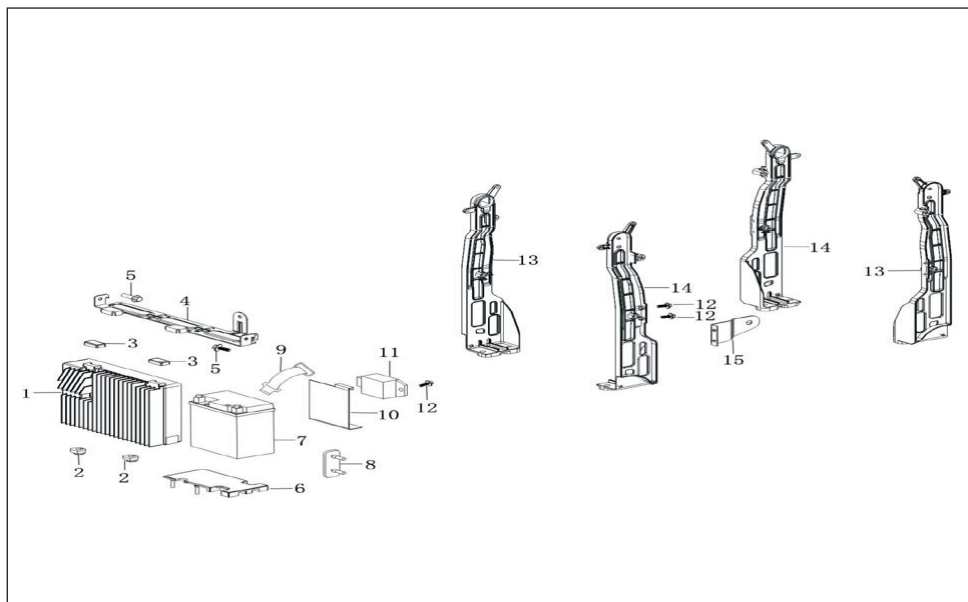


INVERTER ASSY			
Ser.No	P/N Maxima	Description	Quantity
1	GEN660900040	INVERTER ASSY.	1
2	GEN290340044	RUBBER BUFFER	2
3	GEN290340043	RUBBER BUFFER	2
4	GEN661930002	INVERTER MOUNTING BRACKET	1
5	GEN380140001	BOLT, FLANG	2
6	GEN290340041	RUBBER BUFFER	1
7	GEN271060304	STORAGE BATTERY	1
8	GEN272320066	RUBBER	1
9	GEN380900247	HOOP	1
10	GEN339170002	STORAGE BATTERY	1
11	GEN272900027	CHARGER	1
12	GEN380140167	BOLT, FLANG M5x12	3
13	GEN662470001	FRAMEWORK	2
14	GEN662470002	FRAMEWORK	2
15	GEN196970001	START ROPE BRACKET	1
16	GEN272980013	GROUND LINE	1

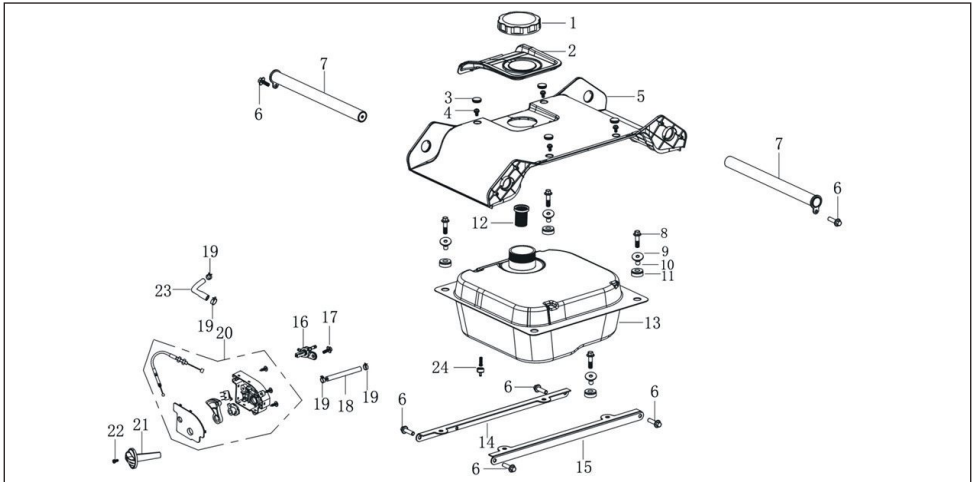


**FUEL TANK**


Ser.No	P/N Maxima	Description	Quantity
1	GEN170870136	CAP COMP., FUEL FILLER	1
2	GEN170620012	NOTE OIL GUM SET	1
3	GEN273330013	WATERPROOF	4
4	GEN380690017	PHILIPS SMALL HEAD SCREW	4
5	GEN302850007	FRAME TOP COVER	1
6	GEN380140001	BOLT, FLANGE	6
7	GEN320400051	PIPE, HANDLE	2
8	GEN380140103	BOLT, FLANGE, M6×25	4
9	GEN380450444	FLAT WASHER	4
10	GEN170710014	COLLAR, TANK CUSHION	4
11	GEN170700050	RUBBER, FUEL CUSHION	4
12	GEN170720016	FILTER, FUEL TANK	1
13	GEN170501149	TANK COMP., FUEL	1
14	GEN172840038	HOLDER, FUEL TANK (LEFT)	1
15	GEN172840039	HOLDER, FUEL TANK (RIGHT)	1
16	GEN170980110	COCK COMP., FUEL	1
17	GEN380140001	BOLT, FLANGE	1
18	GEN380750693	TUBE, FUEL	1
19	GEN380960170	LOOP,TUBE	4
20	GEN661920014	COMBINED SWITCH PARTS	1
21	GEN173260008	OIL SWITCH KNOB	1
22	GEN381210035	SCREW	1
23	GEN380750833	TUBE, FUEL	1
24	GEN170660110	JOINT ASSY., FUEL TANK	1
25	GEN380460009	ELASTIC WASHER	1

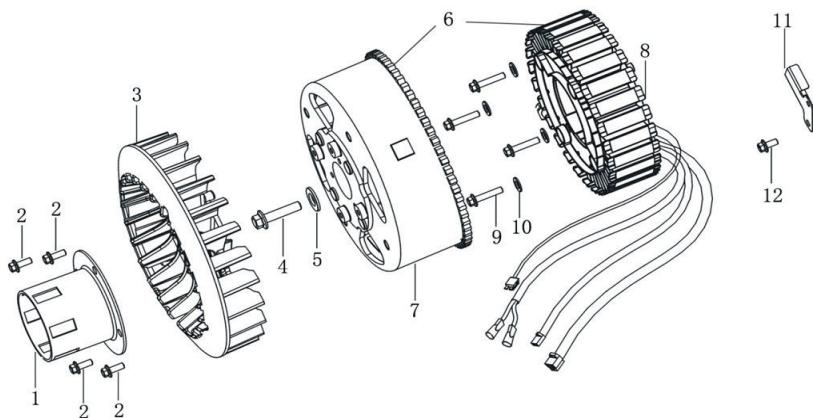

ROTOR.STATOR			
Ser.No	P/N Maxima	Description	Quantity
1	GEN193590035	PULLEY, STARTER	1
2	GEN380140002	BOLT,FLANGE M6×16	4
3	GEN660130007	MOTOR FAN	1
4	GEN380140597	BOLT, FLANGE M8×28	1
5	GEN380451024	WASHER	1
6	GEN660080455	ALTERNATOR ASSY.	1
7	GEN660110108	MOTOR ROTOR	1
8	GEN660100145	MOTOR STATOR	1
9	GEN380190221	INNER SIX ANGLE SCREW	4
10	GEN380460003	WASHER, SPRING	4
11	GEN110480030	PRESSING LINE PLATE	1
12	GEN380140011	BOLT, FLANGE	1

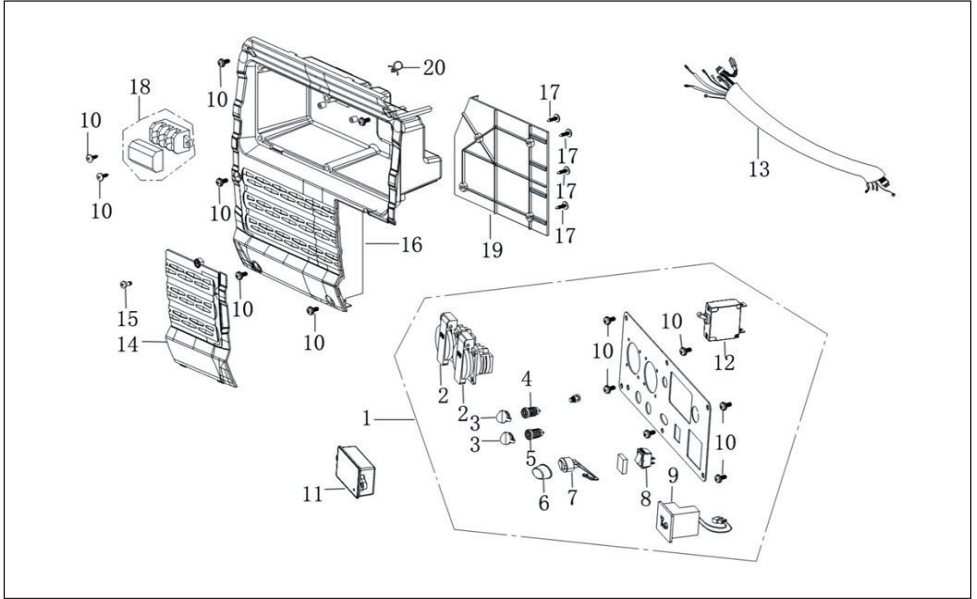


CONTROL PANEL			
Ser.No	P/N Maxima	Description	Quantity
1	GEN271851971	CONTROL PANEL ASSY	1
2	GEN271890001	POWER SOCKET COMBINATION	2
3	GEN273330006	GRID SOCKET WATERPROOF GLUE SETS	2
4	GEN381070011	GRID SOCKET (RED)	1
5	GEN381070011	GRID SOCKET (BLACK)	1
6	GEN273330005	IDLING SWITCH WATERPROOF CAP	1
7	GEN173400003	DEACTIVATION SWITCH	1
8	GEN271810035	SWITCH ASSY., COMBINATION	1
9	GEN381070010	DC SOCKET (WITH THE FLOW DEVICE)	1
10	GEN380690017	CROSS-CAP SCREWS M5X12	13
11	GEN273140003	DIGITAL DISPLAY METER	1
12	GEN271290154	PROTECTOR, CIRCUIT	1
13	GEN272040162	HARNESS ASSY.WIRE	1
14	GEN662460001	STORAGE BATTERY MAINTENANCE COVER	1
15	GEN381810002	SCREWS	1
16	GEN271970023	PANEL SEAT	1
17	GEN380310135	SELF THREADING SCREW	4
18	GEN271240004	LINE CONNECTION	1
19	GEN661890002	INVERTER WIND GUIDE	1
20	GEN380930108	LOCATION CABLE CLIP	1

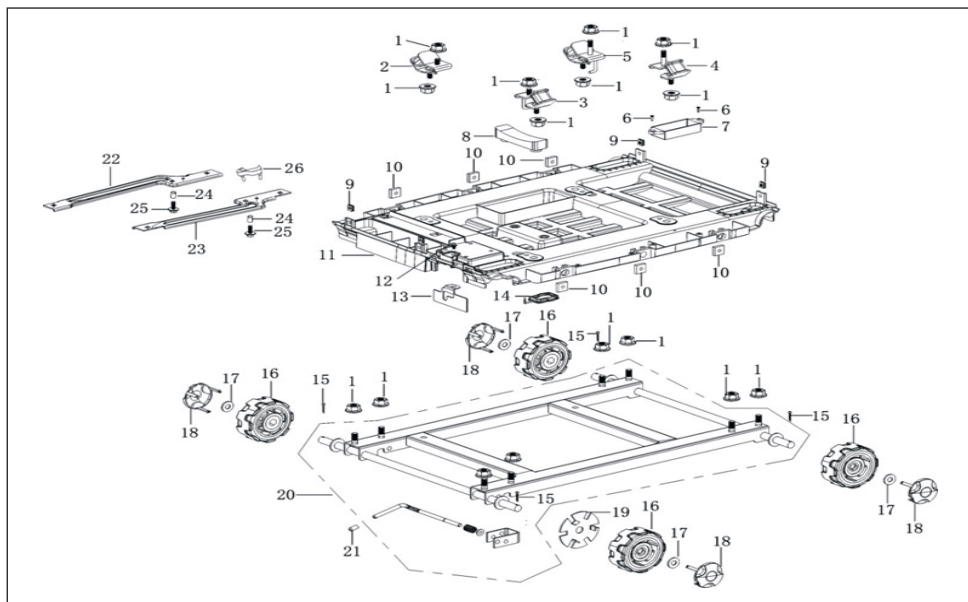

FRAME			
Ser.No	P/N Maxima	Description	Quantity
1	GEN380370007	NUT M8	16
2	GEN300780028	RUBBER, SHOCK ABSORBER	1
3	GEN300780033	RUBBER, SHOCK ABSORBER	1
4	GEN300780029	RUBBER, SHOCK ABSORBER	1
5	GEN300780032	RUBBER, SHOCK ABSORBER	1
6	GEN380310135	SELF THREADING SCREW	2
7	GEN271000233	IGNITION	1
8	GEN290340040	SHOCK ABSORPTION	1
9	GEN380420041	NUT	4
10	GEN380430031	SQUARE NUT	6
11	GEN303240005	MOTHERBOARD	1
12	GEN380140167	BOLT, FLANGE	1
13	GEN661070002	WHEEL RESTRICT	1
14	GEN381000309	BLOCK UP	1
15	GEN381350006	PIN	4
16	GEN660690040	WHEEL COMP.	4
17	GEN380450533	FLAT WASHER	4
18	GEN660720002	WHEEL AVOID DUST	4
19	GEN660760002	WHEEL RESTRICT	1
20	GEN300720456	FRAME COMP	1




21	GEN661080003	WHEEL RESTRICT	1
22	GEN341950005	ENGINE SUPPORT PLATE (LEFT)	1
23	GEN341950006	ENGINE SUPPORT PLATE (RIGHT)	1
24	GEN380600117	PIN,DOWEL	2
25	GEN380140091	BOLT, FLANGE	2
26	GEN662690001	DRAIN RUBBER	1

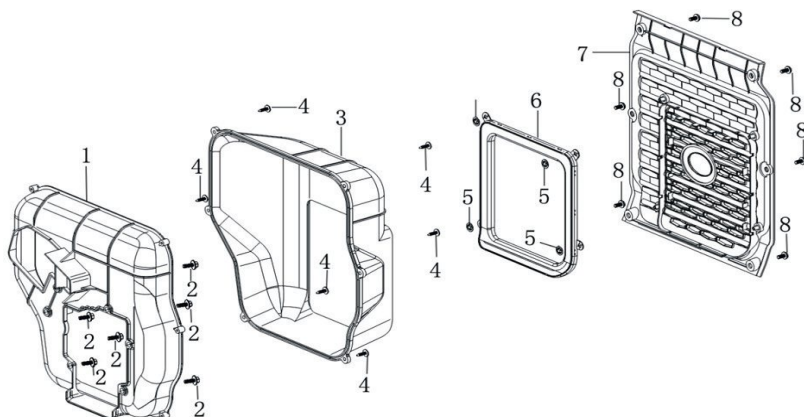

### PROTECTOR,MUFFLER

Ser.No	P/N Maxima	Description	Quantity
1	GEN180960164	MUFFLER COVER	1
2	GEN380140167	BOLT, FLANGE	6
3	GEN180960163	MUFFLER COVER	1
4	GEN380310135	SELF THREADING SCREW	6
5	GEN380490019	LOCK WASHER	4
6	GEN661880008	WIND SCOOPER	1
7	GEN661900003	SHUTTER	1
8	GEN380690017	CROSS-CAP SCREWS M5X12	6

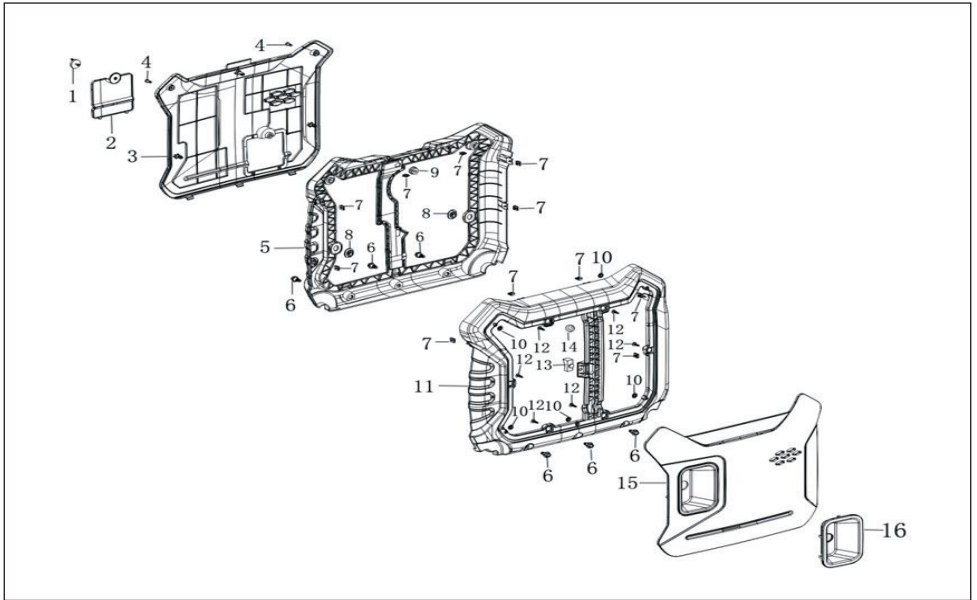

APPEARANCE COVER			
Ser.No	P/N Maxima	Description	Quantity
1	GEN662490001	SCREWS	1
2	GEN110630006	OIL EXAMINE WINDOW	1
3	GEN661860004	LEFT APPEARANCE COVER PLATE	1
4	GEN381810002	SCREWS	2
5	GEN661840003	GENERATOR COVER (Left)	1
6	GEN380100038	BOLT	6
7	GEN380420041	NUT	12
8	GEN170700132	RUBBER TANK CUSHION	2
9	GEN170700131	RUBBER TANK CUSHION	1
10	GEN380490019	LOCK WASHER	5
11	GEN661850003	GENERATOR COVER (Right)	1
12	GEN380310135	SELF THREADING SCREW	6
13	GEN290340042	RUBBER	1
14	GEN290340029	RUBBER BUFFER	1
15	GEN661870004	RIGHT APPEARANCE COVER PLATE	1
16	GEN661940004	LEASH HANDLE ADORNMENT HOOD	1
17	GEN290340046	RUBBER	1



# EC DECLARATION OF CONFORMITY


**For the following machinery:**

Product name: GENEMAX 3500 IS  
 Commercial name: GENEMAX 3500 IS  
 Function: Low-power generating set  
 Type: Gasoline  
 Model number: GENEMAX3500IS  
 Serial number: --

**is herewith confirmed to fulfill all the relevant provisions of**

- Machinery Directive (2006/42/EC)

**and the following harmonized standard have been complied with:**

- EN ISO 8528-13:2016

**is herewith confirmed to fulfill all the relevant provisions of**

- Electromagnetic Compatibility Directive (2014/30/EU)

**and the following harmonized standard have been complied with:**

- EN 61000-6-1:2007; EN 55012:2007+A1

**is herewith confirmed to fulfill all the relevant provisions of**

- Noise Emission Directive by equipment for use outdoors (2000/14/EC + 2005/88/EC)

MODEL	Measured sound power level dB(A)	Guaranteed sound power level dB(A)
GENEMAX3000IS, GENEMAX3500IS	87	88
GENEMAX7000IS	90	92
GENEMAX3500IO	95	96

**Responsible for marking this declaration is the**


Manufacture's Name : MAXIMA S.p.A.  
 Manufacturer's Address : Via G. Matteotti, 6 - 42028 Poviglio RE - Italy

**Person responsible for compiling the technical files established within the EU**

Name, Surname : MAXIMA S.p.A.  
 Address : Via G. Matteotti, 6 - 42028 Poviglio RE - Italy

**Person responsible for making this declaration**

Name, Surname : Mirco Dall'Olio  
 Position/Title : Presidente e AD  
 Place : Poviglio  
 Date : 2022-05-18

 (signature)







